

8000-SL Series

8~12-Port Managed Industrial Ethernet Switch

Web Configuration Tool Guide

Version Number: 1.0

Issue: 1.1r1, July 2024

[CONTENTS]

- 1. Introductions.....9
 - 1.1 System Description9
 - 1.2 Using the Web Interface9
 - 1.2.1 Web Browser Support.....9
 - 1.2.2 Navigation.....10
 - 1.2.3 Title Bar Icons10
 - 1.2.4 Ending a Session11
 - 1.3 Using the Online Help11
- 2. Using the Web12
 - 2.1 Login.....12
 - 2.2 Tree View.....13
 - 2.2.1 Configuration Menu.....13
 - 2.2.2 Monitor Menu14
 - 2.2.3 Diagnostics Menu15
 - 2.2.4 Maintenance Menu15
 - 2.3 Configuration16
 - 2.3.1 System.....16
 - 2.3.2 System Information16
 - 2.3.3 System IP.....17
 - 2.3.4 System NTP20
 - 2.3.5 System Time21
 - 2.3.6 System Log.....24
 - 2.3.7 System Alarm Profile25
 - 2.3.8 Green Ethernet27
 - 2.3.9 Port Power Savings27
 - 2.3.10 Port29
 - 2.3.11 DHCP32
 - 2.3.12 DHCP Server.....32
 - 2.3.13 DHCP Server Mode32
 - 2.3.14 DHCP Server Excluded IP34
 - 2.3.15 DHCP Server Pool.....35
 - 2.3.16 DHCP Snooping36
 - 2.3.17 DHCP Relay37
 - 2.3.18 Security39
 - 2.3.19 Switch.....39
 - 2.3.20 Users.....39

2.3.21	Privilege Level	41
2.3.22	Auth Method	43
2.3.23	SSH	45
2.3.24	HTTPS	46
2.3.25	Access Management	46
2.3.26	SNMP	48
2.3.27	SNMP System Configuration	48
2.3.28	SNMP Trap Configuration	50
2.3.29	SNMP Communities	54
2.3.30	SNMP Users	55
2.3.31	SNMP Groups	57
2.3.32	SNMP Views	59
2.3.33	SNMP Access	60
2.3.34	RMON	62
2.3.35	RMON Statistics	62
2.3.36	RMON History	63
2.3.37	RMON Alarm	64
2.3.38	RMON Event	66
2.3.39	Network	68
2.3.40	Limit Control	68
2.3.41	NAS	71
2.3.42	ACL	81
2.3.43	ACL Port	81
2.3.44	ACL Rate Limiters	83
2.3.45	Access Control List	85
2.3.46	IP Source Guard	96
2.3.47	IP Source Guard Configuration	96
2.3.48	IP Source Guard Static Table	98
2.3.49	ARP Inspection	99
2.3.50	Port Configuration	99
2.3.51	VLAN Configuration	101
2.3.52	Static Table	103
2.3.53	Dynamic Table	104
2.3.54	AAA	106
2.3.55	RADIUS	106
2.3.56	TACACS+	108
2.3.57	Aggregation	110
2.3.58	Static Aggregation	110
2.3.59	LACP Aggregation	112

23.60	Loop Protection	114
23.61	Spanning Tree	116
23.62	Bridge Settings	116
23.63	MSTI Mapping.....	118
23.64	MSTI Priorities.....	120
23.65	CIST Ports	122
23.66	MSTI Ports.....	125
23.67	IPMC Profile	128
23.68	Profile Table	128
23.69	Address Entry.....	130
2.3.70	MVR	132
2.3.71	IPMC.....	135
2.3.72	IGMP Snooping	135
2.3.73	Basic Configuration	135
2.3.74	VLAN Configuration	137
2.3.75	Port Filtering Profile.....	140
2.3.76	MLD Snooping.....	140
2.3.77	Basic Configuration	140
2.3.78	VLAN Configuration	140
2.3.79	Port Filtering Profile.....	140
2.3.80	LLDP	140
2.3.81	LLDP	140
2.3.82	LLDP-MED	140
2.3.83	PoE.....	140
23.84	PoE Scheduler	140
23.85	Power Reset	140
23.86	MAC Table	140
23.87	VLANs.....	140
23.88	Private VLANs.....	140
23.89	Membership.....	140
23.90	Port Isolation.....	140
2.3.91	VCL	140
23.92	MAC-based VLAN.....	140
23.93	Protocol-based VLAN	140
23.94	Protocol to Group	140
23.95	Group to VLAN	140
23.96	IP Subnet-based VLAN	140
23.97	Voice VLAN.....	140
23.98	Voice VLAN Configuration.....	140

- 2.3.99 Voice VLAN OUI..... 140
- 2.3.100 QoS..... 140
 - Port Classification 140
 - Port Policing..... 140
 - Port Scheduler 140
 - Port Shaping..... 140
 - Port Tag Remarking..... 140
 - Port DSCP 140
 - DSCP-Based QoS 140
 - DSCP Translation 140
 - DSCP Classification..... 140
 - QoS Control List 140
 - Storm Control 140
 - Mirror..... 140
 - GVRP 140
 - Global Config..... 140
 - Port Config 140
 - sFlow 140
 - RingV2..... 140
- 2.3.118 DDM..... 140
- 2.4 Monitor 140
 - 2.4.1 System..... 140
 - 2.4.2 System Information 140
 - 2.4.3 CPU Load 140
 - 2.4.4 IP Status 140
 - 2.4.5 System Log..... 140
 - 2.4.6 System Detailed Log..... 140
 - 2.4.7 System Alarm 140
 - 2.4.8 Green Ethernet 140
 - 2.4.9 Port Power Saving 140
 - 2.4.10 Ports..... 140
 - 2.4.11 Ports State 140
 - 2.4.12 Traffic Overview 140
 - 2.4.13 QoS Statistics 140
 - 2.4.14 QCL Status..... 140
 - 2.4.15 Detailed Statistics 140
 - 2.4.16 DHCP 140
 - 2.4.17 DHCP Server..... 140
 - 2.4.18 Statistics..... 140

2.4.19	Binding	140
2.4.20	Declined IP	140
2.4.21	DHCP Snooping Table.....	140
2.4.22	DHCP Relay Statistics	140
2.4.23	DHCP Detailed Statistics	140
2.4.24	Security	140
2.4.25	Accessment Management Statistics.....	140
2.4.26	Network	140
2.4.27	Port Security	140
2.4.28	Switch.....	140
2.4.29	Port	140
2.4.30	NAS.....	140
2.4.31	Switch.....	140
2.4.32	Port	140
2.4.33	ACL Status	140
2.4.34	ARP Inspection.....	140
2.4.35	IP Source Guard	140
2.4.36	AAA	140
2.4.37	RADIUS Overview.....	140
2.4.38	RADIUS Details.....	140
2.4.39	Switch.....	140
2.4.40	RMON	140
2.4.41	Statistics.....	140
2.4.42	History.....	140
2.4.43	Alarm.....	140
2.4.44	Event	140
2.4.45	LACP	140
2.4.46	System Status.....	140
2.4.47	Port Status	140
2.4.48	Port Statistics	140
2.4.49	Loop Protection	140
2.4.50	Spanning Tree	140
2.4.51	Bridge Status.....	140
2.4.52	Port Status	140
2.4.53	Port Statistics	140
2.4.54	MVR	140
2.4.55	MVR Statistics	140
2.4.56	MVR Channel Groups.....	140
2.4.57	MVR SFM Information	140

2.4.58	IPMC.....	140
2.4.59	IGMP Snooping	140
2.4.60	IGMP Snooping Status	140
2.4.61	Groups Information	140
2.4.62	IPv4 SFM Information	140
2.4.63	MLD Snooping.....	140
2.4.64	MLD Snooping Status.....	140
2.4.65	Groups Information	140
2.4.66	IPv6 SFM Information	140
2.4.67	LLDP	140
2.4.68	Neighbors.....	140
2.4.69	LLDP-MED Neighbors.....	140
2.4.70	EEE	140
2.4.71	Port Statistics	140
2.4.72	PoE.....	140
2.4.73	MAC Table	140
2.4.74	VLANs.....	140
2.4.75	VLANs Membership	140
2.4.76	VLANs Ports.....	140
2.4.77	VCL	140
2.4.78	MAC-Based VLAN.....	140
2.4.79	sFlow	140
2.4.80	RingV2.....	140
2.4.81	DDMI Overview.....	140
2.4.82	DDMI Detailed	140
2.5	Diagnostics.....	140
2.5.1	Ping	140
2.5.2	Ping6	140
2.5.3	VeriPHY	140
2.6	Maintenance.....	140
2.6.1	Restart Device	140
2.6.2	Factory Default	140
2.6.3	Software.....	140
2.6.3.1	Software Upload	140
2.6.3.2	Image select.....	140
2.6.4	Configuration	140
2.6.4.1	Save startup-config	140
2.6.4.2	Download.....	140
2.6.4.3	Upload	140

2.6.4.4	Activate	140
2.6.4.5	Delete.....	140

1.0 system description

The 8000-SL industrial Ethernet switch series offers high-quality, wide operating temperature range, extended power input range, IP-30 design, and advanced VLAN and QoS features. Suitable for harsh environments and critical task applications.

Hosted QoS 8000-SL provides enterprise level network features to meet the needs of large network infrastructure and extreme environments.

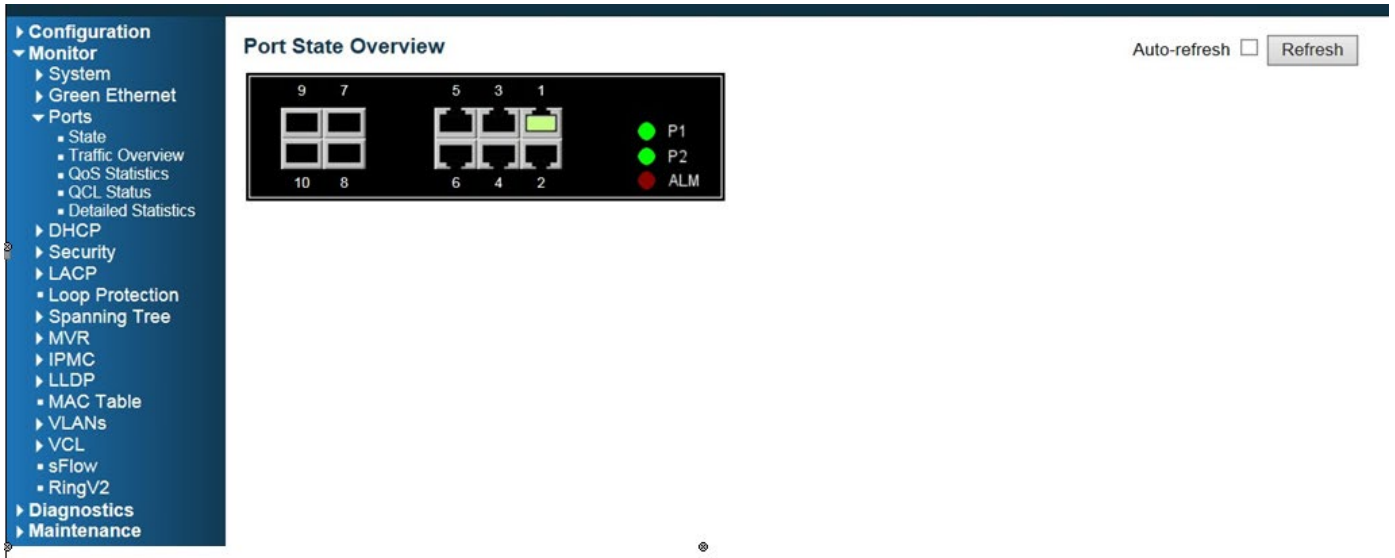
8000-SL simplifies the work of building network infrastructure, which provides reliable, well managed, and QoS networks for any business that requires continuous and well protected services in the management environment. By utilizing features such as fast failover loop protection and QoS, customers can ensure that their network meets the delivery requirements of any real-time and high-quality application.

1.1 Using Web Interface

The goal of this article's "8000-SL Web Configuration Tool Guide" is to address web features, design layouts, and describe how to use web interfaces.。

1.1.1 Navigation

- Configuration,
- Monitor
- Diagnostics
- Maintenance



Help button

For more information about any screen, please click the help button on the screen. Help information is displayed in the same window

2.1 Login

operate	Fill in username and password "Sign in"
field	description
user name	Login username, maximum length is 32 default: admin
password	The maximum length of the login user password is 32 default: admin

2.2 Tree View

树视图是web的一个菜单。它为用户提供快速获取所需数据或配置的面板。

2.2.1 Configuration Menu

- ▼ **Configuration**
 - ▶ System
 - ▶ Green Ethernet
 - Ports
 - ▶ DHCP
 - ▶ Security
 - ▶ Aggregation
 - Loop Protection
 - ▶ Spanning Tree
 - ▶ IPMC Profile
 - MVR
 - ▶ IPMC
 - ▶ LLDP
 - MAC Table
 - VLANs
 - ▶ Private VLANs
 - ▶ VCL
 - ▶ Voice VLAN
 - ▶ QoS
 - Mirroring
 - ▶ GVRP
 - sFlow
 - Ring
 - ▶ **Monitor**
 - ▶ **Diagnostics**
 - ▶ **Maintenance**

2.2.2 Monitor Menu

2.2.3 Diagnostics Menu

- ▶ Configuration
 - ▶ Monitor
 - ▼ Diagnostics
 - Ping
 - Ping6
 - VeriPHY
 - ▶ Maintenance
-
- ▼ Monitor
 - ▶ System
 - ▶ Green Ethernet
 - ▼ Ports
 - State
 - Traffic Overview
 - QoS Statistics
 - QCL Status
 - Detailed Statistics
 - ▶ DHCP
 - ▶ Security
 - ▶ LACP
 - Loop Protection
 - ▶ Spanning Tree
 - ▶ MVR
 - ▶ IPMC
 - ▶ LLDP
 - MAC Table
 - ▶ VLANs
 - ▶ VCL
 - sFlow
 - Ring
 - ▶ Diagnostics
 - ▶ Maintenance

2.2.4 Maintenance Menu

- ▶ Configuration
- ▶ Monitor
- ▶ Diagnostics
- ▼ Maintenance
 - Restart Device
 - Factory Defaults
 - ▶ Software
 - ▶ Configuration

2.3 Configuration

2.3.1 System

2.3.2 System Information



The switch system information is provided here.

System Information Configuration

System Contact	<input type="text"/>
System Name	<input type="text"/>
System Location	<input type="text"/>

Object	Description
System Contact	The textual identification of the contact person for this managed node, together with information on how to contact this person. The allowed string length is 0 to 255, and the allowed content is the ASCII characters from 32 to 126.

System Name	An administratively assigned name for this managed node. By convention, this is the node's fully-qualified domain name. A domain name is a text string drawn from the alphabet (A-Za-z), digits (0-9), minus sign (-). No space characters are permitted as part of a name. The first character must be an alpha character. And the first or last character must not be a minus sign. The allowed string length is 0 to 255.
System Location	The physical location of this node(e.g., telephone closet, 3rd floor). The allowed string length is 0 to 255, and the allowed content is the ASCII characters from 32 to 126.

Buttons	
	Click to save changes.
	Click to revert to previously saved values.

2.3.3 System IP

Configure [IP](#) basic settings, control IP interfaces and IP routes.

The maximum number of interfaces supported is 8 and the maximum number of routes is 32.

IP Configuration

Mode	Host <input type="button" value="v"/>
DNS Server	No DNS server <input type="button" value="v"/> <input style="width: 100px;" type="text"/>
DNS Proxy	<input type="checkbox"/>

IP Interfaces

Delete	VLAN	IPv4 DHCP			IPv4		IPv6	
		Enable	Fallback	Current Lease	Address	Mask Length	Address	Mask Length
<input type="checkbox"/>	1	<input type="checkbox"/>	0		172.16.100.120	24		

Default Gateway

Address
<input style="width: 100%;" type="text"/>

IP Routes

Delete	Network	Mask Length	Gateway	Next Hop VLAN
<input type="button" value="Add Route"/>				

Object	Description
IP Configuration	

Mode	Configure whether the IP stack should act as a Host or a Router . In Host mode, IP traffic between interfaces will not be routed. In Router mode traffic is routed between all interfaces.
DNS Server	<p>This setting controls the DNS name resolution done by the switch. The following modes are supported:</p> <ul style="list-style-type: none"> • From any DHCP interfaces <p>The first DNS server offered from a DHCP lease to a DHCP-enabled interface will be used.</p>
	<ul style="list-style-type: none"> • No DNS server <p>No DNS server will be used.</p> <ul style="list-style-type: none"> • Configured <p>Explicitly provide the IP address of the DNS Server in dotted decimal notation.</p> <ul style="list-style-type: none"> • From this DHCP interface <p>Specify from which DHCP-enabled interface a provided DNS server should be preferred.</p>
DNS Proxy	When DNS proxy is enabled, system will relay DNS requests to the currently configured DNS server, and reply as a DNS resolver to the client devices on the network.
IP Interfaces	
Delete	Select this option to delete an existing IP interface.
VLAN	The VLAN associated with the IP interface. Only ports in this VLAN will be able to access the IP interface. This field is only available for input when creating an new interface.
IPv4 DHCP Enabled	Enable the DHCP client by checking this box. If this option is enabled, the system will configure the IPv4 address and mask of the interface using the DHCP protocol. The DHCP client will announce the configured System Name as hostname to provide DNS lookup.

IPv4 DHCP Fallback Timeout	The number of seconds for trying to obtain a DHCP lease. After this period expires, a configured IPv4 address will be used as IPv4 interface address. A value of zero disables the fallback mechanism, such that DHCP will keep retrying until a valid lease is obtained. Legal values are 0 to 4294967295 seconds.
IPv4 DHCP Current Lease	For DHCP interfaces with an active lease, this column show the current interface address, as provided by the DHCP server.
IPv4 Address	The IPv4 address of the interface in dotted decimal notation . If DHCP is enabled, this field configures the fallback address. The field may be left blank if IPv4 operation on the interface is not desired - or no DHCP fallback address is desired.
IPv4 Mask	The IPv4 network mask, in number of bits (<i>prefix length</i>). Valid values are between 0 and 30 bits for a IPv4 address. If DHCP is enabled, this field configures the fallback address network mask. The field

	may be left blank if IPv4 operation on the interface is not desired - or no DHCP fallback address is desired.
IPv6 Address	The IPv6 address of the interface. A IPv6 address is in 128-bit records represented as eight fields of up to four hexadecimal digits with a colon separating each field (:). For example, <code>fe80::215:c5ff:fe03:4dc7</code> . The symbol <code>::</code> is a special syntax that can be used as a shorthand way of representing multiple 16-bit groups of contiguous zeros; but it can appear only once. It can also represent a legally valid IPv4 address. For example, <code>::192.1.2.34</code> . The field may be left blank if IPv6 operation on the interface is not desired.
IPv6 Mask	The IPv6 network mask, in number of bits (<i>prefix length</i>). Valid values are between 1 and 128 bits for a IPv6 address. The field may be left blank if IPv6 operation on the interface is not desired.
Default Gateway	
Address	The IP address of the gateway valid format is dotted decimal notation .
IP Routes	
Delete	Select this option to delete an existing IP route.
Network	The destination IP network or host address of this route. Valid format is dotted decimal notation or a valid IPv6 notation. A default route can use the value <code>0.0.0.0</code> or IPv6 <code>::</code> notation.
Mask Length	The destination IP network or host mask, in number of bits (<i>prefix length</i>). It defines how much of a network address that must match, in order to qualify for this route. Valid values are between 0 and 32 bits respectively 128 for IPv6 routes. Only a default route will have a mask length of <code>0</code> (as it will match anything).
Gateway	The IP address of the IP gateway. Valid format is dotted decimal notation or a valid IPv6 notation. Gateway and Network must be of the same type.

Next Hop VLAN(Only for IPv6)	<p>The VLAN ID (VID) of the specific IPv6 interface associated with the gateway.</p> <p>The given VID ranges from 1 to 4094 and will be effective only when the corresponding IPv6 interface is valid.</p> <p>If the IPv6 gateway address is link-local, it must specify the next hop VLAN for the gateway.</p> <p>If the IPv6 gateway address is not link-local, system ignores the next hop VLAN for the gateway.</p>
-------------------------------------	---

Buttons	
<input type="button" value="Add Interface"/>	Click to add a new IP interface. A maximum of 8 interfaces is supported.
<input type="button" value="Set Default Gateway"/>	Click to save changes.
<input type="button" value="Add Route"/>	Click to add a new IP route. A maximum of 32 routes is supported.
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to revert to previously saved values.

2.3.4 System NTP



Configure NTP on this page.

NTP Configuration

Mode	Disabled <input type="button" value="v"/>
Server 1	<input type="text"/>
Server 2	<input type="text"/>
Server 3	<input type="text"/>
Server 4	<input type="text"/>
Server 5	<input type="text"/>

Object	Description
--------	-------------

Mode	<p>Indicates the NTP mode operation. Possible modes are:</p> <p>Enabled: Enable NTP client mode operation.</p> <p>Disabled: Disable NTP client mode operation.</p>
Server #	<p>Provide the IPv4 or IPv6 address of a NTP server. IPv6 address is in 128-bit records represented as eight fields of up to four hexadecimal digits with a colon separating each field (:). For example, 'fe80::215:c5ff:fe03:4dc7'. The symbol '::' is a special syntax that can be used as a shorthand way of representing multiple 16-bit groups of contiguous zeros; but it can appear only once. It can also represent a legally valid IPv4 address. For example, ':::192.1.2.34'.</p>

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.5 System Time

This page allows you to configure the Time Zone

Time Zone Configuration

Time Zone Configuration	
Time Zone	None ▼
Acronym	<input type="text"/> (0 - 16 characters)

Daylight Saving Time Configuration

Daylight Saving Time Mode	
Daylight Saving Time	Disabled ▼

Start Time settings	
Month	Jan ▼
Date	1 ▼
Year	2000 ▼
Hours	0 ▼
Minutes	0 ▼
End Time settings	
Month	Jan ▼
Date	1 ▼
Year	2000 ▼
Hours	0 ▼
Minutes	0 ▼
Offset settings	
Offset	1 <input type="text"/> (1 - 1440) Minutes



Date/Time Configuration

Date/Time settings	
Year	2000 <input type="text"/> (2000 - 2037)
Month	Jan ▼
Date	1 ▼
Hours	20 ▼
Minutes	33 ▼
Seconds	25 ▼

Object	Description
Time Zone Configuration	

Time Zone	Lists various Time Zones worldwide. Select appropriate Time Zone from the drop down and click Save to set.
Acronym	User can set the acronym of the time zone. This is a User configurable acronym to identify the time zone. (Range : Up to 16 characters)
Daylight Saving Time Configuration	
Daylight Saving Time	This is used to set the clock forward or backward according to the configurations set below for a defined Daylight Saving Time duration. Select 'Disable' to disable the Daylight Saving Time configuration. Select 'Recurring' and configure the Daylight Saving Time duration to repeat the configuration every year. Select 'Non-Recurring' and configure the Daylight Saving Time duration for single time configuration. (Default : Disabled)
Recurring Configurations	
Start time settings	
Week	Select the starting week number.
Day	Select the starting day.
Month	Select the starting month.
Hours	Select the starting hour.
Minutes	Select the starting minute
End time settings	
Week	Select the ending week number.
Day	Select the ending day.
Month	Select the ending month.
Hours	Select the ending hour.
Minutes	Select the ending minute
Offset settings	
Offset	Enter the number of minutes to add during Daylight Saving Time. (Range: 1 to 1440)
Non Recurring Configurations	
Start time settings	
Month	Select the starting month.
Date	Select the starting date.
Year	Select the starting year.
Hours	Select the starting hour.
Minutes	Select the starting minute
End time settings	
Month	Select the ending month.
Date	Select the ending date.
Year	Select the ending year.
Hours	Select the ending hour.

Minutes	Select the ending minute
Offset settings	
Offset	Enter the number of minutes to add during Daylight Saving Time. (Range: 1 to 1440)
Date/Time Configuration	
Date/Time Settings	
Year	Year of current datetime. (Range: 2000 to 2037)
Month	Month of current datetime.
Date	Date of current datetime.
Hours	Hour of current datetime.
Minutes	Minute of current datetime.
Seconds	Second of current datetime.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.6 System Log



Configure System Log on this page.

System Log Configuration

Server Mode	Disabled ▼
Server Address	<input style="width: 90%;" type="text"/>
Syslog Level	Info ▼

Object	Description
Server Mode	Indicates the server mode operation. When the mode operation is enabled, the syslog message will send out to syslog server. The syslog protocol is based on UDP

	<p>communication and received on UDP port 514 and the syslog server will not send acknowledgments back sender since UDP is a connectionless protocol and it does not provide acknowledgments. The syslog packet will always send out even if the syslog server does not exist. Possible modes are:</p> <p>Enabled: Enable server mode operation.</p> <p>Disabled: Disable server mode operation.</p>
Server Address	<p>Indicates the IPv4 host address of syslog server. If the switch provide DNS feature, it also can be a host name.</p>
Syslog Level	<p>Indicates what kind of message will send to syslog server. Possible modes are:</p> <p>Info: Send informations, warnings and errors.</p> <p>Warning: Send warnings and errors.</p> <p>Error: Send errors.</p>



Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.7 System Alarm Profile

Alarm Profile is provided here to enable/disable alarm

DSS

Object	Description
ID	The identification of the Alarm Profile entry.
Description	Alarm Type Description.
Enabled	<p>If alarm entry is Enabled, then alarm will be shown in alarm history/current when it occurs.</p> <p>Alarm LED will be on (lighted), Alarm Relay also be enabled.</p> <p>SNMP trap will be sent if any SNMP trap entry exists and enabled.</p>
Disabled	<p>If alarm entry is Disabled, then alarm will not be captured/shown in alarm history/current when alarm occurs;</p> <p>then it will not trigger the Alarm LED change, Alarm Relay and SNMP trap either.</p>
<p>Note: When any alarm exists, the Alarm LED will be on (lighted), Alarm Output Relay will also be enabled.</p>	

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

Alarm Profile

ID	Description	Enabled
* *		<input type="checkbox"/>
1	Port 1 Link Down	<input type="checkbox"/>
2	Port 2 Link Down	<input type="checkbox"/>
3	Port 3 Link Down	<input type="checkbox"/>
4	Port 4 Link Down	<input type="checkbox"/>
5	Port 5 Link Down	<input type="checkbox"/>
6	Port 6 Link Down	<input type="checkbox"/>
7	Port 7 Link Down	<input type="checkbox"/>
8	Port 8 Link Down	<input type="checkbox"/>
9	Port 9 Link Down	<input type="checkbox"/>
10	Port 10 Link Down	<input type="checkbox"/>
11	Power Alarm	<input type="checkbox"/>

2.3.8 Green Ethernet

2.3.9 Port Power Savings

This page allows the user to configure the port power savings features.

Port Power Savings Configuration

Optimize EEE for Latency ▼



Port Configuration

				EEE Urgent Queues							
Port	ActiPHY	PerfectReach	EEE	1	2	3	4	5	6	7	8
*	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Save
Reset

Object	Description
Port Power Savings Configuration	
Optimize EEE for	The switch can be set to optimize EEE for either best power saving or least traffic latency.
Port Configuration	
Port	The switch port number of the logical port.

ActiPHY	<p>Link down power savings enabled.</p> <p>ActiPHY works by lowering the power for a port when there is no link. The port is power up for short moment in order to determine if cable is inserted.</p>
PerfectReach	<p>Cable length power savings enabled.</p> <p>PerfectReach works by determining the cable length and lowering the power for ports with short cables.</p>
EEE	<p>Controls whether EEE is enabled for this switch port.</p> <p>For maximizing power savings, the circuit isn't started at once transmit data is ready for a port, but is instead queued until a burst of data is ready to be transmitted. This will give some traffic latency.</p> <p>If desired it is possible to minimize the latency for specific frames, by mapping the frames to a specific queue (done with QOS), and then mark the queue as an urgent queue. When an urgent queue gets data to be transmitted, the circuits will be powered up at once and the latency will be reduced to the wakeup time.</p>
EEE Urgent Queues	<p>Queues set will activate transmission of frames as soon as data is available.</p> <p>Otherwise the queue will postpone transmission until a burst of frames can be transmitted.</p>

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.10 Port

This page displays current port configurations. Ports can also be configured here.

Port Configuration								
Port	Link	Speed		Flow Control			Maximum Frame Size	Excessive Collision Mode
		Current	Configured	Current Rx	Current Tx	Configured		
*			<> ▾			<input type="checkbox"/>	9600	<> ▾
1	Down		Auto ▾	✗	✗	<input type="checkbox"/>	9600	Discard ▾
2	100fdx		Auto ▾	✗	✗	<input type="checkbox"/>	9600	Discard ▾
3	Down		Auto ▾	✗	✗	<input type="checkbox"/>	9600	Discard ▾
4	Down		Auto ▾	✗	✗	<input type="checkbox"/>	9600	Discard ▾
5	Down		Auto ▾	✗	✗	<input type="checkbox"/>	9600	Discard ▾
6	Down		Auto ▾	✗	✗	<input type="checkbox"/>	9600	Discard ▾
7	Down		Auto ▾	✗	✗	<input type="checkbox"/>	9600	
8	Down		Auto ▾	✗	✗	<input type="checkbox"/>	9600	
9	Down		Auto ▾	✗	✗	<input type="checkbox"/>	9600	
10	Down		Auto ▾	✗	✗	<input type="checkbox"/>	9600	

Save Reset

Object	Description
Port	This is the logical port number for this row.
Link	The current link state is displayed graphically. Green indicates the link is up and red that it is down.
Current Link Speed	Provides the current link speed of the port.
Configured Link Speed	<p>Selects any available link speed for the given switch port. Only speeds supported by the specific port is shown. Possible speeds are:</p> <ul style="list-style-type: none"> Disabled - Disables the switch port operation. Auto - Port auto negotiating speed with the link partner and selects the highest speed that is compatible with the link partner. 10Mbps HDX - Forces the cu port in 10Mbps half duplex mode. 10Mbps FDX - Forces the cu port in 10Mbps full duplex mode. 100Mbps HDX - Forces the cu port in 100Mbps half duplex mode. 100Mbps FDX - Forces the cu port in 100Mbps full duplex mode. 1Gbps FDX - Forces the port in 1Gbps full duplex .
Flow Control	<p>When Auto Speed is selected on a port, this section indicates the flow control capability that is advertised to the link partner.</p> <p>When a fixed-speed setting is selected, that is what is used. The Current Rx column indicates whether pause frames on the port are obeyed, and the Current Tx column indicates whether pause frames on the port are transmitted. The Rx and Tx settings are determined by the result of the last Auto-Negotiation.</p> <p>Check the configured column to use flow control. This setting is related to the setting for Configured Link Speed.</p>
Maximum Frame Size	Enter the maximum frame size allowed for the switch port, including FCS.

Excessive Collision Mode	Configure port transmit collision behavior. Discard: Discard frame after 16 collisions (default). Restart: Restart backoff algorithm after 16 collisions.
---------------------------------	---

Buttons	
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.
<input type="button" value="Refresh"/>	Click to refresh the page. Any changes made locally will be undone.

2.3.11 DHCP

2.3.12 DHCP Server

2.3.13 DHCP Server Mode

This page configures global mode and VLAN mode to enable/disable DHCP server per system and per VLAN.

DHCP Server Mode Configuration

Global Mode





Mode ▾

VLAN Mode

Delete	VLAN Range	Mode
Delete	<input style="width: 40px;" type="text"/> - <input style="width: 40px;" type="text"/>	Enabled ▾

Object	Description
Global Mode	
Mode	Configure the operation mode per system. Possible modes are: Enabled: Enable DHCP server per system. Disabled: Disable DHCP server per system.
VLAN Mode	
VLAN Range	Indicate the VLAN range in which DHCP server is enabled or disabled. The first VLAN ID must be smaller than or equal to the second VLAN ID. BUT, if the VLAN range contains only 1 VLAN ID, then you can just input it into either one of the first and second VLAN ID or both. On the other hand, if you want to disable existed VLAN range, then you can follow the

	<p>steps.</p> <ol style="list-style-type: none"> 1. press to add a new VLAN range. 2. input the VLAN range that you want to disable. 3. choose Mode to be Disabled. 4. press to apply the change. <p>Then, you will see the disabled VLAN range is removed from the DHCP Server mode configuration page.</p>
Mode	Indicate the the operation mode per VLAN. Possible modes are: Enabled: Enable DHCP server per VLAN. Disabled: Disable DHCP server pre VLAN.

Buttons	
	Click to delete the setting.
	Click to add a new VLAN range.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.14 DHCP Server Excluded IP

This page configures excluded IP addresses. DHCP server will not allocate these excluded IP addresses to DHCP client.

DHCP Server Excluded IP Configuration

Excluded IP Address

Delete	IP Range
Delete	<input style="width: 80%; height: 20px;" type="text"/> - <input style="width: 20%; height: 20px;" type="text"/>

Object	Description
IP Range	Define the IP range to be excluded IP addresses. The first excluded IP must be smaller than or equal to the second excluded IP. BUT, if the IP range contains only 1 excluded IP, then you can just input it to either one of the first and second excluded IP or both.

Buttons	
<input style="width: 80px; height: 25px;" type="button" value="Delete"/>	Click to delete the setting.
<input style="width: 120px; height: 25px;" type="button" value="Add IP Range"/>	Click to add a new excluded IP range.
<input style="width: 60px; height: 25px;" type="button" value="Save"/>	Click to save changes.
<input style="width: 60px; height: 25px;" type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.15 DHCP Server Pool

This page manages DHCP pools. According to the DHCP pool, DHCP server will allocate IP address and deliver configuration parameters to DHCP client.

DHCP Server Pool Configuration					
Pool Setting					
Delete	Name	Type	IP	Subnet Mask	Lease Time
Delete	<input type="text"/>	-	-	-	1 days 0 hours 0 minutes
<input type="button" value="Add New Pool"/>					
<input type="button" value="Save"/> <input type="button" value="Reset"/>					

Object	Description
Name	Configure the pool name that accepts all printable characters, except white space. If you want to configure the detail settings, you can click the pool name to go into the configuration page.
Type	Display which type of the pool is. Network: the pool defines a pool of IP addresses to service more than one DHCP client. Host: the pool services for a specific DHCP client identified by client identifier or hardware address. If "-" is displayed, it means not defined.
IP	Display network number of the DHCP address pool. If "-" is displayed, it means not defined.
Subnet Mask	Display subnet mask of the DHCP address pool. If "-" is displayed, it means not defined.
Lease Time	Display lease time of the pool.

Buttons	
<input type="button" value="Delete"/>	Click to delete the setting.
<input type="button" value="Add New Pool"/>	Click to add a new DHCP pool.

<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

DHCP Snooping Configuration

Snooping Mode | Disabled ▼

Port Mode Configuration



Port	Mode	
*	<>	▼
1	Trusted	▼
2	Trusted	▼
3	Trusted	▼
4	Trusted	▼
5	Trusted	▼
6	Trusted	▼
7	Trusted	▼
8	Trusted	▼
9	Trusted	▼
10	Trusted	▼

2.3.16 DHCP Snooping

Configure DHCP Snooping on this page.

Object	Description
Snooping Mode	Indicates the DHCP snooping mode operation. Possible modes are:

	<p>Enabled: Enable DHCP snooping mode operation. When DHCP snooping mode operation is enabled, the DHCP request messages will be forwarded to trusted ports and only allow reply packets from trusted ports.</p> <p>Disabled: Disable DHCP snooping mode operation.</p>
Port Mode Configuration	<p>Indicates the DHCP snooping port mode. Possible port modes are:</p> <p>Trusted: Configures the port as trusted source of the DHCP messages.</p> <p>Untrusted: Configures the port as untrusted source of the DHCP messages.</p>

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.17 DHCP Relay



A DHCP relay agent is used to forward and to transfer DHCP messages between the clients and the server when they are not in the same subnet domain. It stores the incoming interface IP address in the GIADDR field of the DHCP packet. The DHCP server can use the value of GIADDR field to determine the assigned subnet. For such condition, please make sure the switch configuration of VLAN interface IP address and PVID(Port VLAN ID) correctly.

Object	Description
--------	-------------

DHCP Relay Configuration

Relay Mode	Disabled ▼
Relay Server	0.0.0.0
Relay Information Mode	Disabled ▼
Relay Information Policy	Keep ▼

Relay Mode	<p>Indicates the DHCP relay mode operation.</p> <p>Possible modes are:</p>
	<p>Enabled: Enable DHCP relay mode operation. When DHCP relay mode operation is enabled, the agent forwards and transfers DHCP messages between the clients and the server when they are not in the same subnet domain. And the DHCP broadcast message won't be flooded for security considerations.</p> <p>Disabled: Disable DHCP relay mode operation.</p>
Relay Server	<p>Indicates the DHCP relay server IP address.</p>
Relay Information Mode	<p>Indicates the DHCP relay information mode option operation. The option 82 circuit ID format as "[vlan_id][module_id][port_no]". The first four characters represent the VLAN ID, the fifth and sixth characters are the module ID(in standalone device it always equal 0, in stackable device it means switch ID), and the last two characters are the port number. For example, "00030108" means the DHCP message receive from VLAN ID 3, switch ID 1, port No 8. And the option 82 remote ID value is equal the switch MAC address.</p> <p>Possible modes are:</p> <p>Enabled: Enable DHCP relay information mode operation. When DHCP relay information mode operation is enabled, the agent inserts specific information (option 82) into a DHCP message when forwarding to DHCP server and removes it from a DHCP message when transferring to DHCP client. It only works when DHCP relay operation mode is enabled.</p> <p>Disabled: Disable DHCP relay information mode operation.</p>
Relay Information Policy	<p>Indicates the DHCP relay information option policy. When DHCP relay information mode operation is enabled, if the agent receives a DHCP message that already contains relay agent information it will enforce the policy. The 'Replace' policy is invalid when relay information mode is disabled. Possible policies are:</p> <p>Replace: Replace the original relay information when a DHCP message that already contains it is received.</p> <p>Keep: Keep the original relay information when a DHCP message that already contains it is received.</p> <p>Drop: Drop the package when a DHCP message that already contains relay information is received.</p>

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.18 Security

2.3.19 Switch

2.3.20 Users

This page provides an overview of the current users. Currently the only way to login as another user on the web server is to close and reopen the browser.






Add User

User Settings	
User Name	<input type="text"/>
Password	<input type="password"/>
Password (again)	<input type="password"/>
Privilege Level	1 ▼

Save
Reset
Cancel

Object	Description
User Name	A string identifying the user name that this entry should belong to. The allowed string length is 1 to 31 . The valid user name allows letters, numbers and underscores.
Password	The password of the user. The allowed string length is 0 to 31 . Any printable characters including space is accepted.
Privilege Level	The privilege level of the user. The allowed range is 1 to 15 . If the privilege level value is 15, it can access all groups, i.e. that is granted the fully control of the device. But others value need to refer to each group privilege level. User's privilege should be same or greater than the group privilege level to have the access of that group. By default setting, most groups privilege level 5 has the read-only access and privilege level 10 has the read-write access. And the system maintenance (software upload, factory defaults and etc.) need user privilege level 15. Generally, the privilege level 15 can be used for an administrator account, privilege level 10 for a standard user account and privilege level 5 for a guest account.

Buttons

	Click to add a new user.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.
	Click to undo any changes made locally and return to the Users.
	Delete the current user. This button is not available for new configurations (Add new user)

2.3.21 Privilege Level

This page provides an overview of the privilege levels.



Object	Description
--------	-------------

Privilege Level Configuration

Group Name	Privilege Levels			
	Configuration Read-only	Configuration/Execute Read/write	Status/Statistics Read-only	Status/Statistics Read/write
Aggregation	5 ▾	10 ▾	5 ▾	10 ▾
Debug	15 ▾	15 ▾	15 ▾	15 ▾
DHCP	5 ▾	10 ▾	5 ▾	10 ▾
Dhcp_Client	5 ▾	10 ▾	5 ▾	10 ▾
Diagnostics	5 ▾	10 ▾	5 ▾	10 ▾
EEE	5 ▾	10 ▾	5 ▾	10 ▾
Green_Ethernet	5 ▾	10 ▾	5 ▾	10 ▾
IP2	5 ▾	10 ▾	5 ▾	10 ▾
IPMC_Snooping	5 ▾	10 ▾	5 ▾	10 ▾
LACP	5 ▾	10 ▾	5 ▾	10 ▾
LLDP	5 ▾	10 ▾	5 ▾	10 ▾
Loop_Protect	5 ▾	10 ▾	5 ▾	10 ▾
MAC_Table	5 ▾	10 ▾	5 ▾	10 ▾
Maintenance	15 ▾	15 ▾	15 ▾	15 ▾
Mirroring	5 ▾	10 ▾	5 ▾	10 ▾
MVR	5 ▾	10 ▾	5 ▾	10 ▾
NTP	5 ▾	10 ▾	5 ▾	10 ▾
Ports	5 ▾	10 ▾	1 ▾	10 ▾
Private_VLANS	5 ▾	10 ▾	5 ▾	10 ▾
QoS	5 ▾	10 ▾	5 ▾	10 ▾
RPC	5 ▾	10 ▾	5 ▾	10 ▾
Security	5 ▾	10 ▾	5 ▾	10 ▾
sFlow	5 ▾	10 ▾	5 ▾	10 ▾
Spanning Tree Timer	5 ▾	10 ▾	5 ▾	10 ▾
VCL	5 ▾	10 ▾	5 ▾	10 ▾
VLANS	5 ▾	10 ▾	5 ▾	10 ▾
Voice_VLAN	5 ▾	10 ▾	5 ▾	10 ▾
XXRP	5 ▾	10 ▾	5 ▾	10 ▾

Group Name	The name identifying the privilege group. In most cases, a privilege level group consists of a single module (e.g. LACP, RSTP or QoS), but a few of them contains more than one. The following description defines these privilege level groups in
-------------------	--

	<p>details:</p> <p>System: Contact, Name, Location, Timezone, Daylight Saving Time, Log.</p> <p>Security: Authentication, System Access Management, Port (contains Dot1x port, MAC based and the MAC Address Limit), ACL, HTTPS, SSH, ARP Inspection, IP source guard.</p> <p>IP: Everything except 'ping'.</p> <p>Port: Everything except 'VeriPHY'.</p> <p>Diagnostics: 'ping' and 'VeriPHY'.</p> <p>Maintenance: CLI- System Reboot, System Restore Default, System Password, Configuration Save, Configuration Load and Firmware Load. Web- Users, Privilege Levels and everything in Maintenance.</p> <p>Debug: Only present in CLI.</p>
Privilege Levels	<p>Every group has an authorization Privilege level for the following sub groups: configuration read-only, configuration/execute read-write, status/statistics read-only, status/statistics read-write (e.g. for clearing of statistics). User Privilege should be same or greater than the authorization Privilege level to have the access to that group.</p>

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.



2.3.22 Auth Method

This page allows you to configure how a user is authenticated when he logs into the switch via one of the management client interfaces.

Authentication Method Configuration

Client	Methods		
console	local ▼	no ▼	no ▼
telnet	local ▼	no ▼	no ▼
ssh	local ▼	no ▼	no ▼
http	local ▼	no ▼	no ▼

Object	Description
Client	The management client for which the configuration below applies.
Methods	<p>Method can be set to one of the following values:</p> <ul style="list-style-type: none"> no: Authentication is disabled and login is not possible. local: Use the local user database on the switch for authentication. radius: Use remote RADIUS server(s) for authentication. tacacs+: Use remote TACACS+ server(s) for authentication. <p>Methods that involves remote servers are timed out if the remote servers are offline. In this case the next method is tried. Each method is tried from left to right and continues until a method either approves or rejects a user. If a remote server is used for primary authentication it is recommended to configure secondary authentication as 'local'. This will enable the management client to login via the local user database if none of the configured authentication servers are alive.</p>

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.23 SSH



Configure SSH on this page.

SSH Configuration

Mode ▼

Object	Description
--------	-------------

Mode	Indicates the SSH mode operation. Possible modes are: Enabled: Enable SSH mode operation. Disabled: Disable SSH mode operation.
-------------	---

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.24 HTTPS

Configure HTTPS on this page.

HTTPS Configuration

Mode	Disabled ▾
Automatic Redirect	Disabled ▾

Object	Description
Mode	Indicates the HTTPS mode operation. When the current connection is HTTPS, to apply HTTPS disabled mode operation will automatically redirect web browser to an HTTP connection. Possible modes are: Enabled: Enable HTTPS mode operation. Disabled: Disable HTTPS mode operation.
Automatic Redirect	Indicates the HTTPS redirect mode operation. It only significant if HTTPS mode "Enabled" is selected. Automatically redirects web browser to an HTTPS connection when both HTTPS mode and Automatic Redirect are enabled. Possible modes are: Enabled: Enable HTTPS redirect mode operation. Disabled: Disable HTTPS redirect mode operation.

Buttons

<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.25 Access Management




Configure access management table on this page. The maximum number of entries is **16**. If the application's type match any one of the access management entries, it will allow access to the switch.

Access Management Configuration

Mode ▾

Delete	VLAN ID	Start IP Address	End IP Address	HTTP/HTTPS	SNMP	TELNET/SSH

Object	Description
Mode	Indicates the access management mode operation. Possible modes are: Enabled: Enable access management mode operation. Disabled: Disable access management mode operation.
Delete	Check to delete the entry. It will be deleted during the next save.
VLAN ID	Indicates the VLAN ID for the access management entry.
Start IP address	Indicates the start IP address for the access management entry.
End IP address	Indicates the end IP address for the access management entry.
HTTP/HTTPS	Indicates that the host can access the switch from HTTP/HTTPS interface if the host IP address matches the IP address range provided in the entry.
SNMP	Indicates that the host can access the switch from SNMP interface if the host IP address matches the IP address range provided in the entry.
TELNET/SSH	Indicates that the host can access the switch from TELNET/SSH interface if the host IP address matches the IP address range provided in the entry.

Buttons	
	Click to add a new access management entry.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.26 SNMP

2.3.27 SNMP System Configuration

Configure SNMP on this page.



SNMP System Configuration

Mode	Enabled ▼
Version	SNMP v2c ▼
Read Community	public
Write Community	private
Engine ID	800007e5017f000001

Save
Reset

Object	Description
Mode	Indicates the SNMP mode operation. Possible modes are: Enabled : Enable SNMP mode operation. Disabled : Disable SNMP mode operation.
Version	Indicates the SNMP supported version. Possible versions are: SNMP v1 : Set SNMP supported version 1. SNMP v2c : Set SNMP supported version 2c. SNMP v3 : Set SNMP supported version 3.

Read Community	<p>Indicates the community read access string to permit access to SNMP agent. The allowed string length is 0 to 255, and the allowed content is the ASCII characters from 33 to 126.</p> <p>The field is applicable only when SNMP version is SNMPv1 or SNMPv2c. If SNMP version is SNMPv3, the community string will be associated with SNMPv3 communities table. It provides more flexibility to configure security name than a SNMPv1 or SNMPv2c community string. In addition to community string, a particular range of source addresses can be used to restrict source subnet.</p>
Write Community	<p>Indicates the community write access string to permit access to SNMP agent. The allowed string length is 0 to 255, and the allowed content is the ASCII characters from 33 to 126.</p> <p>The field is applicable only when SNMP version is SNMPv1 or SNMPv2c. If SNMP version is SNMPv3, the community string will be associated with SNMPv3 communities table. It provides more flexibility to configure security name than a SNMPv1 or SNMPv2c community string. In addition to community string, a particular range of source addresses can be used to restrict source subnet.</p>
Engine ID	<p>Indicates the SNMPv3 engine ID. The string must contain an even number(in hexadecimal format) with number of digits between 10 and 64, but all-zeros and all-'F's are not allowed. Change of the Engine ID will clear all original local users.</p>

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.28 SNMP Trap Configuration

Configure SNMP trap on this page.

Trap Configuration

Global Settings

Mode | Disabled ▾

Trap Destination Configurations

Delete	Name	Enable	Version	Destination Address	Destination Port
<input type="button" value="Add New Entry"/>					
<input type="button" value="Save"/> <input type="button" value="Reset"/>					

Object	Description
Global Settings	
Mode	Indicates the trap mode operation. Possible modes are: Enabled: Enable SNMP trap mode operation. Disabled: Disable SNMP trap mode operation.
Trap Destination Configurations	
Name	Indicates the trap Configuration's name. Indicates the trap destination's name.
Enable	Indicates the trap destination mode operation. Possible modes are: Enabled: Enable SNMP trap mode operation. Disabled: Disable SNMP trap mode operation.
Version	Indicates the SNMP trap supported version. Possible versions are: SNMPv1: Set SNMP trap supported version 1. SNMPv2c: Set SNMP trap supported version 2c. SNMPv3: Set SNMP trap supported version 3.
Destination Address	Indicates the SNMP trap destination address. It allow a valid IP address in dotted decimal notation ('x.y.z.w'). And it also allow a valid hostname. A valid hostname is a string drawn from the alphabet (A-Za-z), digits (0-9), dot (.), dash (-). Spaces are not allowed, the first
	character must be an alpha character, and the first and last characters must not be a dot or a dash. Indicates the SNMP trap destination IPv6 address. IPv6 address is in 128-bit records represented as eight fields of up to four hexadecimal digits with a colon separating each field (:). For example, 'fe80::215:c5ff:fe03:4dc7'. The symbol '::' is a special syntax that can be used as a shorthand way of representing multiple 16-bit groups of contiguous zeros; but it can appear only once. It can also represent a legally valid IPv4 address. For example, '::192.1.2.34'.

Destination port	Indicates the SNMP trap destination port. SNMP Agent will send SNMP message via this port, the port range is 1~65535.
-------------------------	---

The SNMP Trap Configuration page includes the following fields:

Trap Config Name	
Trap Mode	Disabled <input type="checkbox"/> <input checked="" type="checkbox"/> ▼
Trap Version	SNMP v2c ▼
Trap Community	Public
Trap Destination Address	
Trap Destination Port	162
Trap Inform Mode	Disabled <input type="checkbox"/> <input checked="" type="checkbox"/> ▼
Trap Inform Timeout (seconds)	3
Trap Inform Retry Times	5
Trap Probe Security Engine ID	Enabled <input type="checkbox"/> <input checked="" type="checkbox"/> ▼
Trap Security Engine ID	
Trap Security Name	None ▼

SNMP Trap Event

System	<input type="checkbox"/> * <input type="checkbox"/> Warm Start <input type="checkbox"/> Cold Start
Interface	Link up <input checked="" type="radio"/> none <input type="radio"/> specific <input type="radio"/> all switches <input type="checkbox"/> * Link down <input checked="" type="radio"/> none <input type="radio"/> specific <input type="radio"/> all switches LLDP <input checked="" type="radio"/> none <input type="radio"/> specific <input type="radio"/> all switches
AAA	<input type="checkbox"/> * <input type="checkbox"/> Authentication Fail
Switch	<input type="checkbox"/> * <input type="checkbox"/> STP <input type="checkbox"/> RMON

Object	Description
Trap Mode	Indicates the SNMP trap mode operation. Possible modes are: Enabled: Enable SNMP trap mode operation. Disabled: Disable SNMP trap mode operation.
Trap Version	Indicates the SNMP trap supported version. Possible versions are: SNMP v1: Set SNMP trap supported version 1. SNMP v2c: Set SNMP trap supported version 2c. SNMP v3: Set SNMP trap supported version 3.
Trap Community	Indicates the community access string when sending SNMP trap packet. The allowed string length is 0 to 255, and the allowed content is ASCII characters from 33 to 126.

<p>Trap Destination Address</p>	<p>Indicates the SNMP trap destination address. It allow a valid IP address in dotted decimal notation ('x.y.z.w').</p> <p>And it also allow a valid hostname. A valid hostname is a string drawn from the alphabet (A-Za-z), digits (0-9), dot (.), dash (-). Spaces are not allowed, the first character must be an alpha character, and the first and last characters must not be a dot or a dash</p>
<p>Trap Destination IIPv6 Address</p>	<p>Indicates the SNMP trap destination IPv6 address. IPv6 address is in 128-bit records represented as eight fields of up to four hexadecimal digits with a colon separating each field (:). For example, 'fe80::215:c5ff:fe03:4dc7'. The symbol '::' is a special syntax that can be used as a shorthand way of representing multiple 16-bit groups of contiguous zeros; but it can appear only once. It can also represent a legally valid IPv4 address. For example, '::192.1.2.34'.</p>
<p>Trap Authentication Failure</p>	<p>Indicates that the SNMP entity is permitted to generate authentication failure traps.</p> <p>Possible modes are:</p> <p>Enabled: Enable SNMP trap authentication failure.</p> <p>Disabled: Disable SNMP trap authentication failure.</p>
<p>Trap Link-up and Link-down</p>	<p>Indicates the SNMP trap link-up and link-down mode operation. Possible modes are:</p> <p>Enabled: Enable SNMP trap link-up and link-down mode operation.</p> <p>Disabled: Disable SNMP trap link-up and link-down mode operation.</p>
<p>Trap Inform Mode</p>	<p>Indicates the SNMP trap inform mode operation. Possible modes are:</p> <p>Enabled: Enable SNMP trap inform mode operation.</p> <p>Disabled: Disable SNMP trap inform mode operation.</p>
<p>Trap Inform Timeout (seconds)</p>	<p>Indicates the SNMP trap inform timeout. The allowed range is 0 to 2147.</p>
<p>Trap Inform Retry Times</p>	<p>Indicates the SNMP trap inform retry times. The allowed range is 0 to 255.</p>
<p>Trap Probe Security Engine ID</p>	<p>Indicates the SNMP trap probe security engine ID mode of operation. Possible values are:</p> <p>Enabled: Enable SNMP trap probe security engine ID mode of operation.</p>
	<p>Disabled: Disable SNMP trap probe security engine ID mode of operation.</p>
<p>Trap Security Engine ID</p>	<p>Indicates the SNMP trap security engine ID. SNMPv3 sends traps and informs using USM for authentication and privacy. A unique engine ID for these traps and informs is needed. When "Trap Probe Security Engine ID" is enabled, the ID will be probed automatically. Otherwise, the ID specified in this field is used. The string must contain an even number(in hexadecimal format) with number of digits between 10 and 64, but all-zeros and all-'F's are not allowed.</p>
<p>Trap Security Name</p>	<p>Indicates the SNMP trap security name. SNMPv3 traps and informs using USM for authentication and privacy. A unique security name is needed when traps and informs are enabled.</p>

Buttons	
<input type="button" value="Add New Entry"/>	Click to add a new user.
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.29 SNMP Communities

Configure SNMPv3 community table on this page. The entry index key is **Community**.

SNMPv3 Community Configuration

Delete	Community	Source IP	Source Mask
<input type="checkbox"/>	public	0.0.0.0	0.0.0.0
<input type="checkbox"/>	private	0.0.0.0	0.0.0.0

Object	Description
Delete	Check to delete the entry. It will be deleted during the next save.
Community	Indicates the community access string to permit access to SNMPv3 agent. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126. The community string will be treated as security name and map a SNMPv1 or SNMPv2c community string.
Source IP	Indicates the SNMP access source address. A particular range of source addresses can be used to restrict source subnet when combined with source mask.
Source Mask	Indicates the SNMP access source address mask.

Buttons	
<input type="button" value="Add New Entry"/>	Click to add a new community entry.

<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.




2.3.30 SNMP Users

Configure SNMPv3 user table on this page. The entry index keys are **Engine ID** and **User Name**.

SNMPv3 User Configuration							
Delete	Engine ID	User Name	Security Level	Authentication Protocol	Authentication Password	Privacy Protocol	Privacy Password
<input type="checkbox"/>	800007e5017f000001	default_user	NoAuth, NoPriv	None	None	None	None
<input type="button" value="Add New Entry"/> <input type="button" value="Save"/> <input type="button" value="Reset"/>							

Object	Description
Delete	Check to delete the entry. It will be deleted during the next save.
Engine ID	An octet string identifying the engine ID that this entry should belong to. The string must contain an even number(in hexadecimal format) with number of digits between 10 and 64, but all-zeros and all-'F's are not allowed. The SNMPv3 architecture uses the User-based Security Model (USM) for message security and the View-based Access Control Model (VACM) for access control. For the USM entry, the usmUserEngineID and usmUserName are the entry's keys. In a simple agent, usmUserEngineID is always that agent's own snmpEngineID value. The value can also take the value of the snmpEngineID of a remote SNMP engine with which this user can communicate. In other words, if user engine ID equal system engine ID then it is local user; otherwise it's remote user.
User name	A string identifying the user name that this entry should belong to. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.
Security Level	Indicates the security model that this entry should belong to. Possible security models are: NoAuth, NoPriv : No authentication and no privacy. Auth, NoPriv : Authentication and no privacy. Auth, Priv : Authentication and privacy. The value of security level cannot be modified if entry already exists. That means it must first be ensured that the value is set correctly.

Authentication Protocol	<p>Indicates the authentication protocol that this entry should belong to. Possible authentication protocols are:</p> <p>None: No authentication protocol.</p> <p>MD5: An optional flag to indicate that this user uses MD5 authentication protocol.</p> <p>SHA: An optional flag to indicate that this user uses SHA authentication protocol.</p> <p>The value of security level cannot be modified if entry already exists. That means</p>
	<p>must first ensure that the value is set correctly.</p>
Authentication Password	<p>A string identifying the authentication password phrase. For MD5 authentication protocol, the allowed string length is 8 to 32. For SHA authentication protocol, the allowed string length is 8 to 40. The allowed content is ASCII characters from 33 to 126.</p>
Privacy Protocol	<p>Indicates the privacy protocol that this entry should belong to. Possible privacy protocols are:</p> <p>None: No privacy protocol.</p> <p>DES: An optional flag to indicate that this user uses DES authentication protocol.</p> <p>AES: An optional flag to indicate that this user uses AES authentication protocol.</p>
Privacy Password	<p>A string identifying the privacy password phrase. The allowed string length is 8 to 32, and the allowed content is ASCII characters from 33 to 126.</p>

Buttons	
	Click to add a new user entry.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.31 SNMP Groups

Configure SNMPv3 group table on this page. The entry index keys are **Security Model** and **Security Name**.

SNMPv3 Group Configuration			
Delete	Security Model	Security Name	Group Name
<input type="checkbox"/>	v1	public	default_ro_group
<input type="checkbox"/>	v1	private	default_rw_group
<input type="checkbox"/>	v2c	public	default_ro_group
<input type="checkbox"/>	v2c	private	default_rw_group
<input type="checkbox"/>	usm	default_user	default_rw_group

Object	Description
Delete	Check to delete the entry. It will be deleted during the next save.
Security Model	Indicates the security model that this entry should belong to. Possible security models are: v1 : Reserved for SNMPv1. v2c : Reserved for SNMPv2c. usm : User-based Security Model (USM).
Security Name	A string identifying the security name that this entry should belong to. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.
Group Name	A string identifying the group name that this entry should belong to. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.

Buttons	
<input type="button" value="Add New Entry"/>	Click to add a new group entry
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.32 SNMP Views

Configure SNMPv3 view table on this page. The entry index keys are **View Name** and **OID Subtree**.

SNMPv3 View Configuration			
Delete	View Name	View Type	OID Subtree
<input type="checkbox"/>	default_view	included ▾	.1

Object	Description
Delete	Check to delete the entry. It will be deleted during the next save.
View Name	A string identifying the view name that this entry should belong to. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.
View Type	Indicates the view type that this entry should belong to. Possible view types are: included : An optional flag to indicate that this view subtree should be included. excluded : An optional flag to indicate that this view subtree should be excluded. In general, if a view entry's view type is 'excluded', there should be another view entry existing with view type as 'included' and it's OID subtree should overstep the 'excluded' view entry.
OID Subtree	The OID defining the root of the subtree to add to the named view. The allowed OID length is 1 to 128. The allowed string content is digital number or asterisk(*).

Buttons	
<input type="button" value="Add New Entry"/>	Click to add a new view entry.
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.33 SNMP Access




Configure SNMPv3 access table on this page. The entry index keys are **Group Name**, **Security**

SNMPv3 Access Configuration					
Delete	Group Name	Security Model	Security Level	Read View Name	Write View Name
<input type="checkbox"/>	default_ro_group	any	NoAuth, NoPriv	default_view ▾	None ▾
<input type="checkbox"/>	default_rw_group	any	NoAuth, NoPriv	default_view ▾	default_view ▾

Model and **Security Level**.

Object	Description
Delete	Check to delete the entry. It will be deleted during the next save.
Group Name	A string identifying the group name that this entry should belong to. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.
Security Model	Indicates the security model that this entry should belong to. Possible security models are: any : Any security model accepted(v1 v2c usm). v1 : Reserved for SNMPv1. v2c : Reserved for SNMPv2c. usm : User-based Security Model (USM).
Security Level	Indicates the security model that this entry should belong to. Possible security models are: NoAuth, NoPriv : No authentication and no privacy. Auth, NoPriv : Authentication and no privacy. Auth, Priv : Authentication and privacy.
Read View Name	The name of the MIB view defining the MIB objects for which this request may request the current values. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.
Write View Name	The name of the MIB view defining the MIB objects for which this request may potentially set new values. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.

Buttons

	Click to add a new access entry.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.34 RMON

2.3.35 RMON Statistics

Configure RMON Statistics table on this page. The entry index key is **ID**.

RMON Statistics Configuration

Delete	ID	Data Source
---------------	-----------	--------------------

Add New Entry
Save
Reset

Object	Description
Delete	Check to delete the entry. It will be deleted during the next save.
ID	Indicates the index of the entry. The range is from 1 to 65535.
Data Source	Indicates the port ID which wants to be monitored. If in stacking switch, the value must add 1000*(switch ID-1), for example, if the port is switch 3 port 5, the value is 2005

Buttons	
<div style="border: 1px solid gray; padding: 5px 15px; border-radius: 3px; display: inline-block;">Add New Entry</div>	Click to add a new community entry.
<div style="border: 1px solid gray; padding: 5px 15px; border-radius: 3px; display: inline-block;">Save</div>	Click to save changes.
<div style="border: 1px solid gray; padding: 5px 15px; border-radius: 3px; display: inline-block;">Reset</div>	Click to undo any changes made locally and revert to previously saved values.

2.3.36 RMON History




Configure RMON History table on this page. The entry index key is **ID**.

RMON History Configuration

Delete	ID	Data Source	Interval	Buckets	Buckets Granted
---------------	-----------	--------------------	-----------------	----------------	------------------------




Add New Entry
Save
Reset

Object	Description
Delete	Check to delete the entry. It will be deleted during the next save.
ID	Indicates the index of the entry. The range is from 1 to 65535.
Data Source	Indicates the port ID which wants to be monitored. If in stacking switch, the value must add 1000*(switch ID-1), for example, if the port is switch 3 port 5, the value is 2005.
Interval	Indicates the interval in seconds for sampling the history statistics data. The range is from 1 to 3600, default value is 1800 seconds.
Buckets	Indicates the maximum data entries associated this History control entry stored in RMON. The range is from 1 to 3600, default value is 50.
Buckets Granted	The number of data shall be saved in the RMON.

Buttons	
	Click to add a new community entry.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.37 RMON Alarm

Configure RMON Alarm table on this page. The entry index key is **ID**.

RMON Alarm Configuration										
Delete	ID	Interval	Variable	Sample Type	Value	Startup Alarm	Rising Threshold	Rising Index	Falling Threshold	Falling Index
  										

Object	Description
Delete	Check to delete the entry. It will be deleted during the next save.
ID	Indicates the index of the entry. The range is from 1 to 65
Interval	Indicates the interval in seconds for sampling and comparing the rising and falling threshold. The range is from 1 to 2^31-1.

Variable	<p>Indicates the particular variable to be sampled, the possible variables are:</p> <p>InOctets: The total number of octets received on the interface, including framing characters.</p> <p>InUcastPkts: The number of uni-cast packets delivered to a higher-layer protocol.</p> <p>InNUcastPkts: The number of broad-cast and multi-cast packets delivered to a higher-layer protocol.</p> <p>InDiscards: The number of inbound packets that are discarded even the packets are normal.</p> <p>InErrors: The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.</p> <p>InUnknownProtos: the number of the inbound packets that were discarded because of the unknown or un-support protocol.</p> <p>OutOctets: The number of octets transmitted out of the interface , including framing characters.</p> <p>OutUcastPkts: The number of uni-cast packets that request to transmit.</p> <p>OutNUcastPkts: The number of broad-cast and multi-cast packets that request to transmit.</p> <p>OutDiscards: The number of outbound packets that are discarded event the packets is normal.</p> <p>OutErrors: The The number of outbound packets that could not be transmitted because of errors.</p>
-----------------	--

	OutQLen : The length of the output packet queue (in packets).
Sample Type	<p>The method of sampling the selected variable and calculating the value to be compared against the thresholds, possible sample types are:</p> <p>Absolute: Get the sample directly.</p> <p>Delta: Calculate the difference between samples (default).</p>
Value	The value of the statistic during the last sampling period.
Startup Alarm	<p>The method of sampling the selected variable and calculating the value to be compared against the thresholds, possible sample types are:</p> <p>Rising Trigger alarm when the first value is larger than the rising threshold.</p> <p>Falling Trigger alarm when the first value is less than the falling threshold.</p> <p>RisingOrFalling Trigger alarm when the first value is larger than the rising threshold or less than the falling threshold (default).</p>
Rising Threshold	Rising threshold value (-2147483648-2147483647).
Rising Index	Rising event index (1-65535).
Falling Threshold	Falling threshold value (-2147483648-2147483647)
Falling Index	Falling event index (1-65535).

Buttons	
<input type="button" value="Add New Entry"/>	Click to add a new community entry.
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.38 RMON Event

Configure RMON Event table on this page. The entry index key is **ID**.

RMON Event Configuration

Delete	ID	Desc	Type	Community	Event Last Time
--------	----	------	------	-----------	-----------------

Object	Description
Delete	Check to delete the entry. It will be deleted during the next save.
ID	Indicates the index of the entry. The range is from 1 to 65535.
Desc	Indicates this event, the string length is from 0 to 127, default is a null string.
Type	Indicates the notification of the event, the possible types are: none : No SNMP log is created, no SNMP trap is sent. log : Create SNMP log entry when the event is triggered. snmptrap : Send SNMP trap when the event is triggered. logandtrap : Create SNMP log entry and sent SNMP trap when the event is triggered.
Community	Specify the community when trap is sent, the string length is from 0 to 127, default is "public".
Event Last Time	Indicates the value of sysUpTime at the time this event entry last generated an event.

Buttons	
<input type="button" value="Add New Entry"/>	Click to add a new community entry.

<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.39 Network

2.3.40 Limit Control

This page allows you to configure the Port Security Limit Control system and port settings.

Limit Control allows for limiting the number of users on a given port. A user is identified by a MAC address and VLAN ID. If Limit Control is enabled on a port, the [limit](#) specifies the maximum number of users on the port. If this number is exceeded, an [action](#) is taken. The action can be one of the four different actions as described below.

The Limit Control module utilizes a lower-layer module, Port Security module, which manages MAC addresses learnt on the port.

The Limit Control configuration consists of two sections, a system- and a port-wide.

Port Security Limit Control Configuration

System Configuration

Mode	Disabled <input type="button" value="v"/>
Aging Enabled	<input type="checkbox"/>
Aging Period	<input type="text" value="3600"/> seconds




Port Configuration

Port	Mode	Limit	Action	State	Re-open
*	<> <input type="button" value="v"/>	4	<> <input type="button" value="v"/>		
1	Disabled <input type="button" value="v"/>	4	None <input type="button" value="v"/>	Disabled	Reopen
2	Disabled <input type="button" value="v"/>	4	None <input type="button" value="v"/>	Disabled	Reopen
3	Disabled <input type="button" value="v"/>	4	None <input type="button" value="v"/>	Disabled	Reopen
4	Disabled <input type="button" value="v"/>	4	None <input type="button" value="v"/>	Disabled	Reopen
5	Disabled <input type="button" value="v"/>	4	None <input type="button" value="v"/>	Disabled	Reopen
6	Disabled <input type="button" value="v"/>	4	None <input type="button" value="v"/>	Disabled	Reopen
7	Disabled <input type="button" value="v"/>	4	None <input type="button" value="v"/>	Disabled	Reopen
8	Disabled <input type="button" value="v"/>	4	None <input type="button" value="v"/>	Disabled	Reopen
9	Disabled <input type="button" value="v"/>	4	None <input type="button" value="v"/>	Disabled	Reopen
10	Disabled <input type="button" value="v"/>	4	None <input type="button" value="v"/>	Disabled	Reopen

Object	Description
System Configuration	
Mode	Indicates if Limit Control is globally enabled or disabled on the switch. If globally
	disabled, other modules may still use the underlying functionality, but limit checks and corresponding actions are disabled.
Aging Enabled	If checked, secured MAC addresses are subject to aging as discussed under Aging Period .
Aging Period	<p>If Aging Enabled is checked, then the aging period is controlled with this input. If other modules are using the underlying port security for securing MAC addresses, they may have other requirements to the aging period. The underlying port security will use the shorter requested aging period of all modules that use the functionality.</p> <p>The Aging Period can be set to a number between 10 and 10,000,000 seconds.</p> <p>To understand why aging may be desired, consider the following scenario: Suppose an end-host is connected to a 3rd party switch or hub, which in turn is connected to a port on this switch on which Limit Control is enabled. The end-host will be allowed to forward if the limit is not exceeded. Now suppose that the end-host logs off or powers down. If it wasn't for aging, the end-host would still take up resources on this switch and will be allowed to forward. To overcome this situation, enable aging. With aging enabled, a timer is started once the end-host gets secured. When the timer expires, the switch starts looking for frames from the end-host, and if such frames are not seen within the next Aging Period, the end-host is assumed to be disconnected, and the corresponding resources are freed on the switch.</p>
Port Configuration	
Port	The port number to which the configuration below applies.
Mode	Controls whether Limit Control is enabled on this port. Both this and the Global Mode must be set to Enabled for Limit Control to be in effect. Notice that other modules may still use the underlying port security features without enabling Limit Control on a given port.
Limit	<p>The maximum number of MAC addresses that can be secured on this port. This number cannot exceed 1024. If the limit is exceeded, the corresponding action is taken.</p> <p>The switch is "born" with a total number of MAC addresses from which all ports draw whenever a new MAC address is seen on a Port Security-enabled port. Since all ports draw from the same pool, it may happen that a configured maximum cannot be granted, if the remaining ports have already used all available MAC addresses.</p>

Action	<p>If Limit is reached, the switch can take one of the following actions:</p> <p>None: Do not allow more than Limit MAC addresses on the port, but take no further action.</p> <p>Trap: If Limit + 1 MAC addresses is seen on the port, send an SNMP trap. If Aging is disabled, only one SNMP trap will be sent, but with Aging enabled, new SNMP traps</p>
---------------	--

	<p>will be sent every time the limit gets exceeded.</p> <p>Shutdown: If Limit + 1 MAC addresses is seen on the port, shut down the port. This implies that all secured MAC addresses will be removed from the port, and no new address will be learned. Even if the link is physically disconnected and reconnected on the port (by disconnecting the cable), the port will remain shut down. There are three ways to re-open the port:</p> <ol style="list-style-type: none"> 1) Boot the switch, 2) Disable and re-enable Limit Control on the port or the switch, 3) Click the Reopen button. <p>Trap & Shutdown: If Limit + 1 MAC addresses is seen on the port, both the "Trap" and the "Shutdown" actions described above will be taken.</p>
State	<p>This column shows the current state of the port as seen from the Limit Control's point of view. The state takes one of four values:</p> <p>Disabled: Limit Control is either globally disabled or disabled on the port.</p> <p>Ready: The limit is not yet reached. This can be shown for all actions.</p> <p>Limit Reached: Indicates that the limit is reached on this port. This state can only be shown if Action is set to None or Trap.</p> <p>Shutdown: Indicates that the port is shut down by the Limit Control module. This state can only be shown if Action is set to Shutdown or Trap & Shutdown.</p>
Re-open Button	<p>If a port is shutdown by this module, you may reopen it by clicking this button, which will only be enabled if this is the case. For other methods, refer to Shutdown in the Action section.</p> <p>Note that clicking the reopen button causes the page to be refreshed, so non-committed changes will be lost.</p>

Buttons	
	Click to refresh the page. Note that non-committed changes will be lost.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.41 NAS

This page allows you to configure the [IEEE 802.1X](#) and MAC-based authentication system and port settings.

The IEEE 802.1X standard defines a port-based access control procedure that prevents unauthorized access to a network by requiring users to first submit credentials for authentication. One or more central servers, the backend servers, determine whether the user is allowed access to the network. These backend (RADIUS) servers are configured on the "Configuration→Security→AAA" page. The IEEE802.1X standard defines port-based operation, but non-standard variants overcome security limitations as shall be explored below.

MAC-based authentication allows for authentication of more than one user on the same port, and doesn't require the user to have special 802.1X supplicant software installed on his system. The switch uses the user's MAC address to authenticate against the backend server. Intruders can create counterfeit MAC addresses, which makes MAC-based authentication less secure than 802.1X authentication.

The NAS configuration consists of two sections, a system- and a port-wide.

Network Access Server Configuration
Refresh

System Configuration

Mode	Disabled ▼
Reauthentication Enabled	<input type="checkbox"/>
Reauthentication Period	3600 seconds
EAPOL Timeout	30 seconds
Aging Period	300 seconds
Hold Time	10 seconds
RADIUS-Assigned QoS Enabled	<input type="checkbox"/>
RADIUS-Assigned VLAN Enabled	<input type="checkbox"/>
Guest VLAN Enabled	<input type="checkbox"/>
Guest VLAN ID	1
Max. Reauth. Count	2
Allow Guest VLAN if EAPOL Seen	<input type="checkbox"/>

Port Configuration

Port	Admin State	RADIUS-Assigned QoS Enabled	RADIUS-Assigned VLAN Enabled	Guest VLAN Enabled	Port State	Restart	
*	<> ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
1	Force Authorized ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate	Reinitialize
2	Force Authorized ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate	Reinitialize
3	Force Authorized ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate	Reinitialize
4	Force Authorized ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate	Reinitialize
5	Force Authorized ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate	Reinitialize
6	Force Authorized ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate	Reinitialize
7	Force Authorized ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate	Reinitialize
8	Force Authorized ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate	Reinitialize
9	Force Authorized ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate	Reinitialize
10	Force Authorized ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Globally Disabled	Reauthenticate	Reinitialize

Save
Reset

Object	Description
System Configuration	

Mode	Indicates if NAS is globally enabled or disabled on the switch. If globally disabled, all ports are allowed forwarding of frames.
Reauthentication Enabled	<p>If checked, successfully authenticated supplicants/clients are reauthenticated after the interval specified by the Reauthentication Period. Reauthentication for 802.1X-enabled ports can be used to detect if a new device is plugged into a switch port or if a supplicant is no longer attached.</p> <p>For MAC-based ports, reauthentication is only useful if the RADIUS server configuration has changed. It does not involve communication between the switch and the client, and therefore doesn't imply that a client is still present on a port (see Aging Period below).</p>
Reauthentication Period	Determines the period, in seconds, after which a connected client must be reauthenticated. This is only active if the Reauthentication Enabled checkbox is checked. Valid values are in the range 1 to 3600 seconds.
EAPOL Timeout	Determines the time for retransmission of Request Identity EAPOL frames. Valid values are in the range 1 to 65535 seconds. This has no effect for MAC-based ports.
Aging Period	<p>This setting applies to the following modes, i.e. modes using the Port Security functionality to secure MAC addresses:</p> <ul style="list-style-type: none"> • Single 802.1X

	<ul style="list-style-type: none"> • Multi 802.1X • MAC-Based Auth. <p>When the NAS module uses the Port Security module to secure MAC addresses, the Port Security module needs to check for activity on the MAC address in question at regular intervals and free resources if no activity is seen within a given period of time. This parameter controls exactly this period and can be set to a number between 10 and 1000000 seconds.</p> <p>If reauthentication is enabled and the port is in an 802.1X-based mode, this is not so critical, since supplicants that are no longer attached to the port will get removed upon the next reauthentication, which will fail. But if reauthentication is not enabled, the only way to free resources is by aging the entries.</p> <p>For ports in MAC-based Auth. mode, reauthentication doesn't cause direct communication between the switch and the client, so this will not detect whether the client is still attached or not, and the only way to free any resources is to age the entry.</p>
--	--

Hold Time	<p>This setting applies to the following modes, i.e. modes using the Port Security functionality to secure MAC addresses:</p> <ul style="list-style-type: none"> • Single 802.1X • Multi 802.1X • MAC-Based Auth. <p>If a client is denied access - either because the RADIUS server denies the client access or because the RADIUS server request times out (according to the timeout specified on the "Configuration→Security→AAA" page) - the client is put on hold in the Unauthorized state. The hold timer does not count during an on-going authentication.</p> <p>In MAC-based Auth. mode, the switch will ignore new frames coming from the client during the hold time.</p> <p>The Hold Time can be set to a number between 10 and 1000000 seconds.</p>
RADIUS-Assigned QoS Enabled	<p>RADIUS-assigned QoS provides a means to centrally control the traffic class to which traffic coming from a successfully authenticated supplicant is assigned on the switch. The RADIUS server must be configured to transmit special RADIUS attributes to take advantage of this feature (see RADIUS-Assigned QoS Enabled below for a detailed description).</p> <p>The "RADIUS-Assigned QoS Enabled" checkbox provides a quick way to globally enable/disable RADIUS-server assigned QoS Class functionality. When checked, the individual ports' ditto setting determine whether RADIUS-assigned QoS Class is enabled on that port. When unchecked, RADIUS-server assigned QoS Class is disabled on all ports.</p>
RADIUS-Assigned VLAN Enabled	<p>RADIUS-assigned VLAN provides a means to centrally control the VLAN on which a successfully authenticated supplicant is placed on the switch. Incoming traffic will be classified to and switched on the RADIUS-assigned VLAN. The RADIUS server must be configured to transmit special RADIUS attributes to take advantage of this feature (see RADIUS-Assigned VLAN Enabled below for a detailed description).</p> <p>The "RADIUS-Assigned VLAN Enabled" checkbox provides a quick way to globally enable/disable RADIUS-server assigned VLAN functionality. When checked, the individual ports' ditto setting determine whether RADIUS-assigned VLAN is enabled on that port. When unchecked, RADIUS-server assigned VLAN is disabled on all ports.</p>

Guest VLAN Enabled	<p>A Guest VLAN is a special VLAN - typically with limited network access - on which 802.1X-unaware clients are placed after a network administrator-defined timeout. The switch follows a set of rules for entering and leaving the Guest VLAN as listed below.</p> <p>The "Guest VLAN Enabled" checkbox provides a quick way to globally enable/disable Guest VLAN functionality. When checked, the individual ports' ditto setting determines whether the port can be moved into Guest VLAN. When unchecked, the ability to move to the Guest VLAN is disabled on all ports.</p>
Guest VLAN ID	<p>This is the value that a port's Port VLAN ID is set to if a port is moved into the Guest VLAN. It is only changeable if the Guest VLAN option is globally enabled.</p> <p>Valid values are in the range [1; 4095].</p>
Max. Reauth. Count	<p>The number of times the switch transmits an EAPOL Request Identity frame without response before considering entering the Guest VLAN is adjusted with this setting.</p> <p>The value can only be changed if the Guest VLAN option is globally enabled.</p> <p>Valid values are in the range [1; 255].</p>
Allow Guest VLAN if EAPOL Seen	<p>The switch remembers if an EAPOL frame has been received on the port for the life-time of the port. Once the switch considers whether to enter the Guest VLAN, it will first check if this option is enabled or disabled. If disabled (unchecked; default), the switch will only enter the Guest VLAN if an EAPOL frame has not been received on the port for the life-time of the port. If enabled (checked), the switch will consider entering the Guest VLAN even if an EAPOL frame has been received on the port for the life-time of the port.</p> <p>The value can only be changed if the Guest VLAN option is globally enabled.</p>
Port Configuration	
Port	The port number for which the configuration below applies.
Admin State	If NAS is globally enabled, this selection controls the port's authentication mode. The

following modes are available:

Force Authorized

In this mode, the switch will send one EAPOL Success frame when the port link comes up, and any client on the port will be allowed network access without authentication.

Force Unauthorized

In this mode, the switch will send one EAPOL Failure frame when the port link comes up, and any client on the port will be disallowed network access.

Port-based 802.1X

In the 802.1X-world, the user is called the supplicant, the switch is the authenticator, and the RADIUS server is the authentication server. The authenticator acts as the man-in-the-middle, forwarding requests and responses between the supplicant and the authentication server. Frames sent between the supplicant and the switch are special 802.1X frames, known as EAPOL (EAP Over LANs) frames. EAPOL frames encapsulate EAP PDUs ([RFC3748](#)). Frames sent between the switch and the RADIUS server are [RADIUS](#) packets. RADIUS packets also encapsulate EAP PDUs together with other attributes like the switch's IP address, name, and the supplicant's port number on the switch. EAP is very flexible, in that it allows for different authentication methods, like [MD5-Challenge](#), [PEAP](#), and [TLS](#). The important thing is that the authenticator (the switch) doesn't need to know which authentication method the supplicant and the authentication server are using, or how many information exchange frames are needed for a particular method. The switch simply encapsulates the EAP part of the frame into the relevant type (EAPOL or RADIUS) and forwards it. When authentication is complete, the RADIUS server sends a special packet containing a success or failure indication. Besides forwarding this decision to the supplicant, the switch uses it to open up or block traffic on the switch port connected to the supplicant.

Note: Suppose two backend servers are enabled and that the server timeout is configured to X seconds (using the AAA configuration page), and suppose that the first server in the list is currently down (but not considered dead). Now, if the supplicant retransmits EAPOL Start frames at a rate faster than X seconds, then it will never get authenticated, because the switch will cancel on-going backend authentication server requests whenever it receives a new EAPOL Start frame from the supplicant. And since the server hasn't yet failed (because the X seconds haven't expired), the same server will be contacted upon the next backend authentication




	<p>server request from the switch. This scenario will loop forever. Therefore, the server timeout should be smaller than the supplicant's EAPOL Start frame retransmission rate.</p> <p>Single 802.1X</p> <p>In port-based 802.1X authentication, once a supplicant is successfully authenticated on a port, the whole port is opened for network traffic. This allows other clients connected to the port (for instance through a hub) to piggy-back on the successfully authenticated client and get network access even though they really aren't authenticated. To overcome this security breach, use the Single 802.1X variant. Single 802.1X is really not an IEEE standard, but features many of the same characteristics as does port-based 802.1X. In Single 802.1X, at most one supplicant can get authenticated on the port at a time. Normal EAPOL frames are used in the communication between the supplicant and the switch. If more than one supplicant is connected to a port, the one that comes first when the port's link comes up will be the first one considered. If that supplicant doesn't provide valid credentials within a certain amount of time, another supplicant will get a chance. Once a supplicant is successfully authenticated, only that supplicant will be allowed access. This is the most secure of all the supported modes. In this mode, the Port Security module is used to secure a supplicant's MAC address once successfully authenticated.</p> <p>Multi 802.1X</p> <p>Multi 802.1X is - like Single 802.1X - not an IEEE standard, but a variant that features many of the same characteristics. In Multi 802.1X, one or more supplicants can get authenticated on the same port at the same time. Each supplicant is authenticated individually and secured in the MAC table using the Port Security module.</p> <p>In Multi 802.1X it is not possible to use the multicast BPDU MAC address as destination MAC address for EAPOL frames sent from the switch towards the supplicant, since that would cause all supplicants attached to the port to reply to requests sent from the switch. Instead, the switch uses the supplicant's MAC address, which is obtained from the first EAPOL Start or EAPOL Response Identity frame sent by the supplicant. An exception to this is when no supplicants are attached. In this case, the switch sends EAPOL Request Identity frames using the BPDU multicast MAC address as destination - to wake up any supplicants that might be on the port. The maximum number of supplicants that can be attached to a port can be limited using the Port Security Limit Control functionality.</p> <p>MAC-based Auth</p>
--	--

	<p>Unlike port-based 802.1X, MAC-based authentication is not a standard, but merely a best-practices method adopted by the industry. In MAC-based authentication, users are called clients, and the switch acts as the supplicant on behalf of clients. The initial frame (any kind of frame) sent by a client is snooped by the switch, which in turn uses the client's MAC address as both username and password in the subsequent EAP exchange with the RADIUS server. The 6-byte MAC address is converted to a string on the following form "xx-xx-xx-xx-xx-xx", that is, a dash (-) is used as separator between the lower-cased hexadecimal digits. The switch only supports the MD5-Challenge authentication method, so the RADIUS server must be configured accordingly.</p> <p>When authentication is complete, the RADIUS server sends a success or failure indication, which in turn causes the switch to open up or block traffic for that particular client, using the Port Security module. Only then will frames from the client be forwarded on the switch. There are no EAPOL frames involved in this authentication, and therefore, MAC-based Authentication has nothing to do with the 802.1X standard. The advantage of MAC-based authentication over 802.1X-based authentication is that the clients don't need special supplicant software to authenticate. The disadvantage is that MAC addresses can be spoofed by malicious users - equipment whose MAC address is a valid RADIUS user can be used by anyone. Also, only the MD5-Challenge method is supported. The maximum number of clients that can be attached to a port can be limited using the Port Security Limit Control functionality.</p>
<p>RADIUS-Assigned QoS Enabled</p>	<p>When RADIUS-Assigned QoS is both globally enabled and enabled (checked) on a given port, the switch reacts to QoS Class information carried in the RADIUS Access-Accept packet transmitted by the RADIUS server when a supplicant is successfully authenticated. If present and valid, traffic received on the supplicant's port will be classified to the given QoS Class. If (re-)authentication fails or the RADIUS Access-Accept packet no longer carries a QoS Class or it's invalid, or the supplicant is otherwise no longer present on the port, the port's QoS Class is immediately reverted to the original QoS Class (which may be changed by the administrator in the meanwhile without affecting the RADIUS-assigned).</p> <p>This option is only available for single-client modes, i.e.</p> <ul style="list-style-type: none"> • Port-based 802.1X • Single 802.1X <p><u>RADIUS attributes used in identifying a QoS Class:</u></p> <p>The User-Priority-Table attribute defined in RFC4675 forms the basis for identifying the QoS Class in an Access-Accept packet.</p> <p>Only the first occurrence of the attribute in the packet will be considered, and to be</p>

	<p>valid, it must follow this rule:</p> <ul style="list-style-type: none"> • All 8 octets in the attribute's value must be identical and consist of ASCII characters in the range '0' - '7', which translates into the desired QoS Class in the range [0; 7].
RADIUS-Assigned VLAN Enabled	<p>When RADIUS-Assigned VLAN is both globally enabled and enabled (checked) for a given port, the switch reacts to VLAN ID information carried in the RADIUS Access-Accept packet transmitted by the RADIUS server when a supplicant is successfully authenticated. If present and valid, the port's Port VLAN ID will be changed to this VLAN ID, the port will be set to be a member of that VLAN ID, and the port will be forced into VLAN unaware mode. Once assigned, all traffic arriving on the port will be classified and switched on the RADIUS-assigned VLAN ID.</p> <p>If (re-)authentication fails or the RADIUS Access-Accept packet no longer carries a VLAN ID or it's invalid, or the supplicant is otherwise no longer present on the port, the port's VLAN ID is immediately reverted to the original VLAN ID (which may be changed by the administrator in the meanwhile without affecting the RADIUS-assigned).</p> <p>This option is only available for single-client modes, i.e.</p> <ul style="list-style-type: none"> • Port-based 802.1X • Single 802.1X <p>For trouble-shooting VLAN assignments, use the "Monitor→VLANs→VLAN Membership and VLAN Port" pages. These pages show which modules have (temporarily) overridden the current Port VLAN configuration.</p> <p><u>RADIUS attributes used in identifying a VLAN ID:</u></p> <p>RFC2868 and RFC3580 form the basis for the attributes used in identifying a VLAN ID in an Access-Accept packet. The following criteria are used:</p> <ul style="list-style-type: none"> • The Tunnel-Medium-Type, Tunnel-Type, and Tunnel-Private-Group-ID attributes must all be present at least once in the Access-Accept packet. • The switch looks for the first set of these attributes that have the same Tag value and fulfil the following requirements (if Tag == 0 is used, the Tunnel-Private-Group-ID does not need to include a Tag): <ul style="list-style-type: none"> - Value of Tunnel-Medium-Type must be set to "IEEE-802" (ordinal 6). - Value of Tunnel-Type must be set to "VLAN" (ordinal 13). - Value of Tunnel-Private-Group-ID must be a string of ASCII chars in the range '0' - '9', which is interpreted as a decimal string representing the VLAN ID. Leading '0's are discarded. The final value must be in the range [1;4095].
Guest VLAN Enabled	<p>When Guest VLAN is both globally enabled and enabled (checked) for a given port, the switch considers moving the port into the Guest VLAN according to the rules</p>

	<p>outlined below.</p> <p>This option is only available for EAPOL-based modes, i.e.:</p> <ul style="list-style-type: none"> • Port-based 802.1X • Single 802.1X • Multi 802.1X <p>For trouble-shooting VLAN assignments, use the "Monitor→VLANs→VLAN Membership and VLAN Port" pages. These pages show which modules have (temporarily) overridden the current Port VLAN configuration.</p> <p><u>Guest VLAN Operation:</u></p> <p>When a Guest VLAN enabled port's link comes up, the switch starts transmitting EAPOL Request Identity frames. If the number of transmissions of such frames exceeds Max. Reauth. Count and no EAPOL frames have been received in the meanwhile, the switch considers entering the Guest VLAN. The interval between transmission of EAPOL Request Identity frames is configured with EAPOL Timeout. If Allow Guest VLAN if EAPOL Seen is enabled, the port will now be placed in the Guest VLAN. If disabled, the switch will first check its history to see if an EAPOL frame has previously been received on the port (this history is cleared if the port link goes down or the port's Admin State is changed), and if not, the port will be placed in the Guest VLAN. Otherwise it will not move to the Guest VLAN, but continue transmitting EAPOL Request Identity frames at the rate given by EAPOL Timeout.</p> <p>Once in the Guest VLAN, the port is considered authenticated, and all attached clients on the port are allowed access on this VLAN. The switch will not transmit an EAPOL Success frame when entering the Guest VLAN.</p> <p>While in the Guest VLAN, the switch monitors the link for EAPOL frames, and if one such frame is received, the switch immediately takes the port out of the Guest VLAN and starts authenticating the supplicant according to the port mode. If an EAPOL frame is received, the port will never be able to go back into the Guest VLAN if the "Allow Guest VLAN if EAPOL Seen" is disabled.</p>
<p>Port State</p>	<p>The current state of the port. It can undertake one of the following values:</p> <p>Globally Disabled: NAS is globally disabled.</p> <p>Link Down: NAS is globally enabled, but there is no link on the port.</p> <p>Authorized: The port is in Force Authorized or a single-supplicant mode and the supplicant is authorized.</p> <p>Unauthorized: The port is in Force Unauthorized or a single-supplicant mode and the supplicant is not successfully authorized by the RADIUS server.</p> <p>X Auth/Y Unauth: The port is in a multi-supplicant mode. Currently X clients are authorized and Y are unauthorized.</p>

Restart	<p>Two buttons are available for each row. The buttons are only enabled when authentication is globally enabled and the port's Admin State is in an EAPOL-based or MAC-based mode.</p> <p>Clicking these buttons will not cause settings changed on the page to take effect.</p> <p>Reauthenticate: Schedules a reauthentication whenever the quiet-period of the port runs out (EAPOL-based authentication). For MAC-based authentication, reauthentication will be attempted immediately.</p> <p>The button only has effect for successfully authenticated clients on the port and will not cause the clients to get temporarily unauthorized.</p> <p>Reinitialize: Forces a reinitialization of the clients on the port and thereby a reauthentication immediately. The clients will transfer to the unauthorized state while the reauthentication is in progress.</p>
----------------	---

Buttons	
	Click to refresh the page. Note that non-committed changes will be lost.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.42 ACL

2.3.43 ACL Port

Configure the ACL parameters ([ACE](#)) of each switch port. These parameters will affect frames received on a port unless the frame matches a specific ACE.





ACL Ports Configuration Refresh Clear

Port	Policy ID	Action	Rate Limiter ID	Port Redirect	Mirror	Logging	Shutdown	State	Counter
*	0	<>	<>	Disabled Port 1 Port 2	<>	<>	<>	<>	*
1	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
2	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	260014
3	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
4	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
5	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
6	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
7	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
8	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
9	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0
10	0	Permit	Disabled	Disabled Port 1 Port 2	Disabled	Disabled	Disabled	Enabled	0

Save Reset

Object	Description
Port	The logical port for the settings contained in the same row.
Policy ID	Select the policy to apply to this port. The allowed values are 0 through 255. The default value is 0.
Action	Select whether forwarding is permitted ("Permit") or denied ("Deny"). The default value is "Permit".
Rate Limiter ID	Select which rate limiter to apply on this port. The allowed values are Disabled or the values 1 through 16. The default value is "Disabled".
Port Redirect	Select which port frames are redirected on. The allowed values are Disabled or a specific port number and it can't be set when action is permitted. The default value is "Disabled".
Mirror	Specify the mirror operation of this port. The allowed values are: Enabled: Frames received on the port are mirrored. Disabled: Frames received on the port are not mirrored. The default value is "Disabled".

Loggig	<p>Specify the logging operation of this port. Notice that the logging message doesn't include the 4 bytes CRC. The allowed values are:</p> <p>Enabled: Frames received on the port are stored in the System Log.</p> <p>Disabled: Frames received on the port are not logged.</p> <p>The default value is "Disabled". Note: The logging feature only works when the packet length is less than 1518(without VLAN tags) and the System Log memory size and logging rate is limited.</p>
Shutdown	<p>Specify the port shut down operation of this port. The allowed values are:</p> <p>Enabled: If a frame is received on the port, the port will be disabled.</p> <p>Disabled: Port shut down is disabled.</p> <p>The default value is "Disabled".</p> <p>Note: The shutdown feature only works when the packet length is less than 1518(without VLAN tags).</p>
State	<p>Specify the port state of this port. The allowed values are:</p> <p>Enabled: To reopen ports by changing the volatile port configuration of the ACL user module.</p> <p>Disabled: To close ports by changing the volatile port configuration of the ACL user module.</p> <p>The default value is "Enabled".</p>
Counter	Counts the number of frames that match this ACE.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.
	Click to refresh the page; any changes made locally will be undone.
	Click to clear the counters.

2.3.44 ACL Rate Limiters

Configure the rate limiter for the [ACL](#) of the switch.

ACL Rate Limiter Configuration

Rate Limiter ID	Rate	Unit
*	1	<> ▾
1	1	pps ▾
2	1	pps ▾
3	1	pps ▾
4	1	pps ▾
5	1	pps ▾
6	1	pps ▾
7	1	pps ▾
8	1	pps ▾
9	1	pps ▾
10	1	pps ▾
11	1	pps ▾
12	1	pps ▾
13	1	pps ▾
14	1	pps ▾
15	1	pps ▾
16	1	pps ▾

Object	Description
Rate Limiter ID	The rate limiter ID for the settings contained in the same row.
Rate	The rate range is located 0-3276700 in pps. Or 0, 100, 200, 300, . . . , 1000000 in kbps.

Unit	Specify the rate unit. The allowed values are: pps : packets per second. kbps : Kbits per second.
-------------	---

Buttons	
<input type="button" value="Save"/>	Click to save changes.







<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.
--------------------------------------	---

2.3.45 Access Control List

This page shows the Access Control List ([ACL](#)), which is made up of the [ACEs](#) defined on this switch. Each row describes the ACE that is defined. The maximum number of ACEs is **256** on each switch. Click on the lowest plus sign to add a new ACE to the list. The reserved ACEs used for internal protocol, cannot be edited or deleted, the order sequence cannot be changed and the priority is highest.

Access Control List Configuration								Auto-refresh <input type="checkbox"/>	<input type="button" value="Refresh"/>	<input type="button" value="Clear"/>	<input type="button" value="Remove All"/>
Ingress Port	Policy / Bitmask	Frame Type	Action	Rate Limiter	Port Redirect	Mirror	Counter	+			

Object	Description
Ingress Port	Indicates the ingress port of the ACE. Possible values are: All : The ACE will match all ingress port. Port : The ACE will match a specific ingress port.
Policy / Bitmask	Indicates the policy number and bitmask of the ACE.
Frame Type	Indicates the frame type of the ACE. Possible values are: Any : The ACE will match any frame type. EType : The ACE will match Ethernet Type frames. Note that an Ethernet Type based ACE will not get matched by IP and ARP frames. ARP : The ACE will match ARP/RARP frames. IPv4 : The ACE will match all IPv4 frames. IPv4/ICMP : The ACE will match IPv4 frames with ICMP protocol. IPv4/UDP : The ACE will match IPv4 frames with UDP protocol. IPv4/TCP : The ACE will match IPv4 frames with TCP protocol. IPv4/Other : The ACE will match IPv4 frames, which are not ICMP/UDP/TCP. IPv6 : The ACE will match all IPv6 standard frames.
Action	Indicates the forwarding action of the ACE. Permit : Frames matching the ACE may be forwarded and learned. Deny : Frames matching the ACE are dropped. Filter : Frames matching the ACE are filtered.
Rate Limiter	Indicates the rate limiter number of the ACE. The allowed range is 1 to 16 . When Disabled is displayed, the rate limiter operation is disabled.

Port Redirect	Indicates the port redirect operation of the ACE. Frames matching the ACE are
	redirected to the port number. The allowed values are Disabled or a specific port number. When Disabled is displayed, the port redirect operation is disabled.
Mirror	Specify the mirror operation of this port. Frames matching the ACE are mirrored to the destination mirror port. The allowed values are: Enabled : Frames received on the port are mirrored. Disabled : Frames received on the port are not mirrored. The default value is "Disabled".
Counter	The counter indicates the number of times the ACE was hit by a frame.
Modification Buttons	You can modify each ACE (Access Control Entry) in the table using the following buttons:  : Inserts a new ACE before the current row.  : Edits the ACE row.  : Moves the ACE up the list.  : Moves the ACE down the list.  : Deletes the ACE.  : The lowest plus sign adds a new entry at the bottom of the ACE listings.

Buttons	
<input type="checkbox"/> Auto-refresh	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page; any changes made locally will be undone.
<input type="button" value="Clear"/>	Click to clear the counters.
<input type="button" value="Remove All"/>	Click to remove all ACEs.

The ACE Configuration page includes the following fields:

ACE Configuration

Ingress Port	All Port 1 Port 2 Port 3 Port 4	Action	Permit
Policy Filter	Any	Rate Limiter	Disabled
Frame Type	Any	Mirror	Disabled
		Logging	Disabled
		Shutdown	Disabled
		Counter	0

VLAN Parameters

802.1Q Tagged	Any
VLAN ID Filter	Any
Tag Priority	Any

Object	Description
Ingress Port	Select the ingress port for which this ACE applies. All : The ACE applies to all port. Port n : The ACE applies to this port number, where <i>n</i> is the number of the switch port.
Policy Filter	Specify the policy number filter for this ACE. Any : No policy filter is specified. (policy filter status is "don't-care".) Specific : If you want to filter a specific policy with this ACE, choose this value. Two field for entering an policy value and bitmask appears.
Policy Value	When "Specific" is selected for the policy filter, you can enter a specific policy value. The allowed range is 0 to 255 .
Policy Bitmask	When "Specific" is selected for the policy filter, you can enter a specific policy bitmask. The allowed range is 0x0 to 0xff . Notice the usage of bitmask, if the binary bit value is "0", it means this bit is "don't-care". The real matched pattern is [policy_value & policy_bitmask]. For example, if the policy value is 3 and the policy bitmask is 0x10(bit 0 is "don't-care" bit), then policy 2 and 3 are applied to this rule.
Frame Type	Select the frame type for this ACE. These frame types are mutually exclusive. Any : Any frame can match this ACE. Ethernet Type : Only Ethernet Type frames can match this ACE. The IEEE 802.3 describes the value of Length/Type Field specifications to be greater than or equal to 1536 decimal (equal to 0600 hexadecimal). ARP : Only ARP frames can match this ACE. Notice the ARP frames won't match the ACE with ethernet type. IPv4 : Only IPv4 frames can match this ACE. Notice the IPv4 frames won't match the

	<p>ACE with ethernet type.</p> <p>IPv6: Only IPv6 frames can match this ACE. Notice the IPv6 frames won't match the ACE with Ethernet type.</p>
Action	<p>Specify the action to take with a frame that hits this ACE.</p> <p>Permit: The frame that hits this ACE is granted permission for the ACE operation.</p> <p>Deny: The frame that hits this ACE is dropped.</p> <p>Filter: Frames matching the ACE are filtered.</p>
Rate Limiter	<p>Specify the rate limiter in number of base units. The allowed range is 1 to 16.</p> <p>Disabled indicates that the rate limiter operation is disabled.</p>
Port Redirect	<p>Frames that hit the ACE are redirected to the port number specified here. The rate limiter will affect these ports. The allowed range is the same as the switch port number range. Disabled indicates that the port redirect operation is disabled and the specific port number of 'Port Redirect' can't be set when action is permitted.</p>
Mirror	<p>Specify the mirror operation of this port. Frames matching the ACE are mirrored to the destination mirror port. The rate limiter will not affect frames on the mirror port. The allowed values are:</p> <p>Enabled: Frames received on the port are mirrored.</p> <p>Disabled: Frames received on the port are not mirrored.</p> <p>The default value is "Disabled".</p>
Logging	<p>Specify the logging operation of the ACE. Notice that the logging message doesn't include the 4 bytes CRC information. The allowed values are:</p> <p>Enabled: Frames matching the ACE are stored in the System Log.</p> <p>Disabled: Frames matching the ACE are not logged.</p> <p>Note: The logging feature only works when the packet length is less than 1518(without VLAN tags) and the System Log memory size and logging rate is limited.</p>
Shutdown	<p>Specify the port shut down operation of the ACE. The allowed values are:</p> <p>Enabled: If a frame matches the ACE, the ingress port will be disabled.</p> <p>Disabled: Port shut down is disabled for the ACE.</p> <p>Note: The shutdown feature only works when the packet length is less than 1518(without VLAN tags).</p>
Counter	<p>The counter indicates the number of times the ACE was hit by a frame.</p>
MAC Parameters	
SMAC Filter	<p><i>(Only displayed when the frame type is Ethernet Type or ARP.)</i></p> <p>Specify the source MAC filter for this ACE.</p> <p>Any: No SMAC filter is specified. (SMAC filter status is "don't-care".)</p> <p>Specific: If you want to filter a specific source MAC address with this ACE, choose</p>
	<p>this value. A field for entering an SMAC value appears.</p>

SMAC Value	When "Specific" is selected for the SMAC filter, you can enter a specific source MAC address. The legal format is "xx-xx-xx-xx-xx-xx" or "xx.xx.xx.xx.xx.xx" or "xxxxxxxxxxx" (x is a hexadecimal digit). A frame that hits this ACE matches this SMAC value.
DMAC Filter	Specify the destination MAC filter for this ACE. Any : No DMAC filter is specified. (DMAC filter status is "don't-care".) MC : Frame must be multicast. BC : Frame must be broadcast. UC : Frame must be unicast. Specific : If you want to filter a specific destination MAC address with this ACE, choose this value. A field for entering a DMAC value appears.
DMAC Value	When "Specific" is selected for the DMAC filter, you can enter a specific destination MAC address. The legal format is "xx-xx-xx-xx-xx-xx" or "xx.xx.xx.xx.xx.xx" or "xxxxxxxxxxx" (x is a hexadecimal digit). A frame that hits this ACE matches this DMAC value.
VLAN Parameters	
802.1Q Tagged	Specify whether frames can hit the action according to the 802.1Q tagged. The allowed values are: Any : Any value is allowed ("don't-care"). Enabled : Tagged frame only. Disabled : Untagged frame only. The default value is "Any".
VLAN ID Filter	Specify the VLAN ID filter for this ACE. Any : No VLAN ID filter is specified. (VLAN ID filter status is "don't-care".) Specific : If you want to filter a specific VLAN ID with this ACE, choose this value. A field for entering a VLAN ID number appears.
VLAN ID	When "Specific" is selected for the VLAN ID filter, you can enter a specific VLAN ID number. The allowed range is 1 to 4095 . A frame that hits this ACE matches this VLAN ID value.
Tag Priority	Specify the tag priority for this ACE. A frame that hits this ACE matches this tag priority. The allowed number range is 0 to 7 or range 0-1 , 2-3 , 4-5 , 6-7 , 0-3 and 4-7 . The value Any means that no tag priority is specified (tag priority is "don't-care".)
ARP Parameters	
ARP/RARP	Specify the available ARP/RARP opcode (OP) flag for this ACE. Any : No ARP/RARP OP flag is specified. (OP is "don't-care".) ARP : Frame must have ARP opcode set to ARP.
	RARP : Frame must have RARP opcode set to RARP. Other : Frame has unknown ARP/RARP Opcode flag.

Request/Reply	<p>Specify the available Request/Reply opcode (OP) flag for this ACE.</p> <p>Any: No Request/Reply OP flag is specified. (OP is "don't-care".)</p> <p>Request: Frame must have ARP Request or RARP Request OP flag set.</p> <p>Reply: Frame must have ARP Reply or RARP Reply OP flag.</p>
Sender IP Filter	<p>Specify the sender IP filter for this ACE.</p> <p>Any: No sender IP filter is specified. (Sender IP filter is "don't-care".)</p> <p>Host: Sender IP filter is set to Host. Specify the sender IP address in the SIP Address field that appears.</p> <p>Network: Sender IP filter is set to Network. Specify the sender IP address and sender IP mask in the SIP Address and SIP Mask fields that appear.</p>
Sender IP Address	<p>When "Host" or "Network" is selected for the sender IP filter, you can enter a specific sender IP address in dotted decimal notation.</p>
Sender IP Mask	<p>When "Network" is selected for the sender IP filter, you can enter a specific sender IP mask in dotted decimal notation.</p>
Target IP Filter	<p>Specify the target IP filter for this specific ACE.</p> <p>Any: No target IP filter is specified. (Target IP filter is "don't-care".)</p> <p>Host: Target IP filter is set to Host. Specify the target IP address in the Target IP Address field that appears. Network: Target IP filter is set to Network. Specify the target IP address and target IP mask in the Target IP Address and Target IP Mask fields that appear.</p>
Target IP Address	<p>When "Host" or "Network" is selected for the target IP filter, you can enter a specific target IP address in dotted decimal notation.</p>
Target IP Mask	<p>When "Network" is selected for the target IP filter, you can enter a specific target IP mask in dotted decimal notation.</p>
ARP Sender MAC Match	<p>Specify whether frames can hit the action according to their sender hardware address field (SHA) settings.</p> <p>0: ARP frames where SHA is not equal to the SMAC address.</p> <p>1: ARP frames where SHA is equal to the SMAC address.</p> <p>Any: Any value is allowed ("don't-care").</p>
RARP Target MAC Match	<p>Specify whether frames can hit the action according to their target hardware address field (THA) settings.</p> <p>0: RARP frames where THA is not equal to the target MAC address.</p> <p>1: RARP frames where THA is equal to the target MAC address.</p> <p>Any: Any value is allowed ("don't-care").</p>
IP/Ethernet Length	<p>Specify whether frames can hit the action according to their ARP/RARP hardware</p>




	<p>address length (HLN) and protocol address length (PLN) settings.</p> <p>0: ARP/RARP frames where the HLN is not equal to Ethernet (0x06) or the (PLN) is not equal to IPv4 (0x04).</p> <p>1: ARP/RARP frames where the HLN is equal to Ethernet (0x06) and the (PLN) is equal to IPv4 (0x04).</p> <p>Any: Any value is allowed ("don't-care").</p>
IP	<p>Specify whether frames can hit the action according to their ARP/RARP hardware address space (HRD) settings.</p> <p>0: ARP/RARP frames where the HLD is not equal to Ethernet (1).</p> <p>1: ARP/RARP frames where the HLD is equal to Ethernet (1).</p> <p>Any: Any value is allowed ("don't-care").</p>
Ethernet	<p>Specify whether frames can hit the action according to their ARP/RARP protocol address space (PRO) settings.</p> <p>0: ARP/RARP frames where the PRO is not equal to IP (0x800).</p> <p>1: ARP/RARP frames where the PRO is equal to IP (0x800).</p> <p>Any: Any value is allowed ("don't-care").</p>
IP Parameters	
IP Protocol Filter	<p>Specify the IP protocol filter for this ACE.</p> <p>Any: No IP protocol filter is specified ("don't-care").</p> <p>Specific: If you want to filter a specific IP protocol filter with this ACE, choose this value. A field for entering an IP protocol filter appears.</p> <p>ICMP: Select ICMP to filter IPv4 ICMP protocol frames. Extra fields for defining ICMP parameters will appear. These fields are explained later in this help file.</p> <p>UDP: Select UDP to filter IPv4 UDP protocol frames. Extra fields for defining UDP parameters will appear. These fields are explained later in this help file.</p> <p>TCP: Select TCP to filter IPv4 TCP protocol frames. Extra fields for defining TCP parameters will appear. These fields are explained later in this help file.</p>
IP Protocol Value	<p>When "Specific" is selected for the IP protocol value, you can enter a specific value. The allowed range is 0 to 255. A frame that hits this ACE matches this IP protocol value.</p>
IP TTL	<p>Specify the Time-to-Live settings for this ACE.</p> <p>zero: IPv4 frames with a Time-to-Live field greater than zero must not be able to match this entry.</p> <p>non-zero: IPv4 frames with a Time-to-Live field greater than zero must be able to match this entry.</p> <p>Any: Any value is allowed ("don't-care").</p>
IP Fragment	<p>Specify the fragment offset settings for this ACE. This involves the settings for the</p>

	<p>More Fragments (MF) bit and the Fragment Offset (FRAG OFFSET) field for an IPv4 frame.</p> <p>No: IPv4 frames where the MF bit is set or the FRAG OFFSET field is greater than zero must not be able to match this entry.</p> <p>Yes: IPv4 frames where the MF bit is set or the FRAG OFFSET field is greater than zero must be able to match this entry.</p> <p>Any: Any value is allowed ("don't-care").</p>
IP Option	<p>Specify the options flag setting for this ACE.</p> <p>No: IPv4 frames where the options flag is set must not be able to match this entry.</p> <p>Yes: IPv4 frames where the options flag is set must be able to match this entry.</p> <p>Any: Any value is allowed ("don't-care").</p>
SIP Filter	<p>Specify the source IP filter for this ACE.</p> <p>Any: No source IP filter is specified. (Source IP filter is "don't-care".)</p> <p>Host: Source IP filter is set to Host. Specify the source IP address in the SIP Address field that appears.</p> <p>Network: Source IP filter is set to Network. Specify the source IP address and source IP mask in the SIP Address and SIP Mask fields that appear.</p>
SIP Address	<p>When "Host" or "Network" is selected for the source IP filter, you can enter a specific SIP address in dotted decimal notation.</p>
SIP Mask	<p>When "Network" is selected for the source IP filter, you can enter a specific SIP mask in dotted decimal notation.</p>
DIP Filter	<p>Specify the destination IP filter for this ACE.</p> <p>Any: No destination IP filter is specified. (Destination IP filter is "don't-care".)</p> <p>Host: Destination IP filter is set to Host. Specify the destination IP address in the DIP Address field that appears.</p> <p>Network: Destination IP filter is set to Network. Specify the destination IP address and destination IP mask in the DIP Address and DIP Mask fields that appear.</p>
DIP Address	<p>When "Host" or "Network" is selected for the destination IP filter, you can enter a specific DIP address in dotted decimal notation.</p>
DIP Mask	<p>When "Network" is selected for the destination IP filter, you can enter a specific DIP mask in dotted decimal notation.</p>
IPv6 Parameters	
Next Header Filter	<p>Specify the IPv6 next header filter for this ACE.</p> <p>Any: No IPv6 next header filter is specified ("don't-care").</p> <p>Specific: If you want to filter a specific IPv6 next header filter with this ACE, choose this value. A field for entering an IPv6 next header filter appears.</p> <p>ICMP: Select ICMP to filter IPv6 ICMP protocol frames. Extra fields for defining ICMP</p>

	<p>parameters will appear. These fields are explained later in this help file.</p> <p>UDP: Select UDP to filter IPv6 UDP protocol frames. Extra fields for defining UDP parameters will appear. These fields are explained later in this help file.</p> <p>TCP: Select TCP to filter IPv6 TCP protocol frames. Extra fields for defining TCP parameters will appear. These fields are explained later in this help file.</p>
Next Header Value	<p>When "Specific" is selected for the IPv6 next header value, you can enter a specific value. The allowed range is 0 to 255. A frame that hits this ACE matches this IPv6 protocol value.</p>
SIP Filter	<p>Specify the source IPv6 filter for this ACE.</p> <p>Any: No source IPv6 filter is specified. (Source IPv6 filter is "don't-care".)</p> <p>Specific: Source IPv6 filter is set to Network. Specify the source IPv6 address and source IPv6 mask in the SIP Address fields that appear.</p>
SIP address	<p>When "Specific" is selected for the source IPv6 filter, you can enter a specific SIPv6 address. The field only supported last 32 bits for IPv6 address.</p>
SIP BitMask	<p>When "Specific" is selected for the source IPv6 filter, you can enter a specific SIPv6 mask. The field only supported last 32 bits for IPv6 address. Notice the usage of bitmask, if the binary bit value is "0", it means this bit is "don't-care". The real matched pattern is [sipv6_address & sipv6_bitmask] (last 32 bits). For example, if the SIPv6 address is 2001::3 and the SIPv6 bitmask is 0xFFFFFFFF(bit 0 is "don't-care" bit), then SIPv6 address 2001::2 and 2001::3 are applied to this rule.</p>
Hop Limit	<p>Specify the hop limit settings for this ACE.</p> <p>zero: IPv6 frames with a hop limit field greater than zero must not be able to match this entry.</p> <p>non-zero: IPv6 frames with a hop limit field greater than zero must be able to match this entry.</p> <p>Any: Any value is allowed ("don't-care").</p>
ICMP Parameters	
ICMP Type Filter	<p>Specify the ICMP filter for this ACE.</p> <p>Any: No ICMP filter is specified (ICMP filter status is "don't-care").</p> <p>Specific: If you want to filter a specific ICMP filter with this ACE, you can enter a specific ICMP value. A field for entering an ICMP value appears.</p>
ICMP Type Value	<p>When "Specific" is selected for the ICMP filter, you can enter a specific ICMP value. The allowed range is 0 to 255. A frame that hits this ACE matches this ICMP value.</p>
ICMP Code Filter	<p>Specify the ICMP code filter for this ACE.</p> <p>Any: No ICMP code filter is specified (ICMP code filter status is "don't-care").</p> <p>Specific: If you want to filter a specific ICMP code filter with this ACE, you can enter a specific ICMP code value. A field for entering an ICMP code value appears.</p>

ICMP Code Value	When "Specific" is selected for the ICMP code filter, you can enter a specific ICMP code value. The allowed range is 0 to 255. A frame that hits this ACE matches this ICMP code value.
TCP/UDP Parameters	
TCP/UDP Source Filter	Specify the TCP/UDP source filter for this ACE. Any: No TCP/UDP source filter is specified (TCP/UDP source filter status is "don't-care"). Specific: If you want to filter a specific TCP/UDP source filter with this ACE, you can enter a specific TCP/UDP source value. A field for entering a TCP/UDP source value appears. Range: If you want to filter a specific TCP/UDP source range filter with this ACE, you can enter a specific TCP/UDP source range value. A field for entering a TCP/UDP source value appears.
TCP/UDP Source No.	When "Specific" is selected for the TCP/UDP source filter, you can enter a specific TCP/UDP source value. The allowed range is 0 to 65535. A frame that hits this ACE matches this TCP/UDP source value.
TCP/UDP Source Range	When "Range" is selected for the TCP/UDP source filter, you can enter a specific TCP/UDP source range value. The allowed range is 0 to 65535. A frame that hits this ACE matches this TCP/UDP source value.
TCP/UDP Destination Filter	Specify the TCP/UDP destination filter for this ACE. Any: No TCP/UDP destination filter is specified (TCP/UDP destination filter status is "don't-care"). Specific: If you want to filter a specific TCP/UDP destination filter with this ACE, you can enter a specific TCP/UDP destination value. A field for entering a TCP/UDP destination value appears. Range: If you want to filter a specific range TCP/UDP destination filter with this ACE, you can enter a specific TCP/UDP destination range value. A field for entering a TCP/UDP destination value appears.
TCP/UDP Destination Number	When "Specific" is selected for the TCP/UDP destination filter, you can enter a specific TCP/UDP destination value. The allowed range is 0 to 65535. A frame that hits this ACE matches this TCP/UDP destination value.
TCP/UDP Destination Range	When "Range" is selected for the TCP/UDP destination filter, you can enter a specific TCP/UDP destination range value. The allowed range is 0 to 65535. A frame that hits this ACE matches this TCP/UDP destination value.
TCP FIN	Specify the TCP "No more data from sender" (FIN) value for this ACE. 0: TCP frames where the FIN field is set must not be able to match this entry. 1: TCP frames where the FIN field is set must be able to match this entry.
	Any: Any value is allowed ("don't-care").

TCP SYN	Specify the TCP "Synchronize sequence numbers" (SYN) value for this ACE. 0 : TCP frames where the SYN field is set must not be able to match this entry. 1 : TCP frames where the SYN field is set must be able to match this entry. Any : Any value is allowed ("don't-care").
TCP RST	Specify the TCP "Reset the connection" (RST) value for this ACE. 0 : TCP frames where the RST field is set must not be able to match this entry. 1 : TCP frames where the RST field is set must be able to match this entry. Any : Any value is allowed ("don't-care").
TCP PSH	Specify the TCP "Push Function" (PSH) value for this ACE. 0 : TCP frames where the PSH field is set must not be able to match this entry. 1 : TCP frames where the PSH field is set must be able to match this entry. Any : Any value is allowed ("don't-care").
TCP ACK	Specify the TCP "Acknowledgment field significant" (ACK) value for this ACE. 0 : TCP frames where the ACK field is set must not be able to match this entry. 1 : TCP frames where the ACK field is set must be able to match this entry. Any : Any value is allowed ("don't-care").
TCP URG	Specify the TCP "Urgent Pointer field significant" (URG) value for this ACE. 0 : TCP frames where the URG field is set must not be able to match this entry. 1 : TCP frames where the URG field is set must be able to match this entry. Any : Any value is allowed ("don't-care").
Ethernet Type Parameters	
EtherType Filter	Specify the Ethernet type filter for this ACE. Any : No EtherType filter is specified (EtherType filter status is "don't-care"). Specific : If you want to filter a specific EtherType filter with this ACE, you can enter a specific EtherType value. A field for entering a EtherType value appears.
Ethernet Type Value	When "Specific" is selected for the EtherType filter, you can enter a specific EtherType value. The allowed range is 0x600 to 0xFFFF but excluding 0x800(IPv4), 0x806(ARP) and 0x86DD(IPv6). A frame that hits this ACE matches this EtherType value.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.
	Return to the previous page.

2.3.46 IP Source Guard

2.3.47 IP Source Guard Configuration

This page provides [IP Source Guard](#) related configuration.

IP Source Guard Configuration

Mode | Disabled ▾

Port Mode Configuration

Port	Mode	Max Dynamic Clients
*	<> ▾	<> ▾
1	Disabled ▾	Unlimited ▾
2	Disabled ▾	Unlimited ▾
3	Disabled ▾	Unlimited ▾
4	Disabled ▾	Unlimited ▾
5	Disabled ▾	Unlimited ▾
6	Disabled ▾	Unlimited ▾
7	Disabled ▾	Unlimited ▾
8	Disabled ▾	Unlimited ▾
9	Disabled ▾	Unlimited ▾
10	Disabled ▾	Unlimited ▾

|

Object	Description
Mode of IP Source Guard Configuration	Enable the Global IP Source Guard or disable the Global IP Source Guard. All configured ACEs will be lost when the mode is enabled.
Port Mode Configuration	Specify IP Source Guard is enabled on which ports. Only when both Global Mode and Port Mode on a given port are enabled, IP Source Guard is enabled on this given port.

Max Dynamic Clients	Specify the maximum number of dynamic clients that can be learned on given port. This value can be 0, 1, 2 or unlimited. If the port mode is enabled and the value of max dynamic client is equal to 0, it means only allow the IP packets forwarding that are matched in static entries on the specific port.
----------------------------	--

Buttons	
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.
<input type="button" value="Translate dynamic to static"/>	Click to translate all dynamic entries to static entries.

2.3.48 IP Source Guard Static Table

Static IP Source Guard Table

Delete	Port	VLAN ID	IP Address	MAC address
<input type="button" value="Add New Entry"/>				
<input type="button" value="Save"/>		<input type="button" value="Reset"/>		

Object	Description
Delete	Check to delete the entry. It will be deleted during the next save.
Port	The logical port for the settings.
VLAN ID	The vlan id for the settings.
IP Address	Allowed Source IP address.
MAC address	Allowed Source MAC address.

Buttons	
<input type="button" value="Add New Entry"/>	Click to add a new entry to the Static IP Source Guard table.

<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.49 ARP Inspection

2.3.50 Port Configuration

This page provides [ARP Inspection](#) related configuration.

ARP Inspection Configuration

Mode | Disabled ▾

Port Mode Configuration




Port	Mode	Check VLAN	Log Type
*	<> ▾	<> ▾	<> ▾
1	Disabled ▾	Disabled ▾	None ▾
2	Disabled ▾	Disabled ▾	None ▾
3	Disabled ▾	Disabled ▾	None ▾
4	Disabled ▾	Disabled ▾	None ▾
5	Disabled ▾	Disabled ▾	None ▾
6	Disabled ▾	Disabled ▾	None ▾
7	Disabled ▾	Disabled ▾	None ▾
8	Disabled ▾	Disabled ▾	None ▾
9	Disabled ▾	Disabled ▾	None ▾
10	Disabled ▾	Disabled ▾	None ▾

|

Object	Description
--------	-------------

Mode of ARP Inspection Configuration	Enable the Global ARP Inspection or disable the Global ARP Inspection.
Port Mode Configuration	Specify ARP Inspection is enabled on which ports. Only when both Global Mode and Port Mode on a given port are enabled, ARP Inspection is enabled on this given port.

	<p>Possible modes are:</p> <p>Enabled: Enable ARP Inspection operation.</p> <p>Disabled: Disable ARP Inspection operation.</p> <p>If you want to inspect the VLAN configuration, you have to enable the setting of "Check VLAN". The default setting of "Check VLAN" is disabled. When the setting of "Check VLAN" is disabled, the log type of ARP Inspection will refer to the port setting. And the setting of "Check VLAN" is enabled, the log type of ARP Inspection will refer to the VLAN setting. Possible setting of "Check VLAN" are:</p> <p>Enabled: Enable check VLAN operation.</p> <p>Disabled: Disable check VLAN operation.</p> <p>Only the Global Mode and Port Mode on a given port are enabled, and the setting of "Check VLAN" is disabled, the log type of ARP Inspection will refer to the port setting. There are four log types and possible types are:</p> <p>None: Log nothing.</p> <p>Deny: Log denied entries.</p> <p>Permit: Log permitted entries.</p> <p>ALL: Log all entries.</p>
--	---

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.
	Click to translate all dynamic entries to static entries.

2.3.51 VLAN Configuration

Each page shows up to 9999 entries from the VLAN table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the VLAN Table. The first displayed will be the one with the lowest VLAN ID found in the VLAN Table.

The "VLAN" input fields allow the user to select the starting point in the VLAN Table. Clicking the button will update the displayed table starting from that or the closest next VLAN Table match. The will use the next entry of the currently displayed VLAN entry as a basis for the next lookup. When the end is reached the warning message is shown in the displayed table. Use the button to start over.

VLAN Mode Configuration Refresh |<< >>

Start from VLAN with entries per page.

Delete	VLAN ID	Log Type
Add New Entry		
Save Reset		

Specify ARP Inspection is enabled on which VLANs. First, you have to enable the port setting on Port mode configuration web page. Only when both Global Mode and Port Mode on a given port are enabled, ARP Inspection is enabled on this given port. Second, you can specify which VLAN will be inspected on VLAN mode configuration web page. The log type also can be configured on per VLAN setting.




Possible types are:

None: Log nothing.

Deny: Log denied entries.

Permit: Log permitted entries.

ALL: Log all entries

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.
	Click to add a new VLAN to the ARP Inspection VLAN table.

2.3.52 Static Table

Static ARP Inspection Table

Delete	Port	VLAN ID	MAC Address	IP Address
<input type="button" value="Add New Entry"/>				
<input type="button" value="Save"/>		<input type="button" value="Reset"/>		

Object	Description
Delete	Check to delete the entry. It will be deleted during the next save.
Port	The logical port for the settings
VLAN ID	The vlan id for the settings.
MAC Address	Allowed Source MAC address in ARP request packets.
IP Address	Allowed Source IP address in ARP request packets.

Buttons	
<input type="button" value="Add New Entry"/>	Click to add a new entry to the Static ARP Inspection table.
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.53 Dynamic Table

Each page shows up to 99 entries from the Dynamic ARP Inspection table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the Dynamic ARP Inspection Table.

The "Start from port address", "VLAN", "MAC address" and "IP address" input fields allow the user to select the starting point in the Dynamic ARP Inspection Table. Clicking the button will update the displayed table starting from that or the closest next Dynamic ARP Inspection Table match. In addition, the two input fields will - upon a button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address.

The will use the last entry of the currently displayed table as a basis for the next lookup. When the end is

reached the text "No more entries" is shown in the displayed table. Use the button to start over.

Dynamic ARP Inspection Table Auto-refresh Refresh |<< >>

Start from Port 1 , VLAN 1 , MAC address 00-00-00-00-00-00 and IP address 0.0.0.0 with 20 entries per page.

Port	VLAN ID	MAC Address	IP Address	Translate to static
No more entries				

Object	Description
Port	Switch Port Number for which the entries are displayed.
VLAN ID	VLAN-ID in which the ARP traffic is permitted.
MAC Address	User MAC address of the entry.
IP Address	User IP address of the entry.
Translate to static	Select the checkbox to translate the entry to static entry.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Refreshes the displayed table starting from the input fields.
<input type="button" value="Save"/>	Click to save changes.

<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.
<input type="button" value=" <<"/>	Updates the table starting from the first entry in the Dynamic ARP Inspection Table.
<input type="button" value=">>"/>	Updates the table, starting with the entry after the last entry currently displayed.

2.3.54 AAA

2.3.55 RADIUS

This page allows you to configure the [RADIUS](#) servers.

RADIUS Server Configuration

Global Configuration

Timeout	5	seconds
Retransmit	3	times
Deadtime	0	minutes
Key	<input type="text"/>	
NAS-IP-Address	<input type="text"/>	
NAS-IPv6-Address	<input type="text"/>	
NAS-Identifier	<input type="text"/>	





Server Configuration

Delete	Hostname	Auth Port	Acct Port	Timeout	Retransmit	Key
--------	----------	-----------	-----------	---------	------------	-----

Object	Description
Global Configuration	
Timeout	Timeout is the number of seconds, in the range 1 to 1000, to wait for a reply from a RADIUS server before retransmitting the request.
Retransmit	Retransmit is the number of times, in the range 1 to 1000, a RADIUS request is retransmitted to a server that is not responding. If the server has not responded after the last retransmit it is considered to be dead.
Deadtime	Deadtime, which can be set to a number between 0 to 1440 minutes, is the period during which the switch will not send new requests to a server that has failed to respond to a previous request. This will stop the switch from continually trying to

	contact a server that it has already determined as dead. Setting the Deadtime to a value greater than 0 (zero) will enable this feature, but only if more than one server has been configured.
Key	The secret key - up to 63 characters long - shared between the RADIUS server and the switch.
NAS-IP-Address(Attribute 4)	The IPv4 address to be used as attribute 4 in RADIUS Access-Request packets. If this field is left blank, the IP address of the outgoing interface is used.
NAS-IPv6-Address(Attribute 95)	The IPv6 address to be used as attribute 95 in RADIUS Access-Request packets. If this field is left blank, the IP address of the outgoing interface is used.

NAS-Identifier (Attribute 32)	The identifier - up to 253 characters long - to be used as attribute 32 in RADIUS Access-Request packets. If this field is left blank, the NAS-Identifier is not included in the packet.
Server Configuration	
Delete	To delete a RADIUS server entry, check this box. The entry will be deleted during the next Save.
Hostname	The IP address or hostname of the RADIUS server.
Auth Port	The UDP port to use on the RADIUS server for authentication.
Acct Port	The UDP port to use on the RADIUS server for accounting.
Timeout	This optional setting overrides the global timeout value. Leaving it blank will use the global timeout value.
Retransmit	This optional setting overrides the global retransmit value. Leaving it blank will use the global retransmit value.
Key	This optional setting overrides the global key. Leaving it blank will use the global key.

Buttons	
	Click to add a new RADIUS server, up to 5 servers are supported.
	The button can be used to undo the addition of the new server.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.56 TACACS+

This page allows you to configure the [TACACS+](#) servers.

TACACS+ Server Configuration

Global Configuration

Timeout	5	seconds
Deadtime	0	minutes
Key		





Server Configuration

Delete	Hostname	Port	Timeout	Key
--------	----------	------	---------	-----

Add New Server

Save Reset

Object	Description
Global Configuration	
Timeout	Timeout is the number of seconds, in the range 1 to 1000, to wait for a reply from a TACACS+ server before it is considered to be dead.
Deadtime	Deadtime, which can be set to a number between 0 to 1440 minutes, is the period during which the switch will not send new requests to a server that has failed to respond to a previous request. This will stop the switch from continually trying to contact a server that it has already determined as dead. Setting the Deadtime to a value greater than 0 (zero) will enable this feature, but only if more than one server has been configured.
Key	The secret key - up to 63 characters long - shared between the TACACS+ server and the switch.
Server Configuration	
Delete	To delete a TACACS+ server entry, check this box. The entry will be deleted during
	the next Save.
Hostname	The IP address or hostname of the TACACS+ server.
Port	The TCP port to use on the TACACS+ server for authentication.
Timeout	This optional setting overrides the global timeout value. Leaving it blank will use the global timeout value.
Key	This optional setting overrides the global key. Leaving it blank will use the global key.

Buttons	
	Click to add a new TACACS+ server, up to 5 servers are supported.
	The button can be used to undo the addition of the new server.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.57 Aggregation

2.3.58 Static Aggregation



This page is used to configure the [Aggregation](#) hash mode and the aggregation group.

Aggregation Mode Configuration

Hash Code Contributors	
Source MAC Address	<input checked="" type="checkbox"/>
Destination MAC Address	<input type="checkbox"/>
IP Address	<input checked="" type="checkbox"/>
TCP/UDP Port Number	<input checked="" type="checkbox"/>



Aggregation Group Configuration

Group ID	Port Members									
	1	2	3	4	5	6	7	8	9	10
Normal	●	●	●	●	●	●	●	●	●	●
1	○	○	○	○	○	○	○	○	○	○
2	○	○	○	○	○	○	○	○	○	○
3	○	○	○	○	○	○	○	○	○	○
4	○	○	○	○	○	○	○	○	○	○
5	○	○	○	○	○	○	○	○	○	○

Object	Description
Hash Code Contributors	
Source MAC Address	The Source MAC address can be used to calculate the destination port for the frame. Check to enable the use of the Source MAC address, or uncheck to disable. By default, Source MAC Address is enabled.
Destination MAC Address	The Destination MAC Address can be used to calculate the destination port for the frame. Check to enable the use of the Destination MAC Address, or uncheck to

	disable. By default, Destination MAC Address is disabled.
IP Address	The IP address can be used to calculate the destination port for the frame. Check to enable the use of the IP Address, or uncheck to disable. By default, IP Address is enabled.
TCP/UDP Port Number	The TCP/UDP port number can be used to calculate the destination port for the frame. Check to enable the use of the TCP/UDP Port Number, or uncheck to disable. By default, TCP/UDP Port Number is enabled.
Aggregation Group Configuration	
Group ID	Indicates the group ID for the settings contained in the same row. Group ID "Normal" indicates there is no aggregation. Only one group ID is valid per port.
Port Members	Each switch port is listed for each group ID. Select a radio button to include a port in an aggregation, or clear the radio button to remove the port from the aggregation. By default, no ports belong to any aggregation group. Only full duplex ports can join an aggregation and ports must be in the same speed in each group.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.59 LACP Aggregation

This page allows the user to inspect the current [LACP](#) port configurations, and possibly change them as well.

LACP Port Configuration

Port	LACP Enabled	Key	Role	Timeout	Prio
*	<input type="checkbox"/>	<> ▾	<> ▾	<> ▾	32768
1	<input type="checkbox"/>	Auto ▾	Active ▾	Fast ▾	32768
2	<input type="checkbox"/>	Auto ▾	Active ▾	Fast ▾	32768
3	<input type="checkbox"/>	Auto ▾	Active ▾	Fast ▾	32768
4	<input type="checkbox"/>	Auto ▾	Active ▾	Fast ▾	32768
5	<input type="checkbox"/>	Auto ▾	Active ▾	Fast ▾	32768
6	<input type="checkbox"/>	Auto ▾	Active ▾	Fast ▾	32768
7	<input type="checkbox"/>	Auto ▾	Active ▾	Fast ▾	32768
8	<input type="checkbox"/>	Auto ▾	Active ▾	Fast ▾	32768
9	<input type="checkbox"/>	Auto ▾	Active ▾	Fast ▾	32768
10	<input type="checkbox"/>	Auto ▾	Active ▾	Fast ▾	32768

Object	Description
Port	The switch port number.
LACP Enabled	Controls whether LACP is enabled on this switch port. LACP will form an aggregation when 2 or more ports are connected to the same partner.
Key	The Key value incurred by the port, range 1-65535 . The Auto setting will set the key as appropriate by the physical link speed, 10Mb = 1, 100Mb = 2, 1Gb = 3. Using the Specific setting, a user-defined value can be entered. Ports with the same Key value can participate in the same aggregation group, while ports with different keys cannot.
Role	The Role shows the LACP activity status. The Active will transmit LACP packets each second, while Passive will wait for a LACP packet from a partner (speak if spoken to).

Timeout	The Timeout controls the period between BPDU transmissions. Fast will transmit LACP packets each second, while Slow will wait for 30 seconds before sending a LACP packet.
Prio	The Prio controls the priority of the port. If the LACP partner wants to form a larger group than is supported by this device then this parameter will control which ports will be active and which ports will be in a backup role. Lower number means greater priority.

Buttons	
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.60 Loop Protection

This page allows the user to inspect the current Loop Protection configurations, and possibly change them as well.

Loop Protection Configuration

General Settings

Global Configuration		
Enable Loop Protection	Disable ▾	
Transmission Time	5	seconds
Shutdown Time	180	seconds



Port Configuration

Port	Enable	Action	Tx Mode
*	<input checked="" type="checkbox"/>	<> ▾	<> ▾
1	<input checked="" type="checkbox"/>	Shutdown Port ▾	Enable ▾
2	<input checked="" type="checkbox"/>	Shutdown Port ▾	Enable ▾
3	<input checked="" type="checkbox"/>	Shutdown Port ▾	Enable ▾
4	<input checked="" type="checkbox"/>	Shutdown Port ▾	Enable ▾
5	<input checked="" type="checkbox"/>	Shutdown Port ▾	Enable ▾
6	<input checked="" type="checkbox"/>	Shutdown Port ▾	Enable ▾
7	<input checked="" type="checkbox"/>	Shutdown Port ▾	Enable ▾
8	<input checked="" type="checkbox"/>	Shutdown Port ▾	Enable ▾
9	<input checked="" type="checkbox"/>	Shutdown Port ▾	Enable ▾
10	<input checked="" type="checkbox"/>	Shutdown Port ▾	Enable ▾

Object	Description
General Settings	

Enable Loop Protection	Controls whether loop protections is enabled (as a whole).
Transmission Time	The interval between each loop protection PDU sent on each port, valid values are 1 to 10 seconds.
Shutdown Time	The period (in seconds) for which a port will be kept disabled in the event of a loop is detected (and the port action shuts down the port). Valid values are 0 to 604800 seconds (7 days). A value of zero will keep a port disabled (until next device restart).

Port Configuration	
Port	The switch port number of the port.
Enable	Controls whether loop protection is enabled on this switch port.
Action	Configures the action performed when a loop is detected on a port. Valid values are Shutdown Port , Shutdown Port and Log or Log Only .
Tx Mode	Controls whether the port is actively generating loop protection PDU's, or whether it is just passively looking for looped PDU's.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.61 Spanning Tree

2.3.62 Bridge Settings

This page allows you to configure STP system settings. The settings are used by all STP Bridge instances in the Switch

STP Bridge Configuration

Basic Settings



Protocol Version	MSTP ▼
Bridge Priority	32768 ▼
Forward Delay	15
Max Age	20
Maximum Hop Count	20
Transmit Hold Count	6

Advanced Settings

Edge Port BPDU Filtering	<input type="checkbox"/>
Edge Port BPDU Guard	<input type="checkbox"/>
Port Error Recovery	<input type="checkbox"/>
Port Error Recovery Timeout	<input style="width: 100%;" type="text"/>

Object	Description
Basic Settings	
Protocol Version	The MSTP / RSTP / STP protocol version setting. Valid values are STP , RSTP and MSTP .
Bridge Priority	Controls the bridge priority. Lower numeric values have better priority. The bridge priority plus the MSTI instance number, concatenated with the 6-byte MAC address of the switch forms a <i>Bridge Identifier</i> . For MSTP operation, this is the priority of the CIST. Otherwise, this is the priority of the STP/RSTP bridge
Forward Delay	The delay used by STP Bridges to transit Root and Designated Ports to Forwarding (used in STP compatible mode). Valid values are in the range 4 to 30 seconds.
Max Age	The maximum age of the information transmitted by the Bridge when it is the Root Bridge. Valid values are in the range 6 to 40 seconds
Maximum Hop Count	This defines the initial value of remaining Hops for MSTI information generated at the boundary of an MSTI region. It defines how many bridges a root bridge can distribute its BPDU information to. Valid values are in the range 6 to 40 hops.

Transmit Hold Count	The number of BPDU's a bridge port can send per second. When exceeded, transmission of the next BPDU will be delayed. Valid values are in the range 1 to 10 BPDU's per second.
Advanced Settings	
Edge Port BPDU Filtering	Control whether a port <i>explicitly</i> configured as Edge will transmit and receive BPDUs.
Edge Port BPDU Guard	Control whether a port <i>explicitly</i> configured as Edge will disable itself upon reception of a BPDU. The port will enter the <i>error-disabled</i> state, and will be removed from the active topology.
Port Error Recovery	Control whether a port in the <i>error-disabled</i> state automatically will be enabled after a certain time. If recovery is not enabled, ports have to be disabled and re-enabled for normal STP operation. The condition is also cleared by a system reboot.
Port Error Recovery Timeout	The time to pass before a port in the <i>error-disabled</i> state can be enabled. Valid values are between 30 and 86400 seconds (24 hours).

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.63 MSTI Mapping

This page allows the user to inspect the current [STP](#) MSTI bridge instance priority configurations, and possibly change them as well.

MSTI Configuration

Add VLANs separated by spaces or comma.

Unmapped VLANs are mapped to the CIST. (The default bridge instance).

Configuration Identification

Configuration Name	00-ed-90-90-ac-bc
Configuration Revision	0

MSTI Mapping

MSTI	VLANs Mapped
MSTI1	⌵
MSTI2	⌵
MSTI3	⌵
MSTI4	⌵
MSTI5	⌵
MSTI6	⌵
MSTI7	⌵

Object	Description
Configuration Identification	
Configuration Name	The name identifying the VLAN to MSTI mapping. Bridges must share the name and revision (see below), as well as the VLAN-to-MSTI mapping configuration in order to share spanning trees for MSTI's (Intra-region). The name is at most 32 characters.
Configuration Revision	The revision of the MSTI configuration named above. This must be an integer between 0 and 65535.
MSTI Mapping	

MSTI	The bridge instance. The CIST is not available for explicit mapping, as it will receive the VLANs not explicitly mapped.
VLANs Mapped	The list of VLANs mapped to the MSTI. The VLANs can be given as a single (xx , xx being between 1 and 4094) VLAN, or a range (xx-yy), each of which must be separated with comma and/or space. A VLAN can only be mapped to <i>one</i> MSTI. An unused MSTI should just be left empty. (I.e. not having any VLANs mapped to it.) Example: 2, 5, 20-40 .

Buttons	
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.64 MSTI Priorities

This page allows the user to inspect the current [STP](#) MSTI bridge instance priority configurations, and possibly change them as well.

MSTI Configuration

MSTI Priority Configuration

MSTI	Priority
*	<> ▾
CIST	32768 ▾
MSTI1	32768 ▾
MSTI2	32768 ▾
MSTI3	32768 ▾
MSTI4	32768 ▾
MSTI5	32768 ▾
MSTI6	32768 ▾
MSTI7	32768 ▾

Object	Description
MSTI	The bridge instance. The CIST is the <i>default</i> instance, which is always active.
Priorities	Controls the bridge priority. Lower numeric values have better priority. The bridge priority plus the MSTI instance number, concatenated with the 6-byte MAC address of the switch forms a <i>Bridge Identifier</i> .

Buttons	
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.65 CIST Ports

This page allows the user to inspect the current [STP](#) CIST port configurations, and possibly change them as well.

This page contains settings for physical and [aggregated](#) ports.

STP CIST Port Configuration

CIST Aggregated Port Configuration

Port	STP Enabled	Path Cost	Priority	Admin Edge	Auto Edge	Restricted		BPDU Guard	Point-to-point
						Role	TCN		
-	<input checked="" type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Forced True

CIST Normal Port Configuration

Port	STP Enabled	Path Cost	Priority	Admin Edge	Auto Edge	Restricted		BPDU Guard	Point-to-point
						Role	TCN		
*	<input checked="" type="checkbox"/>	<>	<>	<>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<>
1	<input checked="" type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
2	<input checked="" type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
3	<input checked="" type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
4	<input checked="" type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
5	<input checked="" type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
6	<input checked="" type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
7	<input checked="" type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
8	<input checked="" type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
9	<input checked="" type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto
10	<input checked="" type="checkbox"/>	Auto	128	Non-Edge	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Auto

Object	Description
Port	The switch port number of the logical STP port.

STP Enabled	Controls whether STP is enabled on this switch port.
Path Cost	Controls the path cost incurred by the port. The Auto setting will set the path cost as appropriate by the physical link speed, using the 802.1D recommended values. Using the Specific setting, a user-defined value can be entered. The path cost is used when establishing the active topology of the network. Lower path cost ports are chosen as forwarding ports in favour of higher path cost ports. Valid values are in the
	range 1 to 200000000.
Priority	Controls the port priority. This can be used to control priority of ports having identical port cost. (See above).
operEdge (state flag)	Operational flag describing whether the port is connecting directly to edge devices. (No Bridges attached). Transition to the forwarding state is faster for edge ports (having <i>operEdge true</i>) than for other ports. The value of this flag is based on AdminEdge and AutoEdge fields. This flag is displayed as Edge in Monitor->Spanning Tree -> STP Detailed Bridge Status.
AdminEdge	Controls whether the <i>operEdge</i> flag should start as set or cleared. (The initial <i>operEdge</i> state when a port is initialized).
AutoEdge	Controls whether the bridge should enable automatic edge detection on the bridge port. This allows <i>operEdge</i> to be derived from whether BPDU's are received on the port or not.
Restricted Role	If enabled, causes the port not to be selected as Root Port for the CIST or any MSTI, even if it has the best spanning tree priority vector. Such a port will be selected as an Alternate Port after the Root Port has been selected. If set, it can cause lack of spanning tree connectivity. It can be set by a network administrator to prevent bridges external to a core region of the network influence the spanning tree active topology, possibly because those bridges are not under the full control of the administrator. This feature is also known as Root Guard .
Restricted TCN	If enabled, causes the port not to propagate received topology change notifications and topology changes to other ports. If set it can cause temporary loss of connectivity after changes in a spanning tree's active topology as a result of persistently incorrect learned station location information. It is set by a network administrator to prevent bridges external to a core region of the network, causing address flushing in that region, possibly because those bridges are not under the full control of the administrator or the physical link state of the attached LANs transits frequently.
BPDU Guard	If enabled, causes the port to disable itself upon receiving valid BPDU's. Contrary to the similar bridge setting, the port Edge status does not effect this setting. A port entering error-disabled state due to this setting is subject to the bridge Port Error Recovery setting as well.

Point-to-Point	Controls whether the port connects to a point-to-point LAN rather than to a shared medium. This can be automatically determined, or forced either true or false. Transition to the forwarding state is faster for point-to-point LANs than for shared media.
-----------------------	--

Buttons	
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.66 MSTI Ports

This page allows the user to inspect the current [STP](#) MSTI port configurations, and possibly change them as well.

An MSTI port is a virtual port, which is instantiated separately for each active CIST (physical) port for each MSTI instance configured on and applicable to the port. The MSTI instance must be selected before displaying actual MSTI port configuration options.

This page contains MSTI port settings for physical and [aggregated](#) ports.

MSTI Port Configuration

Click to retrieve settings for a specific MSTI, the page displayed as follow.

MST1 MSTI Port Configuration

MSTI Aggregated Ports Configuration

Port	Path Cost	Priority
-	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>

MSTI Normal Ports Configuration

Port	Path Cost	Priority
*	<> <input type="button" value="v"/>	<> <input type="button" value="v"/>
1	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
2	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
3	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
4	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
5	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
6	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
7	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
8	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
9	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>
10	Auto <input type="button" value="v"/>	128 <input type="button" value="v"/>

Object	Description
Port	The switch port number of the corresponding STP CIST (and MSTI) port.
Path Cost	Controls the path cost incurred by the port. The Auto setting will set the path cost as appropriate by the physical link speed, using the 802.1D recommended values. Using the Specific setting, a user-defined value can be entered. The path cost is used when establishing the active topology of the network. Lower path cost ports are chosen as forwarding ports in favour of higher path cost ports. Valid values are in the range 1 to 200000000.
Priority	Controls the port priority. This can be used to control priority of ports having identical port cost. (See above).

Buttons	
<input type="button" value="Get"/>	Click to retrieve settings for a specific MSTI.

<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.67 IPMC Profile

2.3.68 Profile Table



This page provides [IPMC Profile](#) related configurations.

The [IPMC](#) profile is used to deploy the access control on [IP](#) multicast streams. It is allowed to create at maximum 64 Profiles with at maximum 128 corresponding rules for each.

IPMC Profile Configurations



Global Profile Mode | Disabled ▾




IPMC Profile Table Setting

Delete	Profile Name	Profile Description	Rule
Delete	<input type="text"/>	<input type="text"/>	 

Object	Description
Global Profile Mode	Enable/Disable the Global IPMC Profile. System starts to do filtering based on profile settings only when the global profile mode is enabled.
Delete	Check to delete the entry. The designated entry will be deleted during the next save.
Profile Name	The name used for indexing the profile table. Each entry has the unique name which is composed of at maximum 16 alphabetic and numeric characters. At least one alphabet must be present.

Profile Description	Additional description, which is composed of at maximum 64 alphabetic and numeric characters, about the profile. No blank or space characters are permitted as part of description. Use "_" or "-" to separate the description sentence.
Rule	When the profile is created, click the edit button to enter the rule setting page of the

	designated profile. Summary about the designated profile will be shown by clicking the view button. You can manage or inspect the rules of the designated profile by using the following buttons:  : List the rules associated with the designated profile.  : Adjust the rules associated with the designated profile.
--	---

Buttons	
	Click to add new IPMC profile. Specify the name and configure the new entry. Click "Save".
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.69 Address Entry

This page provides address range settings used in [IPMC profile](#).

The address entry is used to specify the address range that will be associated with [IPMC](#) Profile. It is allowed to create at maximum 128 address entries in the system.







IPMC Profile Address Configuration Refresh |<< >>

Navigate Address Entry Setting in IPMC Profile by entries per page.

Delete	Entry Name	Start Address	End Address
Add New Address (Range) Entry			
Save Reset			

Object	Description
--------	-------------

Delete	Check to delete the entry. The designated entry will be deleted during the next save.
Entry Name	The name used for indexing the address entry table. Each entry has the unique name which is composed of at maximum 16 alphabetic and numeric characters. At least one alphabet must be present.
Start Address	The starting IPv4/IPv6 Multicast Group Address that will be used as an address range.
End Address	The ending IPv4/IPv6 Multicast Group Address that will be used as an address range.

Buttons	
	Click to add new address range. Specify the name and configure the addresses. Click "Save"
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.
	Refreshes the displayed table starting from the input fields.
	Updates the table starting from the first entry in the IPMC Profile Address Configuration.
	Updates the table, starting with the entry after the last entry currently displayed.

2.3.70 MVR

This page provides [MVR](#) related configurations.

The MVR feature enables multicast traffic forwarding on the Multicast [VLANs](#).

In a multicast television application, a PC or a network television or a set-top box can receive the multicast stream. Multiple set-top boxes or PCs can be connected to one subscriber port, which is a switch port configured as an MVR receiver port. When a subscriber selects a channel, the set-top box or PC sends an [IGMP/MLD](#) report message to Switch A to join the appropriate multicast group address. Uplink ports that send and receive multicast data to and from the multicast VLAN are called MVR source ports.

It is allowed to create at maximum 4 MVR VLANs with corresponding channel profile for each Multicast VLAN. The channel profile is defined by the [IPMC Profile](#) which provides the filtering conditions.

MVR Configurations

MVR Mode | Disabled ▾

VLAN Interface Setting (Role [I:Inactive / S:Source / R:Receiver])

Delete	MVR VID	MVR Name	IGMP Address	Mode	Tagging	Priority	LLQI	Interface Channel Profile
Add New MVR VLAN								

Immediate Leave Setting


Port	Immediate Leave
*	<> ▾
1	Disabled ▾
2	Disabled ▾
3	Disabled ▾
4	Disabled ▾
5	Disabled ▾
6	Disabled ▾
7	Disabled ▾
8	Disabled ▾
9	Disabled ▾
10	Disabled ▾

Save Reset

Object	Description
MVR Mode	Enable/Disable the Global MVR.

	<p>The Unregistered Flooding control depends on the current configuration in IGMP/MLD Snooping.</p> <p>It is suggested to enable Unregistered Flooding control when the MVR group table is full.</p>
Delete	Check to delete the entry. The designated entry will be deleted during the next save.
MVR VID	<p>Specify the Multicast VLAN ID.</p> <p>Be Caution: MVR source ports are not recommended to be overlapped with management VLAN ports.</p>
MVR Name	<p>MVR Name is an optional attribute to indicate the name of the specific MVR VLAN.</p> <p>Maximum length of the MVR VLAN Name string is 16. MVR VLAN Name can only contain alphabets or numbers. When the optional MVR VLAN name is given, it should contain at least one alphabet. MVR VLAN name can be edited for the existing MVR VLAN entries or it can be added to the new entries.</p>

IGMP Address	<p>Define the IPv4 address as source address used in IP header for IGMP control frames.</p> <p>The default IGMP address is not set (0.0.0.0).</p> <p>When the IGMP address is not set, system uses IPv4 management address of the IP interface associated with this VLAN.</p> <p>When the IPv4 management address is not set, system uses the first available IPv4 management address.</p> <p>Otherwise, system uses a pre-defined value. By default, this value will be 192.0.2.1.</p>
Mode	<p>Specify the MVR mode of operation. In Dynamic mode, MVR allows dynamic MVR membership reports on source ports. In Compatible mode, MVR membership reports are forbidden on source ports. The default is Dynamic mode.</p>
Tagging	<p>Specify whether the traversed IGMP/MLD control frames will be sent as Untagged or Tagged with MVR VID. The default is Tagged.</p>
Priority	<p>Specify how the traversed IGMP/MLD control frames will be sent in prioritized manner. The default Priority is 0.</p>
LLQI	<p>Define the maximum time to wait for IGMP/MLD report memberships on a receiver port before removing the port from multicast group membership. The value is in units of tenths of a seconds. The range is from 0 to 31744. The default LLQI is 5 tenths or one-half second.</p>
Interface Channel Profile	<p>When the MVR VLAN is created, select the IPMC Profile as the channel filtering condition for the specific MVR VLAN. Summary about the Interface Channel Profiling (of the MVR VLAN) will be shown by clicking the view button. Profile selected for designated interface channel is not allowed to have overlapped permit group address.</p>
Profile Management	<p>You can inspect the rules of the designated profile by using the following button:</p>

Button	 : List the rules associated with the designated profile.
Port	<p>The logical port for the settings.</p>
Port Role	<p>Configure an MVR port of the designated MVR VLAN as one of the following roles.</p> <p>Inactive: The designated port does not participate MVR operations.</p> <p>Source: Configure uplink ports that receive and send multicast data as source ports. Subscribers cannot be directly connected to source ports.</p> <p>Receiver: Configure a port as a receiver port if it is a subscriber port and should only receive multicast data. It does not receive data unless it becomes a member of the multicast group by issuing IGMP/MLD messages.</p> <p>Be Caution: MVR source ports are not recommended to be overlapped with management VLAN ports.</p> <p>Select the port role by clicking the Role symbol to switch the setting.</p> <p>I indicates Inactive; S indicates Source; R indicates Receiver</p> <p>The default Role is Inactive.</p>

Immediate Leave	Enable the fast leave on the port.
------------------------	--

Buttons	
<input type="button" value="Add New MVR VLAN"/>	Click to add new MVR VLAN. Specify the VID and configure the new entry. Click "Save".
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.71 IPMC

2.3.72 IGMP Snooping

2.3.73 Basic Configuration

This page provides [IGMP](#) Snooping related configuration.

IGMP Snooping Configuration

Global Configuration	
Snooping Enabled	<input type="checkbox"/>
Unregistered IPMCv4 Flooding Enabled	<input checked="" type="checkbox"/>
IGMP SSM Range	232.0.0.0 / 8
Leave Proxy Enabled	<input type="checkbox"/>
Proxy Enabled	<input type="checkbox"/>

Port Related Configuration



Port	Router Port	Fast Leave	Throttling
*	<input type="checkbox"/>	<input type="checkbox"/>	<> ▾
1	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
2	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
3	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
4	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
5	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
6	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
7	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
8	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
9	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
10	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾

Save

Reset

Object	Description
Snooping Enabled	Enable the Global IGMP Snooping.
Unregistered IPMCv4 Flooding Enabled	Enable unregistered IPMCv4 traffic flooding. The flooding control takes effect only when IGMP Snooping is enabled. When IGMP Snooping is disabled, unregistered IPMCv4 traffic flooding is always active in spite of this setting.
IGMP SSM Range	SSM (Source-Specific Multicast) Range allows the SSM-aware hosts and routers run the SSM service model for the groups in the address range.
Leave Proxy Enabled	Enable IGMP Leave Proxy. This feature can be used to avoid forwarding unnecessary leave messages to the router side.
Proxy Enabled	Enable IGMP Proxy. This feature can be used to avoid forwarding unnecessary join and leave messages to the router side.

Router Port	Specify which ports act as router ports. A router port is a port on the Ethernet switch that leads towards the Layer 3 multicast device or IGMP querier . If an aggregation member port is selected as a router port, the whole aggregation will act as a router port.
Fast Leave	Enable the fast leave on the port.
Throttling	Enable to limit the number of multicast groups to which a switch port can belong.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.74 VLAN Configuration

Each page shows up to 99 entries from the VLAN table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the VLAN Table. The first displayed will be the one with the lowest [VLAN ID](#) found in the VLAN Table.

The "VLAN" input fields allow the user to select the starting point in the VLAN Table.

IGMP Snooping VLAN Configuration Refresh | << | >>

Start from VLAN with entries per page.







Delete	VLAN ID	Snooping Enabled	Querier Election	Querier Address	Compatibility	PRI	RV	QI (sec)	QRI (0.1 sec)	LLQI (0.1 sec)	URI (sec)
Add New IGMP VLAN											

Save | Reset

Object	Description
Delete	Check to delete the entry. The designated entry will be deleted during the next save.
VLAN ID	The VLAN ID of the entry.
IGMP Snooping Enabled	Enable the per-VLAN IGMP Snooping. Up to 32 VLANs can be selected for IGMP Snooping.











Querier Election	Enable to join IGMP Querier election in the VLAN. Disable to act as an IGMP Non-Querier.
Querier Address	Define the IPv4 address as source address used in IP header for IGMP Querier election . When the Querier address is not set, system uses IPv4 management address of the IP interface associated with this VLAN. When the IPv4 management address is not set, system uses the first available IPv4 management address. Otherwise, system uses a pre-defined value. By default, this value will be 192.0.2.1.
Compatibility	Compatibility is maintained by hosts and routers taking appropriate actions depending on the versions of IGMP operating on hosts and routers within a network. The allowed selection is IGMP-Auto , Forced IGMPv1 , Forced IGMPv2 , Forced



	IGMPv3 , default compatibility value is IGMP-Auto.
PRI	Priority of Interface. It indicates the IGMP control frame priority level generated by the system. These values can be used to prioritize different classes of traffic. The allowed range is 0 (best effort) to 7 (highest), default interface priority value is 0.
RV	Robustness Variable. The Robustness Variable allows tuning for the expected packet loss on a network. The allowed range is 1 to 255 , default robustness variable value is 2.
QI	Query Interval. The Query Interval is the interval between General Queries sent by the Querier. The allowed range is 1 to 31744 seconds, default query interval is 125 seconds.
QRI	Query Response Interval. The Maximum Response Delay used to calculate the Maximum Response Code inserted into the periodic General Queries. The allowed range is 0 to 31744 in tenths of seconds, default query response interval is 100 in tenths of seconds (10 seconds).
LLQI(LMQI for IGMP)	Last Member Query Interval. The Last Member Query Time is the time value represented by the Last Member Query Interval, multiplied by the Last Member Query Count. The allowed range is 0 to 31744 in tenths of seconds, default last member query interval is 10 in tenths of seconds (1 second).
URI	Unsolicited Report Interval. The Unsolicited Report Interval is the time between repetitions of a host's initial report of membership in a group. The allowed range is 0 to 31744 seconds, default unsolicited report interval is 1 second.

Buttons	
	Refreshes the displayed table starting from the "VLAN" input fields.
	Updates the table starting from the first entry in the VLAN Table, i.e. the entry with the lowest VLAN ID.
	Updates the table, starting with the entry after the last entry currently displayed.
	Click to add new IGMP VLAN. Specify the VID and configure the new entry. Click "Save". The specific IGMP VLAN starts working after the corresponding static VLAN is also created.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.


2.3.75 Port Filtering Profile



IGMP Snooping Port Filtering Profile Configuration

Port	Filtering Profile	
1		- ▾
2		- ▾
3		- ▾
4		- ▾
5		- ▾
6		- ▾
7		- ▾
8		- ▾
9		- ▾
10		- ▾

Object	Description
--------	-------------

Port	The logical port for the settings.
Filtering Profile	Select the IPMC Profile as the filtering condition for the specific port. Summary about the designated profile will be shown by clicking the view button.
Profile Management Button	You can inspect the rules of the designated profile by using the following button:  : List the rules associated with the designated profile.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.76 MLD Snooping

2.3.77 Basic Configuration

This page provides [MLD](#) Snooping related configuration.

MLD Snooping Configuration



Global Configuration	
Snooping Enabled	<input type="checkbox"/>
Unregistered IPMCv6 Flooding Enabled	<input checked="" type="checkbox"/>
MLD SSM Range	<input type="text" value="ff3e::"/> / <input type="text" value="96"/>
Leave Proxy Enabled	<input type="checkbox"/>
Proxy Enabled	<input type="checkbox"/>

Port Related Configuration

Port	Router Port	Fast Leave	Throttling
*	<input type="checkbox"/>	<input type="checkbox"/>	<> ▾
1	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
2	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
3	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
4	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
5	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
6	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
7	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
8	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
9	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾
10	<input type="checkbox"/>	<input type="checkbox"/>	unlimited ▾

Object	Description
Snooping Enable	Enable the Global MLD Snooping.
Unregistered IPMCv6 Flooding Enable	Enable unregistered IPMCv6 traffic flooding. The flooding control takes effect only when MLD Snooping is enabled. When MLD Snooping is disabled, unregistered IPMCv6 traffic flooding is always active in spite of this setting.
MLD SSM Range	SSM (Source-Specific Multicast) Range allows the SSM-aware hosts and routers run the SSM service model for the groups in the address range.
Leave Proxy Enable	Enable MLD Leave Proxy. This feature can be used to avoid forwarding unnecessary

	leave messages to the router side.
Proxy Enable	Enable MLD Proxy. This feature can be used to avoid forwarding unnecessary join and leave messages to the router side.
Router Port	Specify which ports act as router ports. A router port is a port on the Ethernet switch that leads towards the Layer 3 multicast device or MLD querier . If an aggregation member port is selected as a router port, the whole aggregation will act as a router port.
Fast Leave	Enable the fast leave on the port.
Throttling	Enable to limit the number of multicast groups to which a switch port can belong.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.78 VLAN Configuration

Each page shows up to 99 entries from the VLAN table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the VLAN Table. The first displayed will be the one with the lowest [VLAN ID](#) found in the VLAN Table.

The "VLAN" input fields allow the user to select the starting point in the VLAN Table.







MLD Snooping VLAN Configuration Refresh |<< >>

Start from VLAN with entries per page.

Delete	VLAN ID	Snooping Enabled	Querier Election	Compatibility	PRI	RV	QI (sec)	QRI (0.1 sec)	LLQI (0.1 sec)	URI (sec)
Add New MLD VLAN										
Save Reset										











Object	Description
Delete	Check to delete the entry. The designated entry will be deleted during the next save.
VLAN ID	The VLAN ID of the entry.
MLD Snooping Enabled	Enable the per-VLAN MLD Snooping. Up to 32 VLANs can be selected for MLD Snooping.
Querier Election	Enable to join MLD Querier election in the VLAN. Disable to act as a MLD Non-Querier.
Compatibility	Compatibility is maintained by hosts and routers taking appropriate actions depending on the versions of MLD operating on hosts and routers within a network. The allowed selection is MLD-Auto , Forced MLDv1 , Forced MLDv2 , default compatibility value is MLD-Auto.
PRI	Priority of Interface. It indicates the MLD control frame priority level generated by the system. These values can be used to prioritize different classes of traffic. The allowed range is 0 (best effort) to 7 (highest), default interface priority value is 0.
RV	Robustness Variable. The Robustness Variable allows tuning for the expected packet loss on a link. The allowed range is 1 to 255 , default robustness variable value is 2.
QI	Query Interval. The Query Interval is the interval between General Queries sent by the Querier. The allowed range is 1 to 31744 seconds, default query interval is 125 seconds.
QRI	Query Response Interval. The Maximum Response Delay used to calculate the Maximum Response Code inserted into the periodic General Queries. The allowed range is 0 to 31744 in tenths of seconds, default query response interval is 100 in tenths of seconds (10 seconds).

LLQI	<p>Last Listener Query Interval.</p> <p>The Last Listener Query Interval is the Maximum Response Delay used to calculate the Maximum Response Code inserted into Multicast Address Specific Queries sent in response to Version 1 Multicast Listener Done messages. It is also the Maximum Response Delay used to calculate the Maximum Response Code inserted into Multicast Address and Source Specific Query messages.</p> <p>The allowed range is 0 to 31744 in tenths of seconds, default last listener query interval is 10 in tenths of seconds (1 second).</p>
URI	<p>Unsolicited Report Interval.</p> <p>The Unsolicited Report Interval is the time between repetitions of a node's initial report of interest in a multicast address.</p> <p>The allowed range is 0 to 31744 seconds, default unsolicited report interval is 1 second.</p>

Buttons	
	Refreshes the displayed table starting from the "VLAN" input fields.
	Updates the table starting from the first entry in the VLAN Table, i.e. the entry with the lowest VLAN ID.
	Updates the table, starting with the entry after the last entry currently displayed.
	Click to add new MLD VLAN. Specify the VID and configure the new entry. Click "Save". The specific MLD VLAN starts working after the corresponding static VLAN is also created.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.


2.3.79 Port Filtering Profile



MLD Snooping Port Filtering Profile Configuration

Port	Filtering Profile
1	 - ▾
2	 - ▾
3	 - ▾
4	 - ▾
5	 - ▾
6	 - ▾
7	 - ▾
8	 - ▾
9	 - ▾
10	 - ▾

Save

Reset

Object	Description
Port	The logical port for the settings.
Filtering Profile	Select the IPMC Profile as the filtering condition for the specific port. Summary about the designated profile will be shown by clicking the view button.
Profile Management Button	You can inspect the rules of the designated profile by using the following button:  : List the rules associated with the designated profile.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.80 LLDP

2.3.81 LLDP

This page allows the user to inspect and configure the current [LLDP](#) port settings.

LLDP Configuration

LLDP Parameters

Tx Interval	30	seconds
Tx Hold	4	times
Tx Delay	2	seconds
Tx Reinit	2	seconds

LLDP Port Configuration



Port	Mode	CDP aware	Optional TLVs				
			Port Descr	Sys Name	Sys Descr	Sys Capa	Mgmt Addr
*	<>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
3	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
4	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
5	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
6	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
7	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
8	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
9	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
10	Enabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Save Reset

Object	Description
LLDP Parameters	
Tx Interval	The switch periodically transmits LLDP frames to its neighbors for having the network discovery information up-to-date. The interval between each LLDP frame is determined by the Tx Interval value. Valid values are restricted to 5 - 32768 seconds.
Tx Hold	Each LLDP frame contains information about how long the information in the LLDP frame shall be considered valid. The LLDP information valid period is set to Tx Hold multiplied by Tx Interval seconds. Valid values are restricted to 2 - 10 times.
Tx Delay	If some configuration is changed (e.g. the IP address) a new LLDP frame is transmitted, but the time between the LLDP frames will always be at least the value of Tx Delay seconds. Tx Delay cannot be larger than 1/4 of the Tx Interval value. Valid values are restricted to 1 - 8192 seconds.
Tx Reinit	When a port is disabled, LLDP is disabled or the switch is rebooted, an LLDP shutdown frame is transmitted to the neighboring units, signalling that the LLDP information isn't valid anymore. Tx Reinit controls the amount of seconds between the shutdown frame and a new LLDP initialization. Valid values are restricted to 1 - 10 seconds.
LLDP Port Parameters	

Port	The switch port number of the logical LLDP port.
Mode	<p>Select LLDP mode.</p> <p>Rx only The switch will not send out LLDP information, but LLDP information from neighbor units is analyzed.</p> <p>Tx only The switch will drop LLDP information received from neighbors, but will send out LLDP information.</p> <p>Disabled The switch will not send out LLDP information, and will drop LLDP information received from neighbors.</p> <p>Enabled The switch will send out LLDP information, and will analyze LLDP information received from neighbors.</p>
CDP Aware	<p>Select CDP awareness.</p> <p>The CDP operation is restricted to decoding incoming CDP frames (The switch doesn't transmit CDP frames). CDP frames are only decoded if LLDP on the port is enabled.</p> <p>Only CDP TLVs that can be mapped to a corresponding field in the LLDP neighbors' table are decoded. All other TLVs are discarded (Unrecognized CDP TLVs and discarded CDP frames are not shown in the LLDP statistics.). CDP TLVs are mapped onto LLDP neighbors' table as shown below.</p> <p>CDP TLV "Device ID" is mapped to the LLDP "Chassis ID" field.</p> <p>CDP TLV "Address" is mapped to the LLDP "Management Address" field. The CDP address TLV can contain multiple addresses, but only the first address is shown in the LLDP neighbors table.</p> <p>CDP TLV "Port ID" is mapped to the LLDP "Port ID" field.</p> <p>CDP TLV "Version and Platform" is mapped to the LLDP "System Description" field.</p> <p>Both the CDP and LLDP support "system capabilities", but the CDP capabilities cover capabilities that are not part of the LLDP. These capabilities are shown as "others" in the LLDP neighbors' table.</p> <p>If all ports have CDP awareness disabled the switch forwards CDP frames received from neighbor devices. If at least one port has CDP awareness enabled all CDP</p>
	<p>frames are terminated by the switch.</p> <p>Note: When CDP awareness on a port is disabled the CDP information isn't removed immediately, but gets removed when the hold time is exceeded.</p>
Port Descr	Optional TLV : When checked the "port description" is included in LLDP information transmitted.
Sys Name	Optional TLV : When checked the "system name" is included in LLDP information transmitted.
Sys Descr	Optional TLV : When checked the "system description" is included in LLDP information transmitted.

Sys Capa	Optional TLV : When checked the "system capability" is included in LLDP information transmitted.
Mgmt Addr	Optional TLV : When checked the "management address" is included in LLDP information transmitted.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.82 LLDP-MED

This page allows you to configure the [LLDP-MED](#). This function applies to VoIP devices which support LLDP-MED.

LLDP-MED Configuration

Fast Start Repeat Count

Fast start repeat count

Coordinates Location

Latitude ° North ° East Altitude Meters Map Datum

Civic Address Location

Country code	<input type="text"/>	State	<input type="text"/>	County	<input type="text"/>
City	<input type="text"/>	City district	<input type="text"/>	Block (Neighborhood)	<input type="text"/>
Street	<input type="text"/>	Leading street direction	<input type="text"/>	Trailing street suffix	<input type="text"/>
Street suffix	<input type="text"/>	House no.	<input type="text"/>	House no. suffix	<input type="text"/>
Landmark	<input type="text"/>	Additional location info	<input type="text"/>	Name	<input type="text"/>
Zip code	<input type="text"/>	Building	<input type="text"/>	Apartment	<input type="text"/>
Floor	<input type="text"/>	Room no.	<input type="text"/>	Place type	<input type="text"/>
Postal community name	<input type="text"/>	P.O. Box	<input type="text"/>	Additional code	<input type="text"/>

Emergency Call Service

Emergency Call Service

Policies

Delete	Policy ID	Application Type	Tag	VLAN ID	L2 Priority	DSCP
No entries present						

Object	Description
Fast start repeat count	

Fast start repeat count	<p>Rapid startup and Emergency Call Service Location Identification Discovery of endpoints is a critically important aspect of VoIP systems in general. In addition, it is best to advertise only those pieces of information which are specifically relevant to particular endpoint types (for example only advertise the voice network policy to permitted voice-capable devices), both in order to conserve the limited LLDPDU space and to reduce security and system integrity issues that can come with inappropriate knowledge of the network policy.</p> <p>With this in mind LLDP-MED defines an LLDP-MED Fast Start interaction between the protocol and the application layers on top of the protocol, in order to achieve these related properties. Initially, a Network Connectivity Device will only transmit LLDP TLVs in an LLDPDU. Only after an LLDP-MED Endpoint Device is detected, will an LLDP-MED capable Network Connectivity Device start to advertise LLDP-MED TLVs in outgoing LLDPDUs on the associated port. The LLDP-MED application will temporarily speed up the transmission of the LLDPDU to start within a second, when a new LLDP-MED neighbor has been detected in order share LLDP-MED information as fast as possible to new neighbors.</p>
	<p>Because there is a risk of an LLDP frame being lost during transmission between neighbors, it is recommended to repeat the fast start transmission multiple times to increase the possibility of the neighbors receiving the LLDP frame. With Fast start repeat count it is possible to specify the number of times the fast start transmission would be repeated. The recommended value is 4 times, given that 4 LLDP frames with a 1 second interval will be transmitted, when an LLDP frame with new information is received.</p> <p>It should be noted that LLDP-MED and the LLDP-MED Fast Start mechanism is only intended to run on links between LLDP-MED Network Connectivity Devices and Endpoint Devices, and as such does not apply to links between LAN infrastructure elements, including Network Connectivity Devices, or other types of links.</p>
Coordinates Location	
Latitude	<p>Latitude SHOULD be normalized to within 0-90 degrees with a maximum of 4 digits.</p> <p>It is possible to specify the direction to either North of the equator or South of the equator.</p>

Longitude	<p>Longitude SHOULD be normalized to within 0-180 degrees with a maximum of 4 digits.</p> <p>It is possible to specify the direction to either East of the prime meridian or West of the prime meridian.</p>
Altitude	<p>Altitude SHOULD be normalized to within -32767 to 32767 with a maximum of 4 digits.</p> <p>It is possible to select between two altitude types (floors or meters).</p> <p>Meters: Representing meters of Altitude defined by the vertical datum specified.</p> <p>Floors: Representing altitude in a form more relevant in buildings which have different floor-to-floor dimensions. An altitude = 0.0 is meaningful even outside a building, and represents ground level at the given latitude and longitude. Inside a building, 0.0 represents the floor level associated with ground level at the main entrance.</p>
Map Datum	<p>The Map Datum is used for the coordinates given in these options:</p> <p>WGS84: (Geographical 3D) - World Geodesic System 1984, CRS Code 4327, Prime Meridian Name: Greenwich.</p>

	<p>NAD83/NAVD88: North American Datum 1983, CRS Code 4269, Prime Meridian Name: Greenwich; The associated vertical datum is the North American Vertical Datum of 1988 (NAVD88). This datum pair is to be used when referencing locations on land, not near tidal water (which would use Datum = NAD83/MLLW).</p> <p>NAD83/MLLW: North American Datum 1983, CRS Code 4269, Prime Meridian Name: Greenwich; The associated vertical datum is Mean Lower Low Water (MLLW). This datum pair is to be used when referencing locations on water/sea/ocean.</p>
Civic Address Location	
Country code	The two-letter ISO 3166 country code in capital ASCII letters - Example: DK, DE or US.
State	National subdivisions (state, canton, region, province, prefecture).
County	County, parish, gun (Japan), district.
City	City, township, shi (Japan) - Example: Copenhagen.
City district	City division, borough, city district, ward, chou (Japan).
Block (Neighborhood)	Neighborhood, block.
Street	Street - Example: Poppelvej.
Leading street direction	Leading street direction - Example: N.

Trailing street suffix	Trailing street suffix - Example: SW.
Street suffix	Street suffix - Example: Ave, Platz.
House no.	House number - Example: 21.
House no. suffix	House number suffix - Example: A, 1/2.
Landmark	Landmark or vanity address - Example: Columbia University.
Additional location info	Additional location info - Example: South Wing.
Name	Name (residence and office occupant) - Example: Flemming Jahn.
Zip code	Postal/zip code - Example: 2791.
Building	Building (structure) - Example: Low Library.
Apartment	Unit (Apartment, suite) - Example: Apt 42.
Floor	Floor - Example: 4.
Room no.	Room number - Example: 450F.
Place type	Place type - Example: Office.
Postal community name	Postal community name - Example: Leonia.
P.O. Box	Post office box (P.O. BOX) - Example: 12345.
Additional code	Additional code - Example: 1320300003.
Emergency Call Service	
Emergency Call Service	Emergency Call Service ELIN identifier data format is defined to carry the ELIN identifier as used during emergency call setup to a traditional CAMA or ISDN
	trunk-based PSAP. This format consists of a numerical digit string, corresponding to the ELIN to be used for emergency calling.
Policies	
Delete	Check to delete the policy. It will be deleted during the next save.
Policy ID	ID for the policy. This is auto generated and shall be used when selecting the policies that shall be mapped to the specific ports.

Application Type	<p>Intended use of the application types:</p> <ol style="list-style-type: none"> 1. Voice - for use by dedicated IP Telephony handsets and other similar appliances supporting interactive voice services. These devices are typically deployed on a separate VLAN for ease of deployment and enhanced security by isolation from data applications. 2. Voice Signalling (conditional) - for use in network topologies that require a different policy for the voice signalling than for the voice media. This application type should not be advertised if all the same network policies apply as those advertised in the Voice application policy. 3. Guest Voice - support a separate 'limited feature-set' voice service for guest users and visitors with their own IP Telephony handsets and other similar appliances supporting interactive voice services. 4. Guest Voice Signalling (conditional) - for use in network topologies that require a different policy for the guest voice signalling than for the guest voice media. This application type should not be advertised if all the same network policies apply as those advertised in the Guest Voice application policy. 5. Softphone Voice - for use by softphone applications on typical data centric devices, such as PCs or laptops. This class of endpoints frequently does not support multiple VLANs, if at all, and are typically configured to use an 'untagged' VLAN or a single 'tagged' data specific VLAN. When a network policy is defined for use with an 'untagged' VLAN (see Tagged flag below), then the L2 priority field is ignored and only the DSCP value has relevance. 6. Video Conferencing - for use by dedicated Video Conferencing equipment and other similar appliances supporting real-time interactive video/audio services. 7. Streaming Video - for use by broadcast or multicast based video content distribution and other similar applications supporting streaming video services that
	<p>require specific network policy treatment. Video applications relying on TCP with buffering would not be an intended use of this application type.</p> <ol style="list-style-type: none"> 8. Video Signalling (conditional) - for use in network topologies that require a separate policy for the video signalling than for the video media. This application type should not be advertised if all the same network policies apply as those advertised in the Video Conferencing application policy.

Tag	<p>Tag indicating whether the specified application type is using a 'tagged' or an 'untagged' VLAN.</p> <p>Untagged indicates that the device is using an untagged frame format and as such does not include a tag header as defined by IEEE 802.1Q-2003. In this case, both the VLAN ID and the Layer 2 priority fields are ignored and only the DSCP value has relevance.</p> <p>Tagged indicates that the device is using the IEEE 802.1Q tagged frame format, and that both the VLAN ID and the Layer 2 priority values are being used, as well as the DSCP value. The tagged format includes an additional field, known as the tag header. The tagged frame format also includes priority tagged frames as defined by IEEE 802.1Q-2003.</p>
VLAN ID	VLAN identifier (VID) for the port as defined in IEEE 802.1Q-2003.
L2 Priority	L2 Priority is the Layer 2 priority to be used for the specified application type. L2 Priority may specify one of eight priority levels (0 through 7), as defined by IEEE 802.1D-2004. A value of 0 represents use of the default priority as defined in IEEE 802.1D-2004.
DSCP	DSCP value to be used to provide Diffserv node behaviour for the specified application type as defined in IETF RFC 2474. DSCP may contain one of 64 code point values (0 through 63). A value of 0 represents use of the default DSCP value as defined in RFC 2475.
Adding a new policy	<p>Click <input type="button" value="Add"/> to add a new policy. Specify the Application type, Tag, VLAN ID, L2 Priority and DSCP for the new policy. Click "Save".</p> <p>The number of policies supported is 32</p>
Port Policies Configuration	
Port	The port number to which the configuration applies.
Policy Id	The set of policies that shall apply to a given port. The set of policies is selected by
	check marking the checkboxes that corresponds to the policies.
Buttons	
<input type="button" value="Save"/>	Click to save changes.

<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.
--------------------------------------	---

2.3.83 PoE

This page allows the user to inspect and configure the current [PoE](#) port settings.

Power Over Ethernet Configuration

Reserved Power determined by	<input checked="" type="radio"/> Class <input type="radio"/> Allocation <input type="radio"/> LLDP-MED
Power Management Mode	<input type="radio"/> Actual Consumption <input checked="" type="radio"/> Reserved Power

PoE Power Supply Configuration

Primary Power Supply [W]	240
--------------------------	-----

PoE Port Configuration

Port	Mode	Operation	4Pairs	Priority	Maximum Power [W]
*	<>	<>	<>	<>	15.4
1	Disable	802.3af	Disable	Low	15.4
2	Disable	802.3af	Disable	Low	15.4
3	Disable	802.3af	Disable	Low	15.4
4	Disable	802.3af	Disable	Low	15.4
5	Disable	802.3af	Disable	Low	15.4
6	Disable	802.3af	Disable	Low	15.4
7	Disable	802.3af	Disable	Low	15.4
8	Disable	802.3af	Disable	Low	15.4

Object	Description
Reserved Power determined by	
Allocated mode	In this mode the user allocates the amount of power that each port may reserve. The allocated/reserved power for each port/PD is specified in the Maximum Power fields.
Class mode	In this mode each port automatically determines how much power to reserve according to the class the connected PD belongs to, and reserves the power accordingly. Four different port classes exist and one for 4, 7, 15.4 or 30 Watts. In this mode the Maximum Power fields have no effect.
LLDP-MED mode	This mode is similar to the Class mode expect that each port determine the amount power it reserves by exchanging PoE information using the LLDP protocol and reserves power accordingly. If no LLDP information is available for a port, the port will reserve power using the class mode. In this mode the Maximum Power fields have no effect.

Power Management Mode	
Actual Consumption	In this mode the ports are shut down when the actual power consumption for all ports exceeds the amount of power that the power supply can deliver or if the actual power consumption for a given port exceeds the reserved power for that port. The ports are shut down according to the ports priority. If two ports have the same priority the port with the highest port number is shut down.
Reserved Power	In this mode the ports are shut down when total reserved powered exceeds the amount of power that the power supply can deliver. In this mode the port power is not turned on if the PD requests more power than available from the power supply.
Power Supply Configuration	
Power Source	For being able to determine the amount of power the PD may use, it must be defined what amount of power a power source can deliver. Valid values are in the range 0 to 240 Watts.
Port Configuration	
Port	This is the logical port number for this row. Ports that are not PoE-capable are grayed out and thus impossible to configure PoE for.
PoE Mode	
Disable	PoE disabled for the port.
Enable	Enables PoE for the port.
Schedule	Enables PoE for the port by scheduling.
Operation Mode	
802.3af	Sets PoE protocol to IEEE 802.3af.
802.3at	Sets PoE protocol to IEEE 802.3at.
4Pairs	
Enable	Enable 4Pairs to support 60W. The option is only available when following rules are applied. <ul style="list-style-type: none"> - High power model supports. - Only port1 or port2 supports - Current operation mode is 802.3at.
Disable	Disable 4Pairs to limit 30W of power.
Priority	
The priority is used in the case where the remote devices require more power than the power supply can deliver. In this case the port with the lowest priority will be turn off starting from the port with the highest port number.	
Low	The lowest priority
High	The medium priority
Critical	The highest priority
Maximum Power	

The Maximum Power value contains a numerical value that indicates the maximum power in watts that can be

delivered to a remote device.
For port support 4Pairs mode, the maximum allowed value is 60 W; others are 30 W.

Buttons	
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.84 PoE Scheduler

This page provides power scheduling configurations.

The entry is used to control the power alive interval on PoE port.

It is allowed to set the specific interval to schedule power on/off in one week.

PoE Power Scheduling Control on Port 1

Port 1 ▼

Power Scheduling Interval Configuration




Day							Interval	Action
Sun.	Mon.	Tue.	Wed.	Thu.	Fri.	Sat.	Start - End	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	00:00 ▼ - 00:29 ▼	<input checked="" type="radio"/> Power ON <input type="radio"/> Power OFF

Power Scheduling During 00:00 ▼ - 05:59 ▼

Time Interval	Day						
	Sun.	Mon.	Tue.	Wed.	Thu.	Fri.	Sat.
00:00 - 00:29	●	●	●	●	●	●	●
00:30 - 00:59	●	●	●	●	●	●	●
01:00 - 01:29	●	●	●	●	●	●	●
01:30 - 01:59	●	●	●	●	●	●	●
02:00 - 02:29	●	●	●	●	●	●	●
02:30 - 02:59	●	●	●	●	●	●	●
03:00 - 03:29	●	●	●	●	●	●	●
03:30 - 03:59	●	●	●	●	●	●	●
04:00 - 04:29	●	●	●	●	●	●	●
04:30 - 04:59	●	●	●	●	●	●	●
05:00 - 05:29	●	●	●	●	●	●	●
05:30 - 05:59	●	●	●	●	●	●	●

Object	Description
--------	-------------

Power Scheduling Interval Configuration	
Day	Checkmarks indicate which day are members of the set.
Interval	Start - Select the start hour and minute. End - Select the end hour and minute.
Action	Power On - Select the radio button to apply power on during the interval. Power Off - Select the radio button to apply power off during the interval.
Power Scheduling During	
Time Interval	There are 48 time interval one day. Each interval have 30 minutes.
Day	The current scheduling state is displayed graphically during the week. Green indicates the power is on and red that it is off. Directly changes checkmarks to indicate which day are members of the time interval. Check or uncheck as needed to modify the scheduling table.

Buttons	
	Click to apply the power scheduling interval.
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.85 Power Reset

This page provides power reset entry configurations.

The entry is used to control the power reset time on PoE port.

It is allowed to create at maximum 5 entries for each PoE port.




PoE Power Reset Control on Port 1

Port 1 ▼

Delete	Day							Time (hh:mm)
	Sun.	Mon.	Tue.	Wed.	Thu.	Fri.	Sat.	

Object	Description

Delete	<p>Check to delete the entry.</p> <p>The designated entry will be deleted during the next save.</p>
Day	<p>Checkmarks indicate which day are members of the entry. Check or uncheck as needed to modify the entry.</p>
Time (hh:mm)	<p>hh - Select the hour.</p> <p>mm - Select the minute.</p>

Buttons	
	Click to add new reset entry
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.86 MAC Table

The MAC Address Table is configured on this page. Set timeouts for entries in the dynamic [MAC Table](#) and configure the static MAC table here.



MAC Address Table Configuration

Aging Configuration

Disable Automatic Aging	<input type="checkbox"/>
Aging Time	300 seconds

MAC Table Learning

	Port Members									
	1	2	3	4	5	6	7	8	9	10
Auto	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Disable	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Secure	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

Static MAC Table Configuration

			Port Members									
Delete	VLAN ID	MAC Address	1	2	3	4	5	6	7	8	9	10

Add New Static Entry

Save Reset

Object	Description
Aging Configuration	
Disable Automatic Aging	Disable the automatic aging of dynamic entries by ticking the item.
Aging Time	Enter a value in seconds. The allowed range is 10 to 1000000 seconds.
MAC Table Learning	
Auto	Learning is done automatically as soon as a frame with unknown SMAC is received.
Disable	No learning is done.
Secure	Only static MAC entries are learned, all other frames are dropped. Note: Make sure that the link used for managing the switch is added to the Static Mac Table before changing to secure learning mode, otherwise the management link is lost and can only be restored by using another non-secure port or by connecting to the switch via the serial interface.
Static MAC Table Learning	
Delete	Check to delete the entry. It will be deleted during the next save.

VLAN ID	The VLAN ID of the entry.
MAC Address	The MAC address of the entry.
Port Members	Checkmarks indicate which ports are members of the entry. Check or uncheck as needed to modify the entry.
Adding a New Static Entry	Click <input type="button" value="Add"/> to add a new entry to the static MAC table. Specify the VLAN ID, MAC address, and port members for the new entry. Click "Save".

Buttons	
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.87 VLANs

This page allows for controlling [VLAN](#) configuration on the switch.

The page is divided into a global section and a per-port configuration section.

Global VLAN Configuration								
Allowed Access VLANs	<input type="text" value="1"/>							
Ethertype for Custom S-ports	<input type="text" value="88A8"/>							
Port VLAN Configuration								
Port	Mode	Port VLAN	Port Type	Ingress Filtering	Ingress Acceptance	Egress Tagging	Allowed VLANs	Forbidden VLANs
*	<>	1	<>	<input checked="" type="checkbox"/>	<>	<>	1	
1	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1	
2	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1	
3	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1	
4	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1	
5	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1	
6	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1	
7	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1	
8	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1	
9	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1	
10	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1	
<input type="button" value="Save"/> <input type="button" value="Reset"/>								

Object	Description
Global VLAN Configuration	

<p>Allowed Access VLANs</p>	<p>This field shows the allowed Access VLANs, i.e. it only affects ports configured as Access ports. Ports in other modes are members of all VLANs specified in the Allowed VLANs field. By default, only VLAN 1 is enabled. More VLANs may be created by using a list syntax where the individual elements are separated by commas. Ranges are specified with a dash separating the lower and upper bound. The following example will create VLANs 1, 10, 11, 12, 13, 200, and 300: <code>1,10-13,200,300</code>. Spaces are allowed in between the delimiters.</p>
<p>Ethertype for Custom S-ports</p>	<p>This field specifies the ethertype/TPID (specified in hexadecimal) used for Custom S-ports. The setting is in force for all ports whose Port Type is set to S-Custom-Port.</p>
<p>Port VLAN Configuration</p>	
<p>Port</p>	<p>This is the logical port number of this row.</p>
<p>Mode</p>	<p>The port mode (default is Access) determines the fundamental behavior of the port in question. A port can be in one of three modes as described below. Whenever a particular mode is selected, the remaining fields in that row will be either grayed out or made changeable depending on the mode in question. Grayed out fields show the value that the port will get when the mode is applied.</p>

Access:

Access ports are normally used to connect to end stations. Dynamic features like Voice VLAN may add the port to more VLANs behind the scenes. Access ports have the following characteristics:

- Member of exactly one VLAN, the Port VLAN (a.k.a. Access VLAN), which by default is 1
- Accepts untagged and C-tagged frames
- Discards all frames that are not classified to the Access VLAN
- On egress all frames classified to the Access VLAN are transmitted untagged. Other (dynamically added VLANs) are transmitted tagged

Trunk:

Trunk ports can carry traffic on multiple VLANs simultaneously, and are normally used to connect to other switches. Trunk ports have the following characteristics:

- By default, a trunk port is member of all VLANs (1-4095)
- The VLANs that a trunk port is member of may be limited by the use of [Allowed VLANs](#)
- Frames classified to a VLAN that the port is not a member of are discarded
- By default, all frames but frames classified to the Port VLAN (a.k.a. Native VLAN) get tagged on egress. Frames classified to the Port VLAN do not get C-tagged on egress
- Egress tagging can be changed to tag all frames, in which case only tagged frames are accepted on ingress



Hybrid:

Hybrid ports resemble trunk ports in many ways, but adds additional port configuration features. In addition to the characteristics described for trunk ports, hybrid ports have these abilities:

- Can be configured to be VLAN tag unaware, C-tag aware, S-tag aware, or S-custom-tag aware
- Ingress filtering can be controlled
- Ingress acceptance of frames and configuration of egress tagging can be configured independently

Port VLAN	<p>Determines the port's VLAN ID (a.k.a. PVID). Allowed VLANs are in the range 1 through 4095, default being 1.</p> <p>On ingress, frames get classified to the Port VLAN if the port is configured as VLAN unaware, the frame is untagged, or VLAN awareness is enabled on the port, but the frame is priority tagged (VLAN ID = 0).</p> <p>On egress, frames classified to the Port VLAN do not get tagged if Egress Tagging configuration is set to untag Port VLAN.</p> <p>The Port VLAN is called an "Access VLAN" for ports in Access mode and Native VLAN for ports in Trunk or Hybrid mode.</p>
Port Type	<p>Ports in hybrid mode allow for changing the port type, that is, whether a frame's VLAN tag is used to classify the frame on ingress to a particular VLAN, and if so, which TPID it reacts on. Likewise, on egress, the Port Type determines the TPID of the tag, if a tag is required.</p> <p><u>Unaware:</u></p> <p>On ingress, all frames, whether carrying a VLAN tag or not, get classified to the Port VLAN, and possible tags are not removed on egress.</p> <p><u>C-Port:</u></p> <p>On ingress, frames with a VLAN tag with TPID = 0x8100 get classified to the VLAN ID embedded in the tag. If a frame is untagged or priority tagged, the frame gets classified to the Port VLAN. If frames must be tagged on egress, they will be tagged with a C-tag.</p> <p><u>S-Port:</u></p> <p>On ingress, frames with a VLAN tag with TPID = 0x8100 or 0x88A8 get classified to the VLAN ID embedded in the tag. If a frame is untagged or priority tagged, the frame gets classified to the Port VLAN. If frames must be tagged on egress, they will be tagged with an S-tag.</p> <p><u>S-Custom-Port:</u></p> <p>On ingress, frames with a VLAN tag with a TPID = 0x8100 or equal to the Ethertype configured for Custom-S ports get classified to the VLAN ID embedded in the tag. If a frame is untagged or priority tagged, the frame gets classified to the Port VLAN. If frames must be tagged on egress, they will be tagged with the custom S-tag.</p>
Ingress Filtering	<p>Hybrid ports allow for changing ingress filtering. Access and Trunk ports always have ingress filtering enabled.</p> <p>If ingress filtering is enabled (checkbox is checked), frames classified to a VLAN that the port is not a member of get discarded.</p> <p>If ingress filtering is disabled, frames classified to a VLAN that the port is not a member of are accepted and forwarded to the switch engine. However, the port will never transmit frames classified to VLANs that it is not a member of.</p>

Ingress Acceptance	<p>Hybrid ports allow for changing the type of frames that are accepted on ingress.</p> <p><u>Tagged and Untagged</u></p> <p>Both tagged and untagged frames are accepted.</p> <p><u>Tagged Only</u></p> <p>Only tagged frames are accepted on ingress. Untagged frames are discarded.</p> <p><u>Untagged Only</u></p> <p>Only untagged frames are accepted on ingress. Tagged frames are discarded.</p>
Egress Tagging	<p>Ports in Trunk and Hybrid mode may control the tagging of frames on egress.</p> <p><u>Untag Port VLAN</u></p> <p>Frames classified to the Port VLAN are transmitted untagged. Other frames are transmitted with the relevant tag.</p> <p><u>Tag All</u></p> <p>All frames, whether classified to the Port VLAN or not, are transmitted with a tag.</p> <p><u>Untag All</u></p> <p>All frames, whether classified to the Port VLAN or not, are transmitted without a tag.</p> <p>This option is only available for ports in Hybrid mode.</p>
Allowed VLANs	<p>Ports in Trunk and Hybrid mode may control which VLANs they are allowed to become members of. Access ports can only be member of one VLAN, the Access VLAN.</p> <p>The field's syntax is identical to the syntax used in the Enabled VLANs field. By default, a Trunk or Hybrid port will become member of all VLANs, and is therefore set to 1-4095.</p> <p>The field may be left empty, which means that the port will not become member of any VLANs.</p>
Forbidden VLANs	<p>A port may be configured to never be member of one or more VLANs. This is particularly useful when dynamic VLAN protocols like MVRP and GVRP must be prevented from dynamically adding ports to VLANs.</p> <p>The trick is to mark such VLANs as forbidden on the port in question. The syntax is identical to the syntax used in the Enabled VLANs field.</p> <p>By default, the field is left blank, which means that the port may become a member of all possible VLANs.</p>

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.88 Private VLANs

[Add New Private VLAN](#)

2.3.89 Membership

The [Private VLAN](#) membership configurations for the switch can be monitored and modified here. Private [VLANs](#) can be added or deleted here. Port members of each Private VLAN can be added or removed here.

Private VLANs are based on the source port mask, and there are no connections to VLANs. This means that [VLAN IDs](#) and Private VLAN IDs can be identical.

A port must be a member of both a VLAN and a Private VLAN to be able to forward packets. By default, all ports are VLAN unaware and members of VLAN 1 and Private VLAN 1.

A VLAN unaware port can only be a member of one VLAN, but it can be a member of multiple Private VLANs.

Private VLAN Membership Configuration Auto-refresh [Refresh](#)

		Port Members									
Delete	PVLAN ID	1	2	3	4	5	6	7	8	9	10
<input type="checkbox"/>	1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Delete	<input type="text" value="0"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

[Add New Private VLAN](#)

[Save](#) [Reset](#)

Object	Description
Delete	To delete a private VLAN entry, check this box. The entry will be deleted during the next save.
PVLAN ID	Indicates the ID of this particular private VLAN.
Port members	A row of check boxes for each port is displayed for each private VLAN ID. To include a port in a Private VLAN, check the box. To remove or exclude the port from the Private VLAN, make sure the box is unchecked. By default, no ports are members, and all
	boxes are unchecked.

<p>Adding a New Private VLAN</p>	<p>Click <input type="button" value="Add New Private VLAN"/> to add a new private VLAN ID. An empty row is added to the table, and the private VLAN can be configured as needed. The allowed range for a private VLAN ID is the same as the switch port number range. Any values outside this range are not accepted, and a warning message appears. Click "OK" to discard the incorrect entry, or click "Cancel" to return to the editing and make a correction.</p> <p>The Private VLAN is enabled when you click "Save".</p> <p>The <input type="button" value="Delete"/> button can be used to undo the addition of new Private VLANs.</p>
---	--

Buttons	
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Add New Private VLAN"/>	Click to add a new private VLAN ID
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.90 Port Isolation

Port Isolation Configuration Auto-refresh

Port Number									
1	2	3	4	5	6	7	8	9	10
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

This page is used for enabling or disabling port isolation on ports in a [Private VLAN](#).

A port member of a [VLAN](#) can be isolated to other isolated ports on the same VLAN and Private VLAN.

Object	Description
Port Members	<p>A check box is provided for each port of a private VLAN.</p> <p>When checked, port isolation is enabled on that port.</p> <p>When unchecked, port isolation is disabled on that port.</p> <p>By default, port isolation is disabled on all ports.</p>

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.91 VCL



2.3.92 MAC-based VLAN






The MAC-based VLAN entries can be configured here. This page allows for adding and deleting MAC-based VLAN entries and assigning the entries to different ports. This page shows only static entries.

MAC-based VLAN Membership Configuration Auto-refresh

	Delete	MAC Address	VLAN ID	Port Members
			1 2 3 4 5 6 7 8 9 10	
Currently no entries present				

Object	Description
--------	-------------

Delete	To delete a MAC-based VLAN entry, check this box and press save. The entry will be deleted in the stack.
MAC Address	Indicates the MAC address.
VLAN ID	Indicates the VLAN ID.
Port Members	A row of check boxes for each port is displayed for each MAC-based VLAN entry. To include a port in a MAC-based VLAN, check the box. To remove or exclude the port from the MAC-based VLAN, make sure the box is unchecked. By default, no ports are members, and all boxes are unchecked.
Adding a New MAC-based VLAN	<p>Click  to add a new MAC-based VLAN entry. An empty row is added to the table, and the MAC-based VLAN entry can be configured as needed. Any unicast MAC address can be configured for the MAC-based VLAN entry. No broadcast or multicast MAC addresses are allowed. Legal values for a VLAN ID are 1 through 4095.</p> <p>The MAC-based VLAN entry is enabled when you click on "Save". A MAC-based VLAN without any port members will be deleted when you click "Save".</p> <p>The  button can be used to undo the addition of new MAC-based VLANs.</p> <p>The maximum possible MAC-based VLAN entries are limited to 256.</p>

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
	Refreshes the displayed table.
	Updates the table starting from the first entry in the MAC-based VLAN Table.
	Updates the table, starting with the entry after the last entry currently displayed.

2.3.93 Protocol-based VLAN






2.3.94 Protocol to Group


This page allows you to add new protocols to Group Name (unique for each Group) mapping entries as well as allow you to see and delete already mapped entries for the switch.

Protocol to Group Mapping Table			
			Auto-refresh <input type="checkbox"/> <input type="button" value="Refresh"/>
Delete	Frame Type	Value	Group Name
No Group entry found!			
<input type="button" value="Add New Entry"/>			
<input type="button" value="Save"/>		<input type="button" value="Reset"/>	

Object	Description
Delete	To delete a Protocol to Group Name map entry, check this box. The entry will be deleted on the switch during the next Save.
Frame Type	<p>Frame Type can have one of the following values:</p> <p>Ethernet</p> <p>LLC</p> <p>SNAP</p> <p>Note: On changing the Frame type field, valid value of the following text field will vary depending on the new frame type you selected.</p>
Value	<p>Valid value that can be entered in this text field depends on the option selected from the preceding Frame Type selection menu.</p> <p>Below is the criteria for three different Frame Types:</p> <p>For Ethernet: Values in the text field when Ethernet is selected as a Frame Type is called etype. Valid values for etype ranges from 0x0600-0xffff</p> <p>For LLC: Valid value in this case is comprised of two different sub-values.</p> <p>a. DSAP: 1-byte long string (0x00-0xff)</p>

	<p>b. SSAP: 1-byte long string (0x00-0xff)</p> <p>For SNAP: Valid value in this case also is comprised of two different sub-values.</p> <p>a. OUI: OUI (Organizationally Unique Identifier) is value in format of xx-xx-xx where each pair (xx) in string is a hexadecimal value ranges from 0x00-0xff.</p> <p>b. PID: If the OUI is hexadecimal 000000, the protocol ID is the Ethernet type (EtherType) field value for the protocol running on top of SNAP; if the OUI is an OUI for a particular organization, the protocol ID is a value assigned by that organization to the protocol running on top of SNAP.</p> <p>In other words, if value of OUI field is 00-00-00 then value of PID will be etype (0x0600-0xffff) and if value of OUI is other than 00-00-00 then valid value of PID will be any value from 0x0000 to 0xffff.</p>
Group Name	<p>A valid Group Name is a unique 16-character long string for every entry which consists of a combination of alphabets (a-z or A-Z) and integers(0-9).</p> <p>Note: special character and underscore(_) are not allowed.</p>



Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.
	The button can be used to undo the addition of new entry. The maximum possible Protocol to Group mappings are limited to 128.
	Click to add a new entry in mapping table.
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
	Click to refresh the page immediately.








2.3.95 Group to VLAN

This page allows you to map a already configured Group Name to a [VLAN](#) for the switch.

Object	Description
--------	-------------

Delete	To delete a Group Name to VLAN map entry, check this box. The entry will be deleted on the switch during the next Save.
Group Name	A valid Group Name is a string at the most 16 characters which consists of a combination of alphabets (a-z or A-Z) and integers(0-9), no special character is allowed. whichever Group name you try map to a VLAN must be present in Protocol to Group mapping table and must not be pre-used by any other existing mapping entry on this page.
VLAN ID	Indicates the ID to which Group Name will be mapped. A valid VLAN ID ranges from 1-4095.
Port Members	A row of check boxes for each port is displayed for each Group Name to VLAN ID mapping. To include a port in a mapping, check the box. To remove or exclude the port from the mapping, make sure the box is unchecked. By default, no ports are members, and all boxes are unchecked.
Adding a New Group to VLAN mapping entry	<p>Click  to add a new entry in mapping table. An empty row is added to the table, the Group Name, VLAN ID and port members can be configured as needed. Legal values for a VLAN ID are 1 through 4095.</p> <p>The  button can be used to undo the addition of new entry. The maximum possible Group to VLAN mappings are limited to 64.</p>





Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.
	Click to add a new entry in mapping table. Legal values for a VLAN ID are 1 through 4095 .
	The button can be used to undo the addition of new entry. The maximum possible Group to VLAN mappings are limited to 64.
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
	Click to refresh the page immediately.

2.3.96 IP Subnet-based VLAN

The IP subnet-based VLAN entries can be configured here. This page allows for adding, updating and deleting IP subnet-based VLAN entries and assigning the entries to different ports. This page shows only static entries.

IP Subnet-based VLAN Membership Configuration						Auto-refresh <input type="checkbox"/> Refresh								
Delete	VCE ID	IP Address	Mask Length	VLAN ID	Port Members									
					1	2	3	4	5	6	7	8	9	10
Currently no entries present														
Add New Entry														
Save Reset														

Object	Description
Delete	To delete a IP subnet-based VLAN entry, check this box and press save. The entry will be deleted in the stack.
VCE ID	Indicates the index of the entry. It is user configurable. It's value ranges from 0-128. If a VCE ID is 0, application will auto-generate the VCE ID for that entry. Deletion and lookup of IP subnet-based VLAN are based on VCE ID.
IP Address	Indicates the IP address.
Mask Length	Indicates the network mask length.
VLAN ID	Indicates the VLAN ID. VLAN ID can be changed for the existing entries.
Port Members	A row of check boxes for each port is displayed for each IP subnet-based VLAN entry. To include a port in a IP subnet-based VLAN, check the box. To remove or exclude the port from the IP subnet-based VLAN, make sure the box is unchecked. By default, no ports are members, and all boxes are unchecked.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.
	Click to add a new IP subnet-based VLAN entry. Legal values for a VLAN ID are 1 through 4095 .
	The button can be used to undo the addition of new IP subnet-based VLANs. The maximum possible IP subnet-based VLAN entries are limited to 128.
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

Refresh	Refreshes the displayed table.
---------	--------------------------------

2.3.97 Voice VLAN

2.3.98 Voice VLAN Configuration

The Voice VLAN feature enables voice traffic forwarding on the Voice VLAN, then the switch can classify and schedule network traffic. It is recommended that there be two VLANs on a port - one for voice, one for data. Before connecting the [IP](#) device to the switch, the IP phone should configure the voice [VLAN ID](#) correctly. It should be configured through its own GUI.

Voice VLAN Configuration



Mode	Disabled <input type="button" value="v"/>	
VLAN ID	1000	
Aging Time	86400	seconds
Traffic Class	7 (High) <input type="button" value="v"/>	

Port Configuration

Port	Mode	Security	Discovery Protocol
*	<> <input type="button" value="v"/>	<> <input type="button" value="v"/>	<> <input type="button" value="v"/>
1	Disabled <input type="button" value="v"/>	Disabled <input type="button" value="v"/>	OUI <input type="button" value="v"/>
2	Disabled <input type="button" value="v"/>	Disabled <input type="button" value="v"/>	OUI <input type="button" value="v"/>
3	Disabled <input type="button" value="v"/>	Disabled <input type="button" value="v"/>	OUI <input type="button" value="v"/>
4	Disabled <input type="button" value="v"/>	Disabled <input type="button" value="v"/>	OUI <input type="button" value="v"/>
5	Disabled <input type="button" value="v"/>	Disabled <input type="button" value="v"/>	OUI <input type="button" value="v"/>
6	Disabled <input type="button" value="v"/>	Disabled <input type="button" value="v"/>	OUI <input type="button" value="v"/>
7	Disabled <input type="button" value="v"/>	Disabled <input type="button" value="v"/>	OUI <input type="button" value="v"/>
8	Disabled <input type="button" value="v"/>	Disabled <input type="button" value="v"/>	OUI <input type="button" value="v"/>
9	Disabled <input type="button" value="v"/>	Disabled <input type="button" value="v"/>	OUI <input type="button" value="v"/>
10	Disabled <input type="button" value="v"/>	Disabled <input type="button" value="v"/>	OUI <input type="button" value="v"/>

Object	Description
Mode	Indicates the Voice VLAN mode operation. We must disable MSTP feature before we enable Voice VLAN. It can avoid the conflict of ingress filtering. Possible modes are: Enabled: Enable Voice VLAN mode operation. Disabled: Disable Voice VLAN mode operation.
VLAN ID	Indicates the Voice VLAN ID. It should be a unique VLAN ID in the system and cannot equal each port PVID. It is a conflict in configuration if the value equals management VID, MVR VID, PVID etc. The allowed range is 1 to 4095 .
Aging Time	Indicates the Voice VLAN secure learning aging time. The allowed range is 10 to 10000000 seconds. It is used when security mode or auto detect mode is enabled. In

	other cases, it will be based on hardware aging time. The actual aging time will be situated between the [age_time; 2 * age_time] interval.
Traffic Class	Indicates the Voice VLAN traffic class. All traffic on the Voice VLAN will apply this class.
Port Mode	Indicates the Voice VLAN port mode. Possible port modes are: Disabled : Disjoin from Voice VLAN. Auto : Enable auto detect mode. It detects whether there is VoIP phone attached to the specific port and configures the Voice VLAN members automatically. Forced : Force join to Voice VLAN.
Port Security	Indicates the Voice VLAN port security mode. When the function is enabled, all non-telephonic MAC addresses in the Voice VLAN will be blocked for 10 seconds. Possible port modes are: Enabled : Enable Voice VLAN security mode operation. Disabled : Disable Voice VLAN security mode operation.
Port Discovery Protocol	Indicates the Voice VLAN port discovery protocol. It will only work when auto detect mode is enabled. We should enable LLDP feature before configuring discovery protocol to "LLDP" or "Both". Changing the discovery protocol to "OUI" or "LLDP" will restart auto detect process. Possible discovery protocols are: OUI : Detect telephony device by OUI address. LLDP : Detect telephony device by LLDP. Both : Both OUI and LLDP.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.99 Voice VLAN OUI

Configure VOICE VLAN OUI table on this page. The maximum number of entries is **16**. Modifying the OUI table will restart auto detection of OUI process.

Voice VLAN OUI Table

Delete	Telephony OUI	Description
<input type="checkbox"/>	00-01-e3	Siemens AG phones
<input type="checkbox"/>	00-03-6b	Cisco phones
<input type="checkbox"/>	00-0f-e2	H3C phones
<input type="checkbox"/>	00-60-b9	Philips and NEC AG phones
<input type="checkbox"/>	00-d0-1e	Pingtel phones
<input type="checkbox"/>	00-e0-75	Polycom phones
<input type="checkbox"/>	00-e0-bb	3Com phones

Object	Description
Delete	Check to delete the entry. It will be deleted during the next save.
Telephony OUI	A telephony OUI address is a globally unique identifier assigned to a vendor by IEEE. It must be 6 characters long and the input format is "xx-xx-xx" (x is a hexadecimal digit).
Description	The description of OUI address. Normally, it describes which vendor telephony device it belongs to. The allowed string length is 0 to 32.

Buttons	
<input type="button" value="Add New Entry"/>	Click to add a new access management entry.
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.100 QoS

2.3.101 Port Classification

This page allows you to configure the basic [QoS](#) Ingress Classification settings for all switch ports.

QoS Ingress Port Classification

Port	CoS	DPL	PCP	DEI	Tag Class.	DSCP Based	Address Mode
*	<> ▾	<> ▾	<> ▾	<> ▾		<input type="checkbox"/>	<> ▾
1	0 ▾	0 ▾	0 ▾	0 ▾	Disabled	<input type="checkbox"/>	Source ▾
2	0 ▾	0 ▾	0 ▾	0 ▾	Disabled	<input type="checkbox"/>	Source ▾
3	0 ▾	0 ▾	0 ▾	0 ▾	Disabled	<input type="checkbox"/>	Source ▾
4	0 ▾	0 ▾	0 ▾	0 ▾	Disabled	<input type="checkbox"/>	Source ▾
5	0 ▾	0 ▾	0 ▾	0 ▾	Disabled	<input type="checkbox"/>	Source ▾
6	0 ▾	0 ▾	0 ▾	0 ▾	Disabled	<input type="checkbox"/>	Source ▾
7	0 ▾	0 ▾	0 ▾	0 ▾	Disabled	<input type="checkbox"/>	Source ▾
8	0 ▾	0 ▾	0 ▾	0 ▾	Disabled	<input type="checkbox"/>	Source ▾
9	0 ▾	0 ▾	0 ▾	0 ▾	Disabled	<input type="checkbox"/>	Source ▾
10	0 ▾	0 ▾	0 ▾	0 ▾	Disabled	<input type="checkbox"/>	Source ▾

Save Reset

Object	Description
Port	The port number for which the configuration below applies.
CoS	Controls the default class of service. All frames are classified to a CoS. There is a one to one mapping between CoS, queue and priority. A CoS of 0 (zero) has the lowest priority.

	<p>If the port is VLAN aware, the frame is tagged and Tag Class. is enabled, then the frame is classified to a CoS that is mapped from the PCP and DEI value in the tag. Otherwise the frame is classified to the default CoS.</p> <p>The classified CoS can be overruled by a QCL entry.</p> <p>Note: If the default CoS has been dynamically changed, then the actual default CoS is shown in parentheses after the configured default CoS.</p>
--	--

DPL	<p>Controls the default drop precedence level.</p> <p>All frames are classified to a drop precedence level.</p> <p>If the port is VLAN aware and the frame is tagged, then the frame is classified to a DPL that is equal to the DEI value in the tag. Otherwise the frame is classified to the default DPL.</p> <p>If the port is VLAN aware, the frame is tagged and Tag Class. is enabled, then the frame is classified to a DPL that is mapped from the PCP and DEI value in the tag. Otherwise the frame is classified to the default DPL.</p> <p>The classified DPL can be overruled by a QCL entry.</p>
PCP	<p>Controls the default PCP value.</p> <p>All frames are classified to a PCP value.</p> <p>If the port is VLAN aware and the frame is tagged, then the frame is classified to the PCP value in the tag. Otherwise the frame is classified to the default PCP value.</p>
DEI	<p>Controls the default DEI value.</p> <p>All frames are classified to a DEI value.</p> <p>If the port is VLAN aware and the frame is tagged, then the frame is classified to the DEI value in the tag. Otherwise the frame is classified to the default DEI value.</p>
Tag Class.	<p>Shows the classification mode for tagged frames on this port.</p> <p>Disabled: Use default CoS and DPL for tagged frames.</p> <p>Enabled: Use mapped versions of PCP and DEI for tagged frames.</p> <p>Click on the mode in order to configure the mode and/or mapping.</p>
	<p>Note: This setting has no effect if the port is VLAN unaware. Tagged frames received on VLAN unaware ports are always classified to the default CoS and DPL.</p>
DSCP Based	<p>Click to Enable DSCP Based QoS Ingress Port Classification.</p>
Address Mode	<p>The IP/MAC address mode specifying whether the QCL classification must be based on source (SMAC/SIP) or destination (DMAC/DIP) addresses on this port. The allowed values are:</p> <p>Source: Enable SMAC/SIP matching.</p> <p>Destination: Enable DMAC/DIP matching.</p>

Buttons	
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.102 Port Policing



This page allows you to configure the [Policer](#) settings for all switch ports.

QoS Ingress Port Policers

Port	Enabled	Rate	Unit	Flow Control
*	<input type="checkbox"/>	500	<> ▾	<input type="checkbox"/>
1	<input type="checkbox"/>	500	kbps ▾	<input type="checkbox"/>
2	<input type="checkbox"/>	500	kbps ▾	<input type="checkbox"/>
3	<input type="checkbox"/>	500	kbps ▾	<input type="checkbox"/>
4	<input type="checkbox"/>	500	kbps ▾	<input type="checkbox"/>
5	<input type="checkbox"/>	500	kbps ▾	<input type="checkbox"/>
6	<input type="checkbox"/>	500	kbps ▾	<input type="checkbox"/>
7	<input type="checkbox"/>	500	kbps ▾	<input type="checkbox"/>
8	<input type="checkbox"/>	500	kbps ▾	<input type="checkbox"/>
9	<input type="checkbox"/>	500	kbps ▾	<input type="checkbox"/>
10	<input type="checkbox"/>	500	kbps ▾	<input type="checkbox"/>

Object	Description
Port	The port number for which the configuration below applies.
Enabled	Controls whether the policer is enabled on this switch port.
Rate	Controls the rate for the policer. The default value is 500. This value is restricted to 100-1000000 when the "Unit" is "kbps" or "fps", and it is restricted to 1-3300 when the "Unit" is "Mbps" or "kfps".

Unit	Controls the unit of measure for the policer rate as kbps, Mbps, fps or kfps . The default value is "kbps".
Flow Control	If flow control is enabled and the port is in flow control mode, then pause frames are sent instead of discarding frames.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.103 Port Scheduler

This page provides an overview of QoS Egress Port Schedulers for all switch ports.

Port	Mode	Weight					
		Q0	Q1	Q2	Q3	Q4	Q5
<u>1</u>	Strict Priority	-	-	-	-	-	-
<u>2</u>	Strict Priority	-	-	-	-	-	-
<u>3</u>	Strict Priority	-	-	-	-	-	-
<u>4</u>	Strict Priority	-	-	-	-	-	-
<u>5</u>	Strict Priority	-	-	-	-	-	-
<u>6</u>	Strict Priority	-	-	-	-	-	-
<u>7</u>	Strict Priority	-	-	-	-	-	-
<u>8</u>	Strict Priority	-	-	-	-	-	-
<u>9</u>	Strict Priority	-	-	-	-	-	-
<u>10</u>	Strict Priority	-	-	-	-	-	-

Object	Description
Port	The logical port for the settings contained in the same row. Click on the port number in order to configure the schedulers.
Mode	Shows the scheduling mode for this port.

Qn	Shows the weight for this queue and port.
-----------	---

2.3.104 Port Shaping

This page provides an overview of QoS Egress Port Shapers for all switch ports.

QoS Egress Port Shapers									
Port	Shapers								Port
	Q0	Q1	Q2	Q3	Q4	Q5	Q6	Q7	
<u>1</u>	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled
<u>2</u>	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled
<u>3</u>	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled
<u>4</u>	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled
<u>5</u>	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled
<u>6</u>	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled
<u>7</u>	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled
<u>8</u>	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled
<u>9</u>	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled
<u>10</u>	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled	disabled

Object	Description
Port	The logical port for the settings contained in the same row. Click on the port number in order to configure the shapers.
Qn	Shows "disabled" or actual queue shaper rate - e.g. "800 Mbps".
Port #	Shows "disabled" or actual port shaper rate - e.g. "800 Mbps".

2.3.105 Port Tag Remarking

This page provides an overview of [QoS](#) Egress Port Tag Remarking for all switch ports.

QoS Egress Port Tag Remarking

Port	Mode
<u>1</u>	Classified
<u>2</u>	Classified
<u>3</u>	Classified
<u>4</u>	Classified
<u>5</u>	Classified
<u>6</u>	Classified
<u>7</u>	Classified
<u>8</u>	Classified
<u>9</u>	Classified
<u>10</u>	Classified

Object	Description
Port	The logical port for the settings contained in the same row. Click on the port number in order to configure tag remarking.
Mode	Shows the tag remarking mode for this port. Classified: Use classified PCP/DEI values. Default: Use default PCP/DEI values. Mapped: Use mapped versions of QoS class and DP level .

2.3.106 Port DSCP

This page allows you to configure the basic [QoS](#) Port [DSCP](#) Configuration settings for all switch ports.

QoS Port DSCP Configuration



Port	Ingress		Egress
	Translate	Classify	Rewrite
*	<input type="checkbox"/>	<> ▾	<> ▾
1	<input type="checkbox"/>	Disable ▾	Disable ▾
2	<input type="checkbox"/>	Disable ▾	Disable ▾
3	<input type="checkbox"/>	Disable ▾	Disable ▾
4	<input type="checkbox"/>	Disable ▾	Disable ▾
5	<input type="checkbox"/>	Disable ▾	Disable ▾
6	<input type="checkbox"/>	Disable ▾	Disable ▾
7	<input type="checkbox"/>	Disable ▾	Disable ▾
8	<input type="checkbox"/>	Disable ▾	Disable ▾
9	<input type="checkbox"/>	Disable ▾	Disable ▾
10	<input type="checkbox"/>	Disable ▾	Disable ▾

Save

Reset

Object	Description
Port	The Port column shows the list of ports for which you can configure dscp ingress and egress settings.
Ingress	In Ingress settings you can change ingress translation and classification settings for individual ports. There are two configuration parameters available in Ingress: Translate Classify
Translate	To Enable the Ingress Translation click the checkbox.

<p>Classify</p>	<p>Classification for a port have 4 different values.</p> <ul style="list-style-type: none"> -Disable: No Ingress DSCP Classification. -DSCP=0: Classify if incoming (or translated if enabled) DSCP is 0. -Selected: Classify only selected DSCP for which classification is enabled as specified in DSCP Translation window for the specific DSCP. -All: Classify all DSCP.
<p>Egress</p>	<p>Port Egress Rewriting can be one of -</p> <ul style="list-style-type: none"> -Disable: No Egress rewrite. -Enable: Rewrite enabled without remapping. -Remap DP Unaware: DSCP from analyzer is remapped and frame is remarked with remapped DSCP value. The remapped DSCP value is always taken from the 'DSCP Translation->Egress Remap DP0' table. -Remap DP Aware: DSCP from analyzer is remapped and frame is remarked with remapped DSCP value. Depending on the DP level of the frame, the remapped DSCP value is either taken from the 'DSCP Translation->Egress Remap DP0' table or from the 'DSCP Translation->Egress Remap DP1' table.

Buttons	
	<p>Click to save changes.</p>
	<p>Click to undo any changes made locally and revert to previously saved values.</p>

2.3.107 DSCP-Based QoS

This page allows you to configure the basic [QoS DSCP](#) based QoS Ingress Classification settings for all switches.

DSCP-Based QoS Ingress Classification

DSCP	Trust	QoS Class	DPL
*	<input type="checkbox"/>	<> ▾	<> ▾
0 (BE)	<input type="checkbox"/>	0 ▾	0 ▾
1	<input type="checkbox"/>	0 ▾	0 ▾
2	<input type="checkbox"/>	0 ▾	0 ▾
3	<input type="checkbox"/>	0 ▾	0 ▾
4	<input type="checkbox"/>	0 ▾	0 ▾
5	<input type="checkbox"/>	0 ▾	0 ▾
6	<input type="checkbox"/>	0 ▾	0 ▾
7	<input type="checkbox"/>	0 ▾	0 ▾
8 (CS1)	<input type="checkbox"/>	0 ▾	0 ▾
9	<input type="checkbox"/>	0 ▾	0 ▾
10 (AF11)	<input type="checkbox"/>	0 ▾	0 ▾
11	<input type="checkbox"/>	0 ▾	0 ▾
12 (AF12)	<input type="checkbox"/>	0 ▾	0 ▾
13	<input type="checkbox"/>	0 ▾	0 ▾
14 (AF13)	<input type="checkbox"/>	0 ▾	0 ▾
15	<input type="checkbox"/>	0 ▾	0 ▾
16 (CS2)	<input type="checkbox"/>	0 ▾	0 ▾
17	<input type="checkbox"/>	0 ▾	0 ▾
18 (AF21)	<input type="checkbox"/>	0 ▾	0 ▾
19	<input type="checkbox"/>	0 ▾	0 ▾
20 (AF22)	<input type="checkbox"/>	0 ▾	0 ▾

Object	Description
DSCP	Maximum number of supported DSCP values are 64.
Trust	Controls whether a specific DSCP value is trusted. Only frames with trusted DSCP values are mapped to a specific QoS class and Drop Precedence Level . Frames with untrusted DSCP values are treated as a non-IP frame.
QoS Class	QoS class value can be any of (0-7)
DPL	Drop Precedence Level (0-1)

Buttons



<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.108 DSCP Translation

This page allows you to configure the basic [QoS DSCP](#) Translation settings for all switches. DSCP translation can be done in Ingress or Egress.

DSCP Translation				
DSCP	Ingress		Egress	
	Translate	Classify	Remap DP0	Remap DP1
*	<> ▾	<input type="checkbox"/>	<> ▾	<> ▾
0 (BE)	0 (BE) ▾	<input type="checkbox"/>	0 (BE) ▾	0 (BE) ▾
1	1 ▾	<input type="checkbox"/>	1 ▾	1 ▾
2	2 ▾	<input type="checkbox"/>	2 ▾	2 ▾
3	3 ▾	<input type="checkbox"/>	3 ▾	3 ▾
4	4 ▾	<input type="checkbox"/>	4 ▾	4 ▾
5	5 ▾	<input type="checkbox"/>	5 ▾	5 ▾
6	6 ▾	<input type="checkbox"/>	6 ▾	6 ▾
7	7 ▾	<input type="checkbox"/>	7 ▾	7 ▾
8 (CS1)	8 (CS1) ▾	<input type="checkbox"/>	8 (CS1) ▾	8 (CS1) ▾
9	9 ▾	<input type="checkbox"/>	9 ▾	9 ▾
10 (AF11)	10 (AF11) ▾	<input type="checkbox"/>	10 (AF11) ▾	10 (AF11) ▾
11	11 ▾	<input type="checkbox"/>	11 ▾	11 ▾
12 (AF12)	12 (AF12) ▾	<input type="checkbox"/>	12 (AF12) ▾	12 (AF12) ▾
13	13 ▾	<input type="checkbox"/>	13 ▾	13 ▾
14 (AF13)	14 (AF13) ▾	<input type="checkbox"/>	14 (AF13) ▾	14 (AF13) ▾
15	15 ▾	<input type="checkbox"/>	15 ▾	15 ▾
16 (CS2)	16 (CS2) ▾	<input type="checkbox"/>	16 (CS2) ▾	16 (CS2) ▾
17	17 ▾	<input type="checkbox"/>	17 ▾	17 ▾
18 (AF21)	18 (AF21) ▾	<input type="checkbox"/>	18 (AF21) ▾	18 (AF21) ▾
19	19 ▾	<input type="checkbox"/>	19 ▾	19 ▾
20 (AF22)	20 (AF22) ▾	<input type="checkbox"/>	20 (AF22) ▾	20 (AF22) ▾

Object	Description
DSCP	Maximum number of supported DSCP values are 64 and valid DSCP value ranges from 0 to 63.
Ingress	Ingress side DSCP can be first translated to new DSCP before using the DSCP for QoS class and DPL map. There are two configuration parameters for DSCP Translation - Translate Classify
Translation	DSCP at Ingress side can be translated to any of (0-63) DSCP values.
Classify	Click to enable Classification at Ingress side.
Egress	There are the following configurable parameters for Egress side - Remap DP0 Controls the remapping for frames with DP level 0. Remap DP1 Controls the remapping for frames with DP level 1.
Remap DP0	Select the DSCP value from select menu to which you want to remap. DSCP value ranges form 0 to 63.
Remap DP1	Select the DSCP value from select menu to which you want to remap. DSCP value ranges form 0 to 63.

Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.109 DSCP Classification

This page allows you to configure the mapping of [QoS class](#) and [Drop Precedence Level](#) to [DSCP](#) value.

DSCP Classification

QoS Class	DPL	DSCP
*	*	<> ▼
0	0	0 (BE) ▼
0	1	0 (BE) ▼
1	0	0 (BE) ▼
1	1	0 (BE) ▼
2	0	0 (BE) ▼
2	1	0 (BE) ▼
3	0	0 (BE) ▼
3	1	0 (BE) ▼
4	0	0 (BE) ▼
4	1	0 (BE) ▼
5	0	0 (BE) ▼
5	1	0 (BE) ▼
6	0	0 (BE) ▼
6	1	0 (BE) ▼
7	0	0 (BE) ▼
7	1	0 (BE) ▼

Object	Description
QoS Class	Actual QoS class.
DPL	Actual Drop Precedence Level.
DSCP	Select the classified DSCP value (0-63).

Buttons	
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.110 QoS Control List

This page shows the QoS Control List(QCL), which is made up of the QCEs. Each row describes a QCE that is defined. The maximum number of QCEs is **256** on each switch.

Click on the lowest plus sign to add a new QCE to the list.

QoS Control List Configuration												
QCE	Port	DMAC	SMAC	Tag Type	VID	PCP	DEI	Frame Type	Action			
									CoS	DPL	DSCP	
												+

Object	Description
QCE	Indicates the QCE id.
Port	Indicates the list of ports configured with the QCE.
DMAC	Indicates the destination MAC address. Possible values are: Any : Match any DMAC. Unicast : Match unicast DMAC. Multicast : Match multicast DMAC. Broadcast : Match broadcast DMAC. The default value is 'Any'.
SMAC	Match specific source MAC address or 'Any'. If a port is configured to match on DMAC/DIP, this field indicates the DMAC.
Tag Type	Indicates tag type. Possible values are: Any : Match tagged and untagged frames. Untagged : Match untagged frames. Tagged : Match tagged frames. The default value is 'Any'.
VID	Indicates (VLAN ID), either a specific VID or range of VIDs. VID can be in the range 1-4095 or 'Any'
PCP	Priority Code Point: Valid values of PCP are specific(0, 1, 2, 3, 4, 5, 6, 7) or range(0-1, 2-3, 4-5, 6-7, 0-3, 4-7) or 'Any'.
DEI	Drop Eligible Indicator: Valid value of DEI are 0, 1 or 'Any'.

<p>Frame Type</p>	<p>Indicates the type of frame. Possible values are:</p> <p>Any: Match any frame type.</p> <p>Ethernet: Match EtherType frames.</p> <p>LLC: Match (LLC) frames.</p> <p>SNAP: Match (SNAP) frames.</p> <p>IPv4: Match IPv4 frames.</p> <p>IPv6: Match IPv6 frames.</p>
<p>Action</p>	<p>Indicates the classification action taken on ingress frame if parameters configured are matched with the frame's content.</p> <p>Possible actions are:</p> <p>CoS: Classify Class of Service.</p> <p>DPL: Classify Drop Precedence Level.</p> <p>DSCP: Classify DSCP value.</p>
<p>Modification Buttons</p>	<p>You can modify each QCE (QoS Control Entry) in the table using the following buttons:</p> <p>: Inserts a new QCE before the current row.</p> <p>: Edits the QCE.</p> <p>: Moves the QCE up the list.</p> <p>: Moves the QCE down the list.</p> <p>: Deletes the QCE.</p> <p>: The lowest plus sign adds a new entry at the bottom of the QCE listings.</p>

The QCE page includes the following fields:

QCE Configuration

Port Members									
1	2	3	4	5	6	7	8	9	10
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Key Parameters



DMAC	Any	▼
SMAC	Any	▼
Tag	Any	▼
VID	Any	▼
PCP	Any	▼
DEI	Any	▼
Frame Type	Any	▼

Action Parameters

CoS	0	▼
DPL	Default	▼
DSCP	Default	▼

Object	Description
<p>Port Members</p>	<p>Check the checkbox button to include the port in the QCL entry. By default all ports are included.</p>
<p>Key parameters</p>	<p>Key configuration is described as below:</p> <p>DMAC Destination MAC address: Possible values are 'Unicast', 'Multicast', 'Broadcast' or 'Any'.</p> <p>SMAC Source MAC address: xx-xx-xx-xx-xx-xx or 'Any'. If a port is configured to match on DMAC/DIP, this field is the Destination MAC address.</p> <p>Tag Value of Tag field can be 'Untagged', 'Tagged' or 'Any'.</p> <p>VID Valid value of VLAN ID can be any value in the range 1-4095 or 'Any'; user can enter either a specific value or a range of VIDs.</p> <p>PCP Valid value PCP are specific (0, 1, 2, 3, 4, 5, 6, 7) or range (0-1, 2-3, 4-5, 6-7, 0-3, 4-7) or 'Any'.</p> <p>DEI Valid value of DEI can be '0', '1' or 'Any'.</p> <p>Frame Type Frame Type can have any of the following values:</p> <p>Any: Allow all types of frames.</p> <p>EtherType: Ether Type Valid Ether Type can be 0x600-0xFFFF excluding 0x800(IPv4) and 0x86DD(IPv6) or 'Any'.</p> <p>LLC: SSAP Address Valid SSAP(Source Service Access Point) can vary from 0x00 to 0xFF or 'Any'.</p>

	<p>DSAP Address Valid DSAP(Destination Service Access Point) can vary from 0x00 to 0xFF or 'Any'.</p> <p>Control Valid Control field can vary from 0x00 to 0xFF or 'Any'.</p> <p>SNAP: PID Valid PID(a.k.a Ether Type) can be 0x0000-0xFFFF or 'Any'.</p> <p>IPv4: Protocol IP protocol number: (0-255, 'TCP' or 'UDP') or 'Any'.</p> <p>Source IP Specific Source IP address in value/mask format or 'Any'. IP and Mask are in the format x.y.z.w where x, y, z, and w are decimal numbers between 0 and 255. When Mask is converted to a 32-bit binary string and read from left to right, all bits following the first zero must also be zero. If a port is configured to match on DMAC/DIP, this field is the Destination IP address.</p> <p>IP Fragment IPv4 frame fragmented option: 'Yes', 'No' or 'Any'.</p> <p>DSCP Diffserv Code Point value (DSCP): It can be a specific value, range of values or 'Any'. DSCP values are in the range 0-63 including BE, CS1-CS7, EF or AF11-AF43.</p> <p>Sport Source TCP/UDP port:(0-65535) or 'Any', specific or port range applicable for IP protocol UDP/TCP.</p> <p>Dport Destination TCP/UDP port:(0-65535) or 'Any', specific or port range applicable for IP protocol UDP/TCP.</p> <p>IPv6: Protocol IP protocol number: (0-255, 'TCP' or 'UDP') or 'Any'.</p> <p>Source IP 32 LS bits of IPv6 source address in value/mask format or 'Any'. If a port is configured to match on DMAC/DIP, this field is the Destination IP address.</p> <p>DSCP Diffserv Code Point value (DSCP): It can be a specific value, range of values or 'Any'. DSCP values are in the range 0-63 including BE, CS1-CS7, EF or AF11-AF43.</p> <p>Sport Source TCP/UDP port:(0-65535) or 'Any', specific or port range applicable for IP protocol UDP/TCP.</p> <p>Dport Destination TCP/UDP port:(0-65535) or 'Any', specific or port range applicable for IP protocol UDP/TCP.</p>
Action Parameters	<p>CoS Class of Service: (0-7) or 'Default'.</p> <p>DP Drop Precedence Level: (0-1) or 'Default'.</p> <p>DSCP DSCP: (0-63, BE, CS1-CS7, EF or AF11-AF43) or 'Default'.</p> <p>'Default' means that the default classified value is not modified by this QCE.</p>

Buttons	
	Click to save the configuration and move to main QCL page.
	Click to undo any changes made locally and revert to previously saved values.

<input type="button" value="Cancel"/>	Return to the previous page without saving the configuration change.
---------------------------------------	--

2.3.111 Storm Control

Storm control for the switch is configured on this page.

There is a unicast storm rate control, multicast storm rate control, and a broadcast storm rate control. These only affect flooded frames, i.e. frames with a (VLAN ID, DMAC) pair not present on the MAC Address table.

The configuration indicates the permitted packet rate for unicast, multicast or broadcast traffic across the switch.

Storm Control Configuration

Frame Type	Enable	Rate (pps)
Unicast	<input type="checkbox"/>	1 <input type="button" value="v"/>
Multicast	<input type="checkbox"/>	1 <input type="button" value="v"/>
Broadcast	<input type="checkbox"/>	1 <input type="button" value="v"/>

Object	Description
Frame Type	The settings in a particular row apply to the frame type listed here: Unicast, Multicast or Broadcast.
Enable	Enable or disable the storm control status for the given frame type.
Rate	The rate unit is packets per second (pps). Valid values are: 1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1K, 2K, 4K, 8K, 16K, 32K, 64K, 128K, 256K, 512K or 1024K .

Buttons

<input type="button" value="Save"/>	Click to save changes.
-------------------------------------	------------------------

<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.
--------------------------------------	---

2.3.112 Mirror

Configure port [Mirroring](#) on this page.

To debug network problems, selected traffic can be copied, or mirrored, on a **mirror port** where a frame analyzer can be attached to analyze the frame flow.

The traffic to be copied on the **mirror port** is selected as follows:

Mirror Configuration



Port to mirror to Disabled ▼

Mirror Port Configuration

Port	Mode
*	<> ▼
1	Disabled ▼
2	Disabled ▼
3	Disabled ▼
4	Disabled ▼
5	Disabled ▼
6	Disabled ▼
7	Disabled ▼
8	Disabled ▼
9	Disabled ▼
10	Disabled ▼
CPU	Disabled ▼

- All frames received on a given port (also known as ingress or source mirroring).
- All frames transmitted on a given port (also known as egress or destination mirroring).

Object	Description
Port to mirror	Port to mirror also known as the mirror port . Frames from ports that have either source (rx) or destination (tx) mirroring enabled are mirrored on this port. Disabled disables mirroring.
Port	The logical port for the settings contained in the same row.
Mode	<p>Select mirror mode.</p> <p>Rx only Frames received on this port are mirrored on the mirror port. Frames transmitted are not mirrored.</p> <p>Tx only Frames transmitted on this port are mirrored on the mirror port. Frames received are not mirrored.</p> <p>Disabled Neither frames transmitted nor frames received are mirrored.</p> <p>Enabled Frames received and frames transmitted are mirrored on the mirror port.</p> <p>Note: For a given port, a frame is only transmitted once. It is therefore not possible to mirror mirror port Tx frames. Because of this, mode for the selected mirror port is limited to Disabled or Rx only.</p>


Buttons	
	Click to save changes.
	Click to undo any changes made locally and revert to previously saved values.

2.3.113 GVRP

2.3.114 Global Config

This page allows you to configure the basic [GVRP](#) Configuration settings for all switch ports.




Object	Description
GVRP Protocol timers	<p>Join-time is a value in the range 1-20 in the units of centi seconds, i.e. in units of one hundredth of a second. The default is 20.</p> <p>Leave-time is a value in the range 60-300 in the units of centi seconds, i.e. in units of one hundredth of a second. The default is 60.</p> <p>LeaveAll-time is a value in the range 1000-5000 in the units of centi seconds, i.e. in units of one hundredth of a second. The default is 1000.</p>
Max number of VLANs	When GVRP is enabled a maximum number of VLANs supported by GVRP is specified. By default this number is 20. This number can only be changed when GVRP is turned off.

Buttons	
	Click to save changes.

2.3.115 Port Config

This page allows you to enable a port for GVRP.

Buttons

GVRP Configuration		
<input type="checkbox"/> Enable GVRP		
Parameter	Value	
Join-time:	20	
Leave-time:	60	
LeaveAll-time:	1000	
Max VLANs:	20	
		
	Click to save changes.	

2.3.116 sFlow

This page allows for configuring [sFlow](#). The configuration is divided into two parts: Configuration of the sFlow receiver (a.k.a. sFlow collector) and configuration of per-port flow and counter samplers.

sFlow configuration is not persisted to non-volatile memory, which means that a reboot will disable sFlow sampling.

sFlow Configuration

Agent Configuration

IP Address

Receiver Configuration


Owner	<input type="text" value="<none>"/>	Release
IP Address/Hostname	<input type="text" value="0.0.0.0"/>	
UDP Port	<input type="text" value="6343"/>	
Timeout	<input type="text" value="0"/>	seconds
Max. Datagram Size	<input type="text" value="1400"/>	bytes

Port Configuration



Port	Flow Sampler			Counter Poller	
	Enabled	Sampling Rate	Max. Header	Enabled	Interval
*	<input type="checkbox"/>	0	128	<input type="checkbox"/>	0
1	<input type="checkbox"/>	0	128	<input type="checkbox"/>	0
2	<input type="checkbox"/>	0	128	<input type="checkbox"/>	0
3	<input type="checkbox"/>	0	128	<input type="checkbox"/>	0
4	<input type="checkbox"/>	0	128	<input type="checkbox"/>	0
5	<input type="checkbox"/>	0	128	<input type="checkbox"/>	0
6	<input type="checkbox"/>	0	128	<input type="checkbox"/>	0
7	<input type="checkbox"/>	0	128	<input type="checkbox"/>	0
8	<input type="checkbox"/>	0	128	<input type="checkbox"/>	0
9	<input type="checkbox"/>	0	128	<input type="checkbox"/>	0
10	<input type="checkbox"/>	0	128	<input type="checkbox"/>	0



Object	Description
Agent Configuration	
IP Address	The IP address used as Agent IP address in sFlow datagrams. It serves as a unique key that will identify this agent over extended periods of time. Both IPv4 and IPv6 addresses are supported.
Receiver Configuration	

Owner	<p>Basically, sFlow can be configured in two ways: Through local management using the Web or CLI interface or through SNMP. This read-only field shows the owner of the current sFlow configuration and assumes values as follows:</p> <ul style="list-style-type: none"> • If sFlow is currently unconfigured/unclaimed, Owner contains <code><none></code>. • If sFlow is currently configured through Web or CLI, Owner contains <code><Configured through local management></code>. • If sFlow is currently configured through SNMP, Owner contains a string identifying the sFlow receiver. <p>If sFlow is configured through SNMP, all controls - except for the Release-button - are disabled to avoid inadvertent reconfiguration.</p>
--------------	---

	<p>The  button allows for releasing the current owner and disable sFlow sampling. The button is disabled if sFlow is currently unclaimed. If configured through SNMP, the release must be confirmed (a confirmation request will appear).</p>
IP Address/Hostname	<p>The IP address or hostname of the sFlow receiver. Both IPv4 and IPv6 addresses are supported.</p>
UDP Port	<p>The UDP port on which the sFlow receiver listens to sFlow datagrams. If set to 0 (zero), the default port (6343) is used.</p>
Timeout	<p>The number of seconds remaining before sampling stops and the current sFlow owner is released. While active, the current time left can be updated with a click on the Refresh-button. If locally managed, the timeout can be changed on the fly without affecting any other settings.</p>
Max. Datagram Size	<p>The maximum number of data bytes that can be sent in a single sample datagram. This should be set to a value that avoids fragmentation of the sFlow datagrams. Valid range is 200 to 1468 bytes with default being 1400 bytes.</p>
Port Configuration	
Port	<p>The port number for which the configuration below applies.</p>
Flow Sampler Enabled	<p>Enables/disables flow sampling on this port.</p>
Flow Sampler Sampling Rate	<p>The statistical sampling rate for packet sampling. Set to N to sample on average 1/Nth of the packets transmitted/received on the port.</p> <p>Not all sampling rates are achievable. If an unsupported sampling rate is requested, the switch will automatically adjust it to the closest achievable. This will be reported back in this field.</p>
Flow Sampler Max. Header	<p>The maximum number of bytes that should be copied from a sampled packet to the sFlow datagram. Valid range is 14 to 200 bytes with default being 128 bytes.</p> <p>If the maximum datagram size does not take into account the maximum header size, samples may be dropped.</p>

Counter Poller Enabled	Enables/disables counter polling on this port.
Counter Poller Interval	With counter polling enabled, this specifies the interval - in seconds - between counter poller samples.

Buttons	
	See description under Owner .
	Click to refresh the page. Note that unsaved changes will be lost.

	Click to save changes. Note that sFlow configuration is not persisted to non-volatile memory.
	Click to undo any changes made locally and revert to previously saved values.

2.3.117 RingV2

This page provides Ring related configuration.

RingV2 Configuration

Ring Configuration

Index	Mode	Role	Ring Port(s)
1	Disable ▼	Ring(Slave) ▼	Forward Port : Port-1 ▼ Forward Port : Port-2 ▼
2	Disable ▼	Ring(Slave) ▼	Forward Port : Port-3 ▼ Forward Port : Port-4 ▼
3	Disable ▼	Chain(Member) ▼	Member Port : Port-1 ▼ Member Port : Port-2 ▼

Save
Reset

Object	Description
--------	-------------

<p>Index</p>	<p>The group index. This parameter is used for easy identifying the ring when user configure it.</p> <p>Group 1 (Index 1) - It supports configuration of ring.</p> <p>Group 2 (Index 2) - It supports configuration of ring, coupling and dual-homing.</p> <p>Group 3 (Index 3) - It supports configuration of chain and balancing-chain.</p>
<p>Mode</p>	<p>Enable Ring on the specific group.</p> <p>When Group 1 or 2 is enabled, all configuration of Group 3 will be reset to default. Group 3 all configuration options will be locked.</p> <p>To configure Group 3, both Group1 and 2 should be disabled first. When Group 3 is enabled, all configuration of Group1 and 2 will be reset to default. Group 1 and 2 all configuration options will be locked.</p>
<p>Role</p>	<p>Configure the Ring group on this switch as specific role.</p> <p>Group 1 - support option of ring-master and ring-slave.</p> <p style="padding-left: 40px;"># Ring - it could be master or slave.</p> <p>Group 2 - support configuration of the ring, coupling and dual-homing.</p> <p style="padding-left: 40px;"># Ring - it could be master or slave.</p> <p style="padding-left: 40px;"># Coupling - it could be primary and backup.</p> <p style="padding-left: 40px;"># Dual-Homing</p> <p>Group 3 - support configuration of the chain and balancing-chain.</p> <p style="padding-left: 40px;"># Chain - it could be head, tail or member.</p> <p style="padding-left: 40px;"># Balancing Chain - it could be central-block, terminal-1/2 or member.</p> <p>Note 1 - Group 1 must be enabled before enable Group 2 to coupling.</p> <p>Note 2 - When Group 1 or 2 is enabled, the configuration of Group 3 will be disabled.</p> <p>Note 3 - When Group 3 is enabled, the configuration of Group 1 and 2 will be disabled.</p>

Ring Port(s)	<p>Selecting ring port(s).</p> <p>Each ring port must be unique, CANNOT be configured in different groups; 2 ring ports between ring/chain CANNOT be the same.</p> <p># When role is ring/master, one ring port is forward port and another is block port. The block port is redundant port; it is blocking port in normal state.</p> <p># When role is ring/slave, both ring ports are forward port.</p> <p># When role is coupling/primary, only need one ring port named primary port.</p> <p># When role is coupling/backup, only need one ring port named backup port. This backup port is redundant port; it is blocking port in normal state.</p> <p># When role is dual-homing, one ring port is primary port and another is backup port. This backup port is redundant port; it is blocking port in normal state.</p> <p># When role is chain/head, one ring port is member port and another is head port. Both ring ports are forwarding port in normal state.</p>
---------------------	---

	<p># When role is chain/tail, one ring port is member port and another is tail port. The tail port is redundant port; it is blocking port in normal state.</p> <p># When role is chain/member, both ring ports are member port. Both ring ports are forwarding port in normal state.</p> <p># When role is balancing-chain/central-block, one ring port is member port and another is block port. The block port is redundant port; it is blocking port in normal state.</p> <p># When role is balancing-chain/terminal-1/2, one ring port is member port and another is terminal port. Both ring ports are forwarding port in normal state.</p> <p># When role is balancing-chain/member, both ring ports are member port. Both ring ports are forwarding port in normal state.</p>
--	--

Buttons

<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.3.118 DDM

Configure DDMI on this page.

DDMI Configuration

Mode

Object	Description
Mode	
Enabled	Enable DDMI mode operation.
Disabled	Disable DDMI mode operation.

Buttons	
<input type="button" value="Save"/>	Click to save changes.
<input type="button" value="Reset"/>	Click to undo any changes made locally and revert to previously saved values.

2.4 Monitor

2.4.1 System

2.4.2 System Information

The switch system information is provided here.

Object	Description
Contact	The system contact configured in Configuration System Information System Contact.

Name	The system name configured in Configuration System Information System Name.
Location	The system location configured in Configuration System Information System Location.
MAC Address	The MAC Address of this switch.
Chip ID	The Chip ID of this switch.
System Date	The current (GMT) system time and date. The system time is obtained through the Timing server running on the switch, if any.
System Uptime	The period of time the device has been operational.
Software Version	The software version of this switch.
Software Date	The date when the switch software was produced.

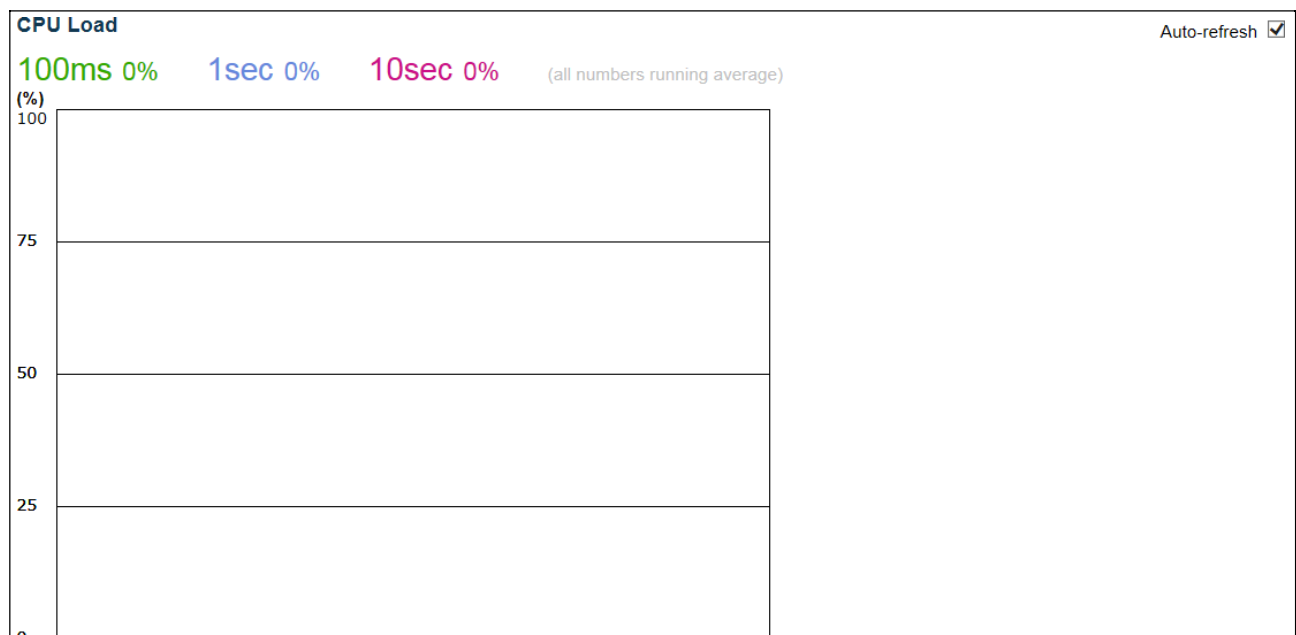
Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

<input type="button" value="Refresh"/>	Click to refresh the page.
--	----------------------------

2.4.3 CPU Load

This page displays the CPU load, using line chart.

The load is measured as averaged over the last 100ms, 1sec and 10 seconds intervals. The last 1~256



samples (maximum 256) are graphed, and the last numbers are displayed as text as well.

Buttons	
Auto-refresh <input checked="" type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

2.4.4 IP Status

This page displays the status of the IP protocol layer. The status is defined by the IP interfaces, the IP routes and the neighbour cache (ARP cache) status.

IP Interfaces Auto-refresh Refresh

Interface	Type	Address	Status
OS:lo	LINK	00-00-00-00-00-00	<UP LOOPBACK RUNNING MULTICAST>
OS:lo	IPv4	127.0.0.1/8	
OS:lo	IPv6	::1/128	
OS:lo	IPv6	fe80:1::1/64	
VLAN1	LINK	00-ed-90-90-ac-bc	<UP BROADCAST RUNNING MULTICAST>
VLAN1	IPv4	172.16.100.98/24	
VLAN1	IPv6	fe80:2::2ed:90ff:fe90:acbc/64	

IP Routes

Network	Gateway	Status
0.0.0.0/0	172.16.100.254	<UP GATEWAY HW_RT>
127.0.0.1/32	127.0.0.1	<UP HOST>
172.16.100.0/24	VLAN1	<UP HW_RT>
224.0.0.0/4	127.0.0.1	<UP>
::1/128	::1	<UP HOST>

Neighbour cache

IP Address	Link Address
172.16.100.129	VLAN1:00-1a-a0-09-c2-b1
172.16.100.249	VLAN1:00-40-f4-8d-b8-87
172.16.100.254	VLAN1:00-10-f3-0c-05-f2
fe80:2::2ed:90ff:fe90:acbc	VLAN1:00-ed-90-90-ac-bc

Object	Description
IP Interfaces	
Interface	The name of the interface.
Type	The address type of the entry. This may be LINK or IPv4 .
Address	The current address of the interface (of the given type).
Status	The status flags of the interface (and/or address).
IP Routes	
Network	The destination IP network or host address of this route.
Gateway	The gateway address of this route.
Status	The status flags of the route.
Neighbor cache	
IP Address	The IP address of the entry.

Link Address	The Link (MAC) address for which a binding to the IP address given exist..
Buttons	
<input type="button" value="Refresh"/>	Click to refresh the page.
Auto-refresh <input checked="" type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

2.4.5 System Log

Each page shows up to 999 table entries, selected through the "entries per page" input field. When first visited, the web page will show the beginning entries of this table.

The "Level" input field is used to filter the display system log entries.

The "Clear Level" input field is used to specify which system log entries will be cleared.

To clear specific system log entries, select the clear level first then click the button.

The "Start from ID" input field allow the user to change the starting point in this table. Clicking the button will update the displayed table starting from that or the closest next entry match.

In addition, these input fields will upon a button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start input field.







The will use the last entry of the currently displayed table as a basis for the next lookup.

When the end is reached the text "No more entries" is shown in the displayed table. Use the button to start over.

System Log Information			
		Auto-refresh <input type="checkbox"/>	<input type="button" value="Refresh"/> <input type="button" value="Clear"/> <input type="button" value=" <<"/> <input type="button" value="<<"/> <input type="button" value=">>"/> <input type="button" value=">> "/>
Level	All		
Clear Level	All		
The total number of entries is 2 for the given level.			
Start from ID <input type="text" value="1"/> with <input type="text" value="20"/> entries per page.			
ID	Level	Time	Message
1	Info	1970-01-01T00:00:01+00:00	Switch just made a cold boot.
2	Info	1970-01-01T00:00:03+00:00	Link up on port 2

Object	Description
ID	The identification of the system log entry.
Level	The level of the system log entry. Info : The system log entry is belonged information level. Warning : The system log entry is belonged warning level. Error : The system log entry is belonged error level.

Time	The occurred time of the system log entry.
Message	The detail message of the system log entry.

Buttons	
Auto-refresh <input checked="" type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
	Updates the table entries, starting from the current entry.
	Flushes the selected entries.
	Updates the table entries, starting from the first available entry.
	Updates the table entries, ending at the last entry currently displayed.
	Updates the table entries, starting from the last entry currently displayed.
	Updates the table entries, ending at the last available entry.

2.4.6 System Detailed Log

The switch system detailed log information is provided here.

Detailed System Log Information

ID

Message

Level	Info
Time	1970-01-01T00:00:01+00:00
Message	Switch just made a cold boot.

Object	Description
ID	The ID (≥ 1) of the system log entry.
Alarm Current Auto-refresh <input type="checkbox"/> <input type="button" value="Refresh"/>	
Alarm Current Alarm History	
Description	Time
No entry exists	
<input type="button" value="Refresh"/>	Updates the system log entry to the current entry ID.
<input type="button" value=" <<"/>	Updates the system log entry to the first available entry ID.
<input type="button" value="<<"/>	Updates the system log entry to the previous available entry ID.
<input type="button" value=">>"/>	Updates the system log entry to the next available entry ID.
<input type="button" value=">> "/>	Updates the system log entry to the last available entry ID.

2.4.7 System Alarm

Current Alarm is provided on this page.

Object	Description
Description	Alarm Type Description..
Time	Alarm occurrence date time.

Buttons

Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh data.

2.4.8 Green Ethernet

2.4.9 Port Power Saving

This page provides the current status for [EEE](#).

Port	Link	EEE	LP EEE Cap	EEE Savings	ActiPhy Savings	PerfectReach Savings
1		x	x	x	x	x
2		x	x	x	x	x
3		x	x	x	x	x
4		x	x	x	x	x
5		x	x	x	x	x
6		x	x	x	x	x
7		x	x	x	x	x
8		x	x	x	x	x
9		x	x	x	x	x
10		x	x	x	x	x

Object	Description
Port	This is the logical port number for this row.
Link	Shows if the link is up for the port (green = link up, red = link down).
EEE	Shows if EEE is enabled for the port (reflects the settings at the Port Power Savings configuration page).
LP EEE cap	Shows if the link partner is EEE capable.
EEE Savings	Shows if the system is currently saving power due to EEE . When EEE is enabled, the system will powered down if no frame has been received or transmitted in 5 uSec.
ActiPhy Saving	Shows if the system is currently saving power due to ActiPhy.
PerfectReach Savings	Shows if the system is currently saving power due to PerfectReach.

Buttons	
Auto-refresh <input checked="" type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

Refresh	Click to refresh the page.
---------	----------------------------

2.4.10 Ports

2.4.11 Ports State

This page provides an overview of the current switch port states.

Port State Overview Auto-refresh Refresh

The diagram shows a switch panel with the following components:

- RS and RR ports at the top left.
- POE ports (1-8) at the top right.
- RJ45 ports (1-14) in the center, with port 12 highlighted in yellow.
- Status LEDs (P1, P2, ALM) on the right side.

The port states are illustrated as follows:

RJ45 ports			
SFP ports			
State	Disabled	Down	Link

Buttons	
Auto-refresh <input checked="" type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
Refresh	Click to refresh the page.

2.4.12 Traffic Overview

This page provides an overview of general traffic statistics for all switch ports.

Port Statistics Overview											Auto-refresh <input type="checkbox"/>	Refresh	Clear
Port	Packets		Bytes		Errors		Drops		Filtered	Received			
	Received	Transmitted	Received	Transmitted	Received	Transmitted	Received	Transmitted					
1	0	0	0	0	0	0	0	0	0	0			
2	180551	7461	19269511	1201066	0	0	0	0	0	23186			
3	0	0	0	0	0	0	0	0	0	0			
4	0	0	0	0	0	0	0	0	0	0			
5	0	0	0	0	0	0	0	0	0	0			
6	0	0	0	0	0	0	0	0	0	0			
7	0	0	0	0	0	0	0	0	0	0			
8	0	0	0	0	0	0	0	0	0	0			
9	0	0	0	0	0	0	0	0	0	0			
10	0	0	0	0	0	0	0	0	0	0			

Object	Description
Port	The logical port for the settings contained in the same row.
Packet	The number of received and transmitted packets per port.
Bytes	The number of received and transmitted bytes per port.
Errors	The number of frames received in error and the number of incomplete transmissions per port.
Drops	The number of frames discarded due to ingress or egress congestion.
Filtered	The number of received frames filtered by the forwarding process.

Buttons	
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Clear"/>	Clears the counters for all ports.
<input checked="" type="checkbox"/> Auto-refresh	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

2.4.13 QoS Statistics

This page provides statistics for the different queues for all switch ports.

Queuing Counters																	Auto-refresh <input type="checkbox"/>	Refresh	Clear
Port	Q0		Q1		Q2		Q3		Q4		Q5		Q6		Q7				
	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx	Tx			
1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			
2	181041	0	0	0	0	0	0	0	0	0	0	0	0	0	0	7552			
3	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			
4	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			
5	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			
7	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			
8	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			
9	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			
10	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			

Object	Description
Port	The logical port for the settings contained in the same row.

Qn	There are 8 QoS queues per port. Q0 is the lowest priority queue.
Rx/Tx	The number of received and transmitted packets per queue

Buttons	
Auto-refresh <input checked="" type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Clear"/>	Clears the counters for all ports.

2.4.14 QCL Status

This page shows the QCL status by different QCL users. Each row describes the [QCE](#) that is defined. It is a conflict if a specific QCE is not applied to the hardware due to hardware limitations. The maximum number of QCEs is **256** on each switch.

QoS Control List Status							Combined	Auto-refresh	Resolve Conflict	Refresh
User	QCE	Port	Frame Type	Action			Conflict			
				CoS	DPL	DSCP				
No entries								<input type="checkbox"/>	<input type="button" value="Resolve Conflict"/>	<input type="button" value="Refresh"/>

Object	Description
User	Indicates the QCL user.
QCE	Indicates the QCE id.
Port	Indicates the list of ports configured with the QCE.
Frame Type	Indicates the type of frame. Possible values are: Any : Match any frame type. Ethernet : Match EtherType frames. LLC : Match (LLC) frames. SNAP : Match (SNAP) frames. IPv4 : Match IPv4 frames. IPv6 : Match IPv6 frames

Action	Indicates the classification action taken on ingress frame if parameters configured are matched with the frame's content. Possible actions are: CoS : Classify Class of Service . DPL : Classify Drop Precedence Level . DSCP : Classify DSCP value.
Conflict	Displays Conflict status of QCL entries. As H/W resources are shared by multiple applications. It may happen that resources required to add a QCE may not be available, in that case it shows conflict status as 'Yes', otherwise it is always 'No'. Please note that conflict can be resolved by releasing the H/W resources required to add QCL entry on pressing 'Resolve Conflict' button.

Buttons

<input type="text" value="Combined"/>	Select the QCL status from this drop down list.
<input checked="" type="checkbox"/> Auto-refresh	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Resolve Conflict"/>	Click to release the resources required to add QCL entry, in case the conflict status for any QCL entry is 'yes'.
<input type="button" value="Refresh"/>	Click to refresh the page.

2.4.15 Detailed Statistics

This page provides detailed traffic statistics for a specific switch port. Use the port select box to select which switch port details to display.

The displayed counters are the totals for receive and transmit, the size counters for receive and transmit, and the error counters for receive and transmit.

Receive Total		Transmit Total	
Rx Packets	0	Tx Packets	0
Rx Octets	0	Tx Octets	0
Rx Unicast	0	Tx Unicast	0
Rx Multicast	0	Tx Multicast	0
Rx Broadcast	0	Tx Broadcast	0
Rx Pause	0	Tx Pause	0
Receive Size Counters		Transmit Size Counters	
Rx 64 Bytes	0	Tx 64 Bytes	0
Rx 65-127 Bytes	0	Tx 65-127 Bytes	0
Rx 128-255 Bytes	0	Tx 128-255 Bytes	0
Rx 256-511 Bytes	0	Tx 256-511 Bytes	0
Rx 512-1023 Bytes	0	Tx 512-1023 Bytes	0
Rx 1024-1526 Bytes	0	Tx 1024-1526 Bytes	0
Rx 1527- Bytes	0	Tx 1527- Bytes	0
Receive Queue Counters		Transmit Queue Counters	
Rx Q0	0	Tx Q0	0
Rx Q1	0	Tx Q1	0
Rx Q2	0	Tx Q2	0
Rx Q3	0	Tx Q3	0
Rx Q4	0	Tx Q4	0
Rx Q5	0	Tx Q5	0
Rx Q6	0	Tx Q6	0
Rx Q7	0	Tx Q7	0
Receive Error Counters		Transmit Error Counters	
Rx Drops	0	Tx Drops	0
Rx CRC/Alignment	0	Tx Late/Exc. Coll.	0
Rx Undersize	0		
Rx Oversize	0		
Rx Fragments	0		
Rx Jabber	0		
Rx Filtered	0		

Object	Description
Receive Total and Transmit Total	
Rx and Tx Packets	The number of received and transmitted (good and bad) packets.
Rx and Tx Octets	The number of received and transmitted (good and bad) bytes. Includes FCS, but excludes framing bits.
Rx and Tx Unicast	The number of received and transmitted (good and bad) unicast packets.
Rx and Tx Multicast	The number of received and transmitted (good and bad) multicast packets.
Rx and Tx Broadcast	The number of received and transmitted (good and bad) broadcast packets.
Rx and Tx Pause	A count of the MAC Control frames received or transmitted on this port that have an opcode indicating a PAUSE operation.
Receive and Transmit Size Counters	
The number of received and transmitted (good and bad) packets split into categories based on their respective frame sizes.	
Receive and Transmit Queue Counters	
The number of received and transmitted packets per input and output queue.	
Receive Error Counters	
Rx Drops	The number of frames dropped due to lack of receive buffers or egress congestion.
Rx CRC/Alignment	The number of frames received with CRC or alignment errors.
Rx Undersize	The number of short ¹ frames received with valid CRC.
Rx Oversize	The number of long ² frames received with valid CRC.
Rx Fragments	The number of short ¹ frames received with invalid CRC.
Rx Jabber	The number of long ² frames received with invalid CRC.

Rx Filtered	The number of received frames filtered by the forwarding process. ¹ Short frames are frames that are smaller than 64 bytes. ² Long frames are frames that are longer than the configured maximum frame length for this port.
Transmit Error Counters	
Tx Drops	The number of frames dropped due to output buffer congestion.
Tx Late/Exc. Coll	The number of frames dropped due to excessive or late collisions.

Buttons	
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Clear"/>	Click to refresh the page immediately.
<input type="checkbox"/> Auto-refresh	<input checked="" type="checkbox"/> Auto-refresh Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

2.4.16 DHCP

2.4.17 DHCP Server

2.4.18 Statistics

This page displays the database counters and the number of DHCP messages sent and received by DHCP server.

DHCP Server Statistics Auto-refresh

Database Counters

Pool	Excluded IP Address	Declined IP Address
0	0	0

Binding Counters

Automatic Binding	Manual Binding	Expired Binding
0	0	0

DHCP Message Received Counters

DISCOVER	REQUEST	DECLINE	RELEASE	INFORM
0	0	0	0	0

DHCP Message Sent Counters

OFFER	ACK	NAK
0	0	0

Object	Description
Database Counters	
Pool	Number of pools.
Excluded IP Address	Number of excluded IP address ranges.
Declined IP Address	Number of declined IP addresses.
Binding Counters	
Automatic Binding	Number of bindings with network-type pools.
Manual Binding	Number of bindings that administrator assigns an IP address to a client. That is, the pool is of host type.
Expired Binding	Number of bindings that their lease time expired or they are cleared from Automatic/Manual type bindings.
DHCP Message Received Counters	
DISCOVER	Number of DHCP DISCOVER messages received.

REQUEST	Number of DHCP REQUEST messages received.
DECLINE	Number of DHCP DECLINE messages received.
RELEASE	Number of DHCP RELEASE messages received.
INFORM	Number of DHCP INFORM messages received.
DHCP Message Sent Counters	
OFFER	Number of DHCP OFFER messages sent.
ACK	Number of DHCP ACK messages sent.
NAK	Number of DHCP NAK messages sent.

Buttons	
Auto-refresh <input checked="" type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Clear"/>	Click to Clears DHCP Message Received Counters and DHCP Message Sent Counters.

2.4.19 Binding

This page displays bindings generated for DHCP clients.

DHCP Server Binding IP		Auto-refresh <input type="checkbox"/>	<input type="button" value="Refresh"/>	<input type="button" value="Clear Selected"/>	<input type="button" value="Clear Automatic"/>	<input type="button" value="Clear Manual"/>	<input type="button" value="Clear Expired"/>
Binding IP Address							
<input type="button" value="Delete"/>	<input type="text" value="IP"/>	<input type="text" value="Type"/>	<input type="text" value="State"/>	<input type="text" value="Pool Name"/>	<input type="text" value="Server ID"/>		

Object	Description
IP	IP address allocated to DHCP client.
Type	Type of binding. Possible types are Automatic, Manual, Expired.
State	State of binding. Possible states are Committed, Allocated, Expired.
Pool Name	The pool that generates the binding.
Server ID	Server IP address to service the binding.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Clear Selected"/>	Click to clear selected bindings. If the selected binding is Automatic or Manual, then it is changed to be Expired. If the selected binding is Expired, then it is freed.
<input type="button" value="Clear Automatic"/>	Click to clear all Automatic bindings and Change them to Expired bindings.
<input type="button" value="Clear Manual"/>	Click to clear all Manual bindings and Change them to Expired bindings.
<input type="button" value="Clear Expired"/>	Click to clear all Expired bindings and free them.

2.4.20 Declined IP

This page displays declined IP addresses.

DHCP Server Declined IP Auto-refresh

Declined IP Address

Object	Description
Declined IP	List of IP addresses declined.

Buttons

Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.

2.4.21 DHCP Snooping Table

Each page shows up to 99 entries from the Dynamic DHCP snooping table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the Dynamic DHCP snooping Table.

The "MAC address" and "VLAN" input fields allows the user to select the starting point in the Dynamic

DHCP snooping Table. Clicking the button will update the displayed table starting from that or the closest next Dynamic DHCP snooping Table match. In addition, the two input fields will - upon

a button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address.

The will use the last entry of the currently displayed table as a basis for the next lookup.

When the end is reached the text "No more entries" is shown in the displayed table. Use the button to start over.

Dynamic DHCP Snooping Table

Auto-refresh

Start from MAC address , VLAN with entries per page.

Object	Description
MAC Address	User MAC address of the entry.
VLAN ID	VLAN-ID in which the DHCP traffic is permitted.
Source Port	Switch Port Number for which the entries are displayed.
IP Address	User IP address of the entry.
IP Subnet Mask	User IP subnet mask of the entry.
DHCP Server Address	DHCP Server address of the entry.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Refreshes the displayed table starting from the input fields.

<input type="button" value="Clear"/>	Flushes all dynamic entries.
<input type="button" value=" <<"/>	Updates the table starting from the first entry in the Dynamic DHCP snooping Table.
<input type="button" value=">>"/>	Updates the table, starting with the entry after the last entry currently displayed.

2.4.22 DHCP Relay Statistics

This page provides statistics for [DHCP relay](#).

DHCP Relay Statistics								Auto-refresh <input type="checkbox"/>	<input type="button" value="Refresh"/>	<input type="button" value="Clear"/>
Server Statistics										
Transmit to Server	Transmit Error	Receive from Server	Receive Missing Agent Option	Receive Missing Circuit ID	Receive Missing Remote ID	Receive Bad Circuit ID	Receive Bad Remote ID			
0	0	0	0	0	0	0	0			
Client Statistics										
Transmit to Client	Transmit Error	Receive from Client	Receive Agent Option	Replace Agent Option	Keep Agent Option	Drop Agent Option				
0	0	0	0	0	0	0				

Object	Description
Server Statistics	
Transmit to Server	The number of packets that are relayed from client to server.
Transmit Error	The number of packets that resulted in errors while being sent to clients.
Receive from Server	The number of packets received from server.
Receive Missing Agent Option	The number of packets received without agent information options.
Receive Missing Circuit ID	The number of packets received with the Circuit ID option missing.
Receive Missing Remote ID	The number of packets received with the Remote ID option missing.
Receive Bad Circuit ID	The number of packets whose Circuit ID option did not match known circuit ID.
Receive Bad Remote ID	The number of packets whose Remote ID option did not match known Remote ID.
Client Statistics	
Transmit to Client	The number of relayed packets from server to client.
Transmit Error	The number of packets that resulted in error while being sent to servers.
Receive from Client	The number of received packets from server.
Receive Agent Option	The number of received packets with relay agent information option.

Replace Agent Option	The number of packets which were replaced with relay agent information option.
Keep Agent Option	The number of packets whose relay agent information was retained.
Drop Agent Option	The number of packets that were dropped which were received with relay agent information.

Buttons

Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Clear"/>	Clear all statistics.

2.4.23 DHCP Detailed Statistics

This page provides statistics for [DHCP snooping](#). Notice that the normal forward per-port TX statistics isn't increased if the incoming DHCP packet is done by L3 forwarding mechanism. And clear the statistics on specific port may not take effect on global statistics since it gathers the different layer overview.

DHCP Detailed Statistics Port 1
 Auto-refresh

Receive Packets		Transmit Packets	
Rx Discover	0	Tx Discover	0
Rx Offer	0	Tx Offer	0
Rx Request	0	Tx Request	0
Rx Decline	0	Tx Decline	0
Rx ACK	0	Tx ACK	0
Rx NAK	0	Tx NAK	0
Rx Release	0	Tx Release	0
Rx Inform	0	Tx Inform	0
Rx Lease Query	0	Tx Lease Query	0
Rx Lease Unassigned	0	Tx Lease Unassigned	0
Rx Lease Unknown	0	Tx Lease Unknown	0
Rx Lease Active	0	Tx Lease Active	0
Rx Discarded Checksum Error	0		
Rx Discarded from Untrusted	0		

Object	Description
Rx and Tx Discover	The number of discover (option 53 with value 1) packets received and transmitted.
Rx and Tx Offer	The number of offer (option 53 with value 2) packets received and transmitted.
Rx and Tx Request	The number of request (option 53 with value 3) packets received and transmitted.
Rx and Tx Decline	The number of decline (option 53 with value 4) packets received and transmitted.
Rx and Tx ACK	The number of ACK (option 53 with value 5) packets received and transmitted.
Rx and Tx NAK	The number of NAK (option 53 with value 6) packets received and transmitted.
Rx and Tx Release	The number of release (option 53 with value 7) packets received and transmitted.

Rx and Tx Inform	The number of inform (option 53 with value 8) packets received and transmitted.
Rx and Tx Lease Query	The number of lease query (option 53 with value 10) packets received and transmitted.
Rx and Tx Lease Unassigned	The number of lease unassigned (option 53 with value 11) packets received and transmitted.
Rx and Tx Unknown	The number of lease unknown (option 53 with value 12) packets received and transmitted.
Rx and Tx Active	The number of lease active (option 53 with value 13) packets received and transmitted.
Rx Discarded checksum error	The number of discard packet that IP/UDP checksum is error.
Rx Discarded from	The number of discarded packet that are coming from untrusted port.

Untrusted	
------------------	--

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Refreshes the displayed table starting from the input fields.
<input type="button" value="Clear"/>	Flushes all dynamic entries.

2.4.24 Security

2.4.25 Accessment Management Statistics

This page provides statistics for access management.

Access Management Statistics			
			Auto-refresh <input type="checkbox"/> <input type="button" value="Refresh"/> <input type="button" value="Clear"/>
Interface	Received Packets	Allowed Packets	Discarded Packets
HTTP	0	0	0
HTTPS	0	0	0
SNMP	0	0	0
TELNET	0	0	0
SSH	0	0	0

Object	Description
Interface	The interface type through which the remote host can access the switch.

Received Packets	Number of received packets from the interface when access management mode is enabled.
Allowed Packets	Number of allowed packets from the interface when access management mode is enabled.
Discarded Packets	Number of discarded packets from the interface when access management mode is enabled.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Clear"/>	Clear all statistics.

2.4.26 Network

2.4.27 Port Security

2.4.28 Switch

This page shows the Port Security status. Port Security is a module with no direct configuration. Configuration comes indirectly from other modules - the user modules. When a user module has enabled port security on a port, the port is set-up for software-based learning. In this mode, frames from unknown MAC addresses are passed on to the port security module, which in turn asks all user modules whether to allow this new MAC address to forward or block it. For a MAC address to be set in the forwarding state, all enabled user modules must unanimously agree on allowing the MAC address to forward. If only one chooses to block it, it will be blocked until that user module decides otherwise. The status page is divided into two sections - one with a legend of user modules and one with the actual port status.

Port Security Switch Status Auto-refresh Refresh

User Module Legend

User Module Name	Abbr
Limit Control	L
802.1X	8
DHCP Snooping	D
Voice VLAN	V

Port Status

Port	Users	State	MAC Count	
			Current	Limit
1	----	Disabled	-	-
2	----	Disabled	-	-
3	----	Disabled	-	-
4	----	Disabled	-	-
5	----	Disabled	-	-
6	----	Disabled	-	-
7	----	Disabled	-	-
8	----	Disabled	-	-
9	----	Disabled	-	-
10	----	Disabled	-	-

Object	Description
User Module Legend	
User Module Name	The full name of a module that may request Port Security services.
Abbr	A one-letter abbreviation of the user module. This is used in the Users column in the port status table.

Port Status	
Port	The port number for which the status applies. Click the port number to see the status for this particular port.
Users	Each of the user modules has a column that shows whether that module has enabled Port Security or not. A '-' means that the corresponding user module is not enabled, whereas a letter indicates that the user module abbreviated by that letter (see Abbr) has enabled port security.

State	<p>Shows the current state of the port. It can take one of four values:</p> <p>Disabled: No user modules are currently using the Port Security service.</p> <p>Ready: The Port Security service is in use by at least one user module, and is awaiting frames from unknown MAC addresses to arrive.</p> <p>Limit Reached: The Port Security service is enabled by at least the Limit Control user module, and that module has indicated that the limit is reached and no more MAC addresses should be taken in.</p> <p>Shutdown: The Port Security service is enabled by at least the Limit Control user module, and that module has indicated that the limit is exceeded. No MAC addresses can be learned on the port until it is administratively re-opened on the Limit Control configuration Web-page.</p>
MAC Count (Current, Limit)	<p>The two columns indicate the number of currently learned MAC addresses (forwarding as well as blocked) and the maximum number of MAC addresses that can be learned on the port, respectively.</p> <p>If no user modules are enabled on the port, the Current column will show a dash (-).</p> <p>If the Limit Control user module is not enabled on the port, the Limit column will show a dash (-).</p>

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds
<input type="button" value="Refresh"/>	Click to refresh the page immediately.

2.4.29 Port

This page shows the MAC addresses secured by the Port Security module. Port Security is a module with no direct configuration. Configuration comes indirectly from other modules - the user modules. When a user module has enabled port security on a port, the port is set-up for software-based learning. In this mode, frames from unknown MAC addresses are passed on to the port security module, which in turn asks all user modules whether to allow this new MAC address to forward or block it. For a MAC address to be set in the forwarding state, all enabled user modules must unanimously agree on allowing the MAC address to forward. If only one chooses to block it, it will be blocked until that user module decides otherwise.

Port Security Port Status Port 1					Port 1 ▼	Auto-refresh <input type="checkbox"/>	<input type="button" value="Refresh"/>
MAC Address	VLAN ID	State	Time of Addition	Age/Hold	<i>No MAC addresses attached</i>		

Object	Description
MAC Address & VLAN ID	The MAC address and VLAN ID that is seen on this port. If no MAC addresses are learned, a single row stating <i>"No MAC addresses attached"</i> is displayed.
State	Indicates whether the corresponding MAC address is blocked or forwarding. In the blocked state, it will not be allowed to transmit or receive traffic.
Time of Addition	Shows the date and time when this MAC address was first seen on the port.
Age/Hold	<p>If at least one user module has decided to block this MAC address, it will stay in the blocked state until the hold time (measured in seconds) expires. If all user modules have decided to allow this MAC address to forward, and aging is enabled, the Port Security module will periodically check that this MAC address still forwards traffic. If the age period (measured in seconds) expires and no frames have been seen, the MAC address will be removed from the MAC table. Otherwise a new age period will begin.</p> <p>If aging is disabled or a user module has decided to hold the MAC address indefinitely, a dash (-) will be shown.</p>

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.

2.4.30 NAS

2.4.31 Switch

This page provides an overview of the current [NAS](#) port states.

Network Access Server Switch Status							Auto-refresh <input type="checkbox"/>	<input type="button" value="Refresh"/>
Port	Admin State	Port State	Last Source	Last ID	QoS Class	Port VLAN ID		
1	Force Authorized	Globally Disabled			-			
2	Force Authorized	Globally Disabled			-			
3	Force Authorized	Globally Disabled			-			
4	Force Authorized	Globally Disabled			-			
5	Force Authorized	Globally Disabled			-			
6	Force Authorized	Globally Disabled			-			
7	Force Authorized	Globally Disabled			-			
8	Force Authorized	Globally Disabled			-			
9	Force Authorized	Globally Disabled			-			
10	Force Authorized	Globally Disabled			-			

Object	Description
Port	The switch port number. Click to navigate to detailed NAS statistics for this port.
Admin State	The port's current administrative state. Refer to NAS Admin State for a description of possible values.
Port State	The current state of the port. Refer to NAS Port State for a description of the individual states.
Last Source	The source MAC address carried in the most recently received EAPOL frame for EAPOL-based authentication, and the most recently received frame from a new client for MAC-based authentication.
Last ID	The user name (supplicant identity) carried in the most recently received Response Identity EAPOL frame for EAPOL-based authentication, and the source MAC address from the most recently received frame from a new client for MAC-based authentication.
QoS Class	QoS Class assigned to the port by the RADIUS server if enabled.
Port VLAN ID	The VLAN ID that NAS has put the port in. The field is blank, if the Port VLAN ID is not overridden by NAS. If the VLAN ID is assigned by the RADIUS server, "(RADIUS-assigned)" is appended to the VLAN ID. Read more about RADIUS-assigned VLANs here . If the port is moved to the Guest VLAN, "(Guest)" is appended to the VLAN ID. Read more about Guest VLANs here .

Buttons

Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.

2.4.32 Port

This page provides detailed [NAS](#) statistics for a specific switch port running EAPOL-based [IEEE 802.1X](#) authentication. For MAC-based ports, it shows selected backend server (RADIUS Authentication Server) statistics, only .

Use the port select box to select which port details to be displayed.

NAS Statistics Port 1 Port 1 Auto-refresh

Port State

Admin State	Force Authorized
Port State	Globally Disabled

Object	Description
Port State	
Admin State	The port's current administrative state. Refer to NAS Admin State for a description of possible values.
Port State	The current state of the port. Refer to NAS Port State for a description of the individual states.
QoS Class	The QoS class assigned by the RADIUS server. The field is blank if no QoS class is assigned.
Port VLAN ID	<p>The VLAN ID that NAS has put the port in. The field is blank, if the Port VLAN ID is not overridden by NAS.</p> <p>If the VLAN ID is assigned by the RADIUS server, "(RADIUS-assigned)" is appended to the VLAN ID. Read more about RADIUS-assigned VLANs here.</p> <p>If the port is moved to the Guest VLAN, "(Guest)" is appended to the VLAN ID. Read more about Guest VLANs here.</p>
Port Counters	
EAPOL Counters	<p>These supplicant frame counters are available for the following administrative states:</p> <ul style="list-style-type: none"> • Force Authorized • Force Unauthorized • Port-based 802.1X • Single 802.1X • Multi 802.1X
Backend Server Counters	<p>These backend (RADIUS) frame counters are available for the following administrative states:</p> <ul style="list-style-type: none"> • Port-based 802.1X • Single 802.1X • Multi 802.1X • MAC-based Auth.
Last Supplicant/Client Info	<p>Information about the last supplicant/client that attempted to authenticate. This information is available for the following administrative states:</p> <ul style="list-style-type: none"> • Port-based 802.1X • Single 802.1X • Multi 802.1X • MAC-based Auth.
Selected Counters	




Selected Counters	<p>The Selected Counters table is visible when the port is in one of the following administrative states:</p> <ul style="list-style-type: none"> • Multi 802.1X • MAC-based Auth. <p>The table is identical to and is placed next to the Port Counters table, and will be empty if no MAC address is currently selected. To populate the table, select one of the attached MAC Addresses from the table below.</p>
--------------------------	--

Attached MAC Addresses

Identity	<p>Shows the identity of the supplicant, as received in the Response Identity EAPOL frame.</p> <p>Clicking the link causes the supplicant's EAPOL and Backend Server counters to be shown in the Selected Counters table. If no supplicants are attached, it shows <i>No supplicants attached</i>.</p> <p>This column is not available for MAC-based Auth.</p>
MAC Address	<p>For Multi 802.1X, this column holds the MAC address of the attached supplicant. For MAC-based Auth., this column holds the MAC address of the attached client.</p> <p>Clicking the link causes the client's Backend Server counters to be shown in the Selected Counters table. If no clients are attached, it shows <i>No clients attached</i>.</p>
VLAN ID	<p>This column holds the VLAN ID that the corresponding client is currently secured through the Port Security module.</p>
State	<p>The client can either be authenticated or unauthenticated. In the authenticated state, it is allowed to forward frames on the port, and in the unauthenticated state, it is blocked. As long as the backend server hasn't successfully authenticated the client, it</p>
	<p>is unauthenticated. If an authentication fails for one or the other reason, the client will remain in the unauthenticated state for Hold Time seconds.</p>
Last Authentication	<p>Shows the date and time of the last authentication of the client (successful as well as unsuccessful).</p>

Buttons

Auto-refresh <input type="checkbox"/>	<p>Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.</p>
<input type="button" value="Refresh"/>	<p>Click to refresh the page immediat</p>

	<p>This button is available in the following modes:</p> <ul style="list-style-type: none"> • Force Authorized • Force Unauthorized • Port-based 802.1X • Single 802.1X <p>Click to clear the counters for the selected port.</p>
	<p>This button is available in the following modes:</p> <ul style="list-style-type: none"> • Multi 802.1X • MAC-based Auth.X <p>Click to clear both the port counters and all of the attached client's counters. The "Last Client" will not be cleared, however.</p>
	<p>This button is available in the following modes:</p> <ul style="list-style-type: none"> • Multi 802.1X • MAC-based Auth.X <p>Click to clear only the currently selected client's counters.</p>

2.4.33 ACL Status

This page shows the ACL status by different ACL users. Each row describes the [ACE](#) that is defined. It is a conflict if a specific ACE is not applied to the hardware due to hardware limitations. The maximum number of ACEs is **256** on each switch.

User	Ingress Port	Frame Type	Action	Rate Limiter	Port Redirect	Mirror	CPU	CPU Once	Counter	Conflict
DHCP	All	IPv4/UDP 67 DHCP Client	Deny	Disabled	Disabled	Disabled	Yes	No	765	No
DHCP	All	IPv4/UDP 68 DHCP Server	Deny	Disabled	Disabled	Disabled	Yes	No	161	No

Object	Description
User	Indicates the ACL user.
Ingress Port	Indicates the ingress port of the ACE. Possible values are: All: The ACE will match all ingress port. Port: The ACE will match a specific ingress port.

Frame Type	<p>Indicates the frame type of the ACE. Possible values are:</p> <p>Any: The ACE will match any frame type.</p> <p>EType: The ACE will match Ethernet Type frames. Note that an Ethernet Type based ACE will not get matched by IP and ARP frames.</p> <p>ARP: The ACE will match ARP/RARP frames.</p> <p>IPv4: The ACE will match all IPv4 frames.</p> <p>IPv4/ICMP: The ACE will match IPv4 frames with ICMP protocol.</p> <p>IPv4/UDP: The ACE will match IPv4 frames with UDP protocol.</p> <p>IPv4/TCP: The ACE will match IPv4 frames with TCP protocol.</p> <p>IPv4/Other: The ACE will match IPv4 frames, which are not ICMP/UDP/TCP.</p> <p>IPv6: The ACE will match all IPv6 standard frames.</p>
Action	<p>Indicates the forwarding action of the ACE.</p> <p>Permit: Frames matching the ACE may be forwarded and learned.</p> <p>Deny: Frames matching the ACE are dropped.</p> <p>Filter: Frames matching the ACE are filtered.</p>
Rate limiter	<p>Indicates the rate limiter number of the ACE. The allowed range is 1 to 16. When Disabled is displayed, the rate limiter operation is disabled.</p>
Port Redirect	<p>Indicates the port redirect operation of the ACE. Frames matching the ACE are redirected to the port number. The allowed values are Disabled or a specific port number. When Disabled is displayed, the port redirect operation is disabled.</p>


Mirror	<p>Specify the mirror operation of this port. The allowed values are:</p> <p>Enabled: Frames received on the port are mirrored.</p> <p>Disabled: Frames received on the port are not mirrored.</p> <p>The default value is "Disabled".</p>
CPU	Forward packet that matched the specific ACE to CPU.
CPU Once	Forward first packet that matched the specific ACE to CPU.
Counter	The counter indicates the number of times the ACE was hit by a frame.
Conflict	Indicates the hardware status of the specific ACE. The specific ACE is not applied to the hardware due to hardware limitations.


Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds..
<input type="button" value="Refresh"/>	Click to refresh the page.


2.4.34 ARP Inspection


Each page shows up to 99 entries from the Dynamic ARP Inspection table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the Dynamic ARP Inspection Table.




The "Start from port address", "VLAN", "MAC address" and "IP address" input fields allow the user to

select the starting point in the Dynamic ARP Inspection Table. Clicking the  button will update the displayed table starting from that or the closest next Dynamic ARP Inspection Table match. In



addition, the two input fields will - upon a  button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address.



The  will use the last entry of the currently displayed table as a basis for the next lookup. When

the end is reached the text "No more entries" is shown in the displayed table. Use the  button to start over.

Dynamic ARP Inspection Table				Auto-refresh <input type="checkbox"/>						
Start from	<input type="text" value="Port 1"/>	, VLAN	<input type="text" value="1"/>	, MAC address	<input type="text" value="00-00-00-00-00-00"/>	and IP address	<input type="text" value="0.0.0.0"/>	with	<input type="text" value="20"/>	entries per page.
Port	VLAN ID	MAC Address	IP Address	No more entries						



Object	Description
Port	Switch Port Number for which the entries are displayed.
VLAN ID	VLAN-ID in which the ARP traffic is permitted.
MAC Address	User MAC address of the entry.
IP Address	User IP address of the entry.



Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
	Refreshes the displayed table starting from the input fields.
	Flushes all dynamic entries.




	Updates the table starting from the first entry in the Dynamic ARP Inspection Table.
	Updates the table, starting with the entry after the last entry currently displayed.

2.4.35 IP Source Guard



Each page shows up to 99 entries from the Dynamic IP Source Guard table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the Dynamic IP Source Guard Table.


The "Start from port address", "VLAN" and "IP address" input fields allow the user to select the starting point in the Dynamic IP Source Guard Table. Clicking the  button will update the displayed table starting from that or the closest next Dynamic IP Source Guard Table match. In addition, the two input fields will - upon a  button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address.


The  will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table. Use the  button to start over.

Dynamic IP Source Guard Table				Auto-refresh <input type="checkbox"/>				
Start from	<input type="text" value="Port 1"/>	, VLAN	<input type="text" value="1"/>	and IP address	<input type="text" value="0.0.0.0"/>	with	<input type="text" value="20"/>	entries per page.
Port	VLAN ID	IP Address	MAC Address	No more entries				

Object	Description
Port	Switch Port Number for which the entries are displayed.
VLAN ID	VLAN-ID in which the IP traffic is permitted.
IP Address	User IP address of the entry.
MAC Address	Source MAC address.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
	Refresh the displayed table starting from the input fields.
	Flush all dynamic entries.

	Update the table starting from the first entry in the Dynamic IP Source Guard Table.
---	--

	Updates the table, starting with the entry after the last entry currently displayed.
---	--

2.4.36 AAA

2.4.37 RADIUS Overview

This page provides an overview of the status of the RADIUS servers configurable on the Authentication configuration page.

RADIUS Authentication Server Status Overview Auto-refresh [Refresh](#)

#	IP Address	Status
1	0.0.0.0:0	Disabled
2	0.0.0.0:0	Disabled
3	0.0.0.0:0	Disabled
4	0.0.0.0:0	Disabled
5	0.0.0.0:0	Disabled

RADIUS Accounting Server Status Overview

#	IP Address	Status
1	0.0.0.0:0	Disabled
2	0.0.0.0:0	Disabled
3	0.0.0.0:0	Disabled
4	0.0.0.0:0	Disabled
5	0.0.0.0:0	Disabled

Object	Description
RADIUS Authentication Servers	
#	The RADIUS server number. Click to navigate to detailed statistics for this server.
IP Address	The IP address and UDP port number (in <IP Address>:<UDP Port> notation) of this server.
Status	<p>The current status of the server. This field takes one of the following values:</p> <p>Disabled: The server is disabled.</p> <p>Not Ready: The server is enabled, but IP communication is not yet up and running.</p> <p>Ready: The server is enabled, IP communication is up and running, and the RADIUS module is ready to accept access attempts.</p> <p>Dead (X seconds left): Access attempts were made to this server, but it did not reply within the configured timeout. The server has temporarily been disabled, but will get re-enabled when the dead-time expires. The number of seconds left before this occurs is displayed in parentheses. This state is only reachable when more than one server is enabled.</p>

RADIUS Accounting Servers

#	The RADIUS server number. Click to navigate to detailed statistics for this server.
IP Address	The IP address and UDP port number (in <IP Address>:<UDP Port> notation) of this server.
Status	<p>The current status of the server. This field takes one of the following values:</p> <p>Disabled: The server is disabled.</p> <p>Not Ready: The server is enabled, but IP communication is not yet up and running.</p> <p>Ready: The server is enabled, IP communication is up and running, and the RADIUS module is ready to accept accounting attempts.</p> <p>Dead (X seconds left): Accounting attempts were made to this server, but it did not reply within the configured timeout. The server has temporarily been disabled, but will get re-enabled when the dead-time expires. The number of seconds left before this occurs is displayed in parentheses. This state is only reachable when more than one server is enabled.</p>

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.

2.4.38 RADIUS Details

This page provides detailed statistics for a particular RADIUS server.

RADIUS Authentication Statistics for Server #1		Server #1	Auto-refresh <input type="checkbox"/>	<input type="button" value="Refresh"/>	<input type="button" value="Clear"/>
Receive Packets	Transmit Packets				
Access Accepts	0	Access Requests	0		
Access Rejects	0	Access Retransmissions	0		
Access Challenges	0	Pending Requests	0		
Malformed Access Responses	0	Timeouts	0		
Bad Authenticators	0				
Unknown Types	0				
Packets Dropped	0				
Other Info					
IP Address		0.0.0.0			
State		Disabled			
Round-Trip Time		0 ms			
RADIUS Accounting Statistics for Server #1					
Receive Packets	Transmit Packets				
Responses	0	Requests	0		
Malformed Responses	0	Retransmissions	0		
Bad Authenticators	0	Pending Requests	0		
Unknown Types	0	Timeouts	0		
Packets Dropped	0				
Other Info					
IP Address		0.0.0.0			
State		Disabled			
Round-Trip Time		0 ms			

Object	Description
RADIUS Authentication Statistics	
Packet Counters	RADIUS authentication server packet counter. There are seven receive and four transmit counters.
Other Info	This section contains information about the state of the server and the latest round-trip time.
RADIUS Accounting Statistics	
Packet Counters	RADIUS accounting server packet counter. There are five receive and four transmit counters.
Other Info	This section contains information about the state of the server and the latest round-trip time.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Clear"/>	Clears the counters for the selected server. The "Pending Requests" counter will not be cleared by this operation.

2.4.39 Switch

2.4.40 RMON

2.4.41 Statistics




This page provides an overview of RMON Statistics entries. Each page shows up to 99 entries from the Statistics table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the Statistics table. The first displayed will be the one with the lowest ID found in the Statistics table.

RMON Statistics Status Overview															Auto-refresh <input type="checkbox"/>		<input type="button" value="Refresh"/>	<input type="button" value=" <<"/>	<input type="button" value=">>"/>
Start from Control Index <input type="text" value="0"/> with <input type="text" value="20"/> entries per page.																			
ID	Data Source (ifIndex)	Drop	Octets	Pkts	Broad-cast	Multi-cast	CRC Errors	Under-size	Over-size	Frag.	Jabb.	Coll.	64 Bytes	65 ~ 127	128 ~ 255	256 ~ 511	512 ~ 1023	1024 ~ 1588	
<i>No more entries</i>																			

Object	Description
ID	Indicates the index of Statistics entry.
Data Source(ifIndex)	The port ID which wants to be monitored.
Drop	The total number of events in which packets were dropped by the probe due to lack of resources.
Octets	The total number of octets of data (including those in bad packets) received on the network.
Pkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received.
Broad-cast	The total number of good packets received that were directed to the broadcast address.
Multi-cast	The total number of good packets received that were directed to a multicast address.
CRC Errors	The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
Under-Size	The total number of packets received that were less than 64 octets.



Over-size	The total number of packets received that were longer than 1518 octets.
Frag.	The number of frames which size is less than 64 octets received with invalid CRC.
Jabb.	The number of frames which size is larger than 64 octets received with invalid CRC.
Coll.	The best estimate of the total number of collisions on this Ethernet segment.
64	The total number of packets (including bad packets) received that were 64 octets in length.
65~127	The total number of packets (including bad packets) received that were between 65 to 127 octets in length.
128~255	The total number of packets (including bad packets) received that were between 128 to 255 octets in length.
256~511	The total number of packets (including bad packets) received that were between 256 to 511 octets in length.
512~1023	The total number of packets (including bad packets) received that were between 512 to 1023 octets in length.
1024~1588	The total number of packets (including bad packets) received that were between 1024 to 1588 octets in length.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

	Click to refresh the page immediately.
	Updates the table starting from the first entry in the Statistics table, i.e. the entry with the lowest ID.
	Updates the table, starting with the entry after the last entry currently displayed.

2.4.42 History

This page provides an overview of RMON History entries. Each page shows up to 99 entries from the History table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the History table. The first displayed will be the one with the lowest History Index and Sample Index found in the History table.

RMON History Overview Auto-refresh Refresh  

Start from Control Index and Sample Index with entries per page.

History Index	Sample Index	Sample Start	Drop	Octets	Pkts	Broad-cast	Multi-cast	CRC Errors	Under-size	Over-size	Frag.	Jabb.	Coll.	Utilization
<i>No more entries</i>														

Object	Description
History Index	Indicates the index of History control entry.
Sample Index	Indicates the index of the data entry associated with the control entry.
Sample Start	The value of sysUpTime at the start of the interval over which this sample was measured.
Drop	The total number of events in which packets were dropped by the probe due to lack of resources.
Octets	The total number of octets of data (including those in bad packets) received on the network.
Pkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received.
Broadcast	The total number of good packets received that were directed to the broadcast address.
Multicast	The total number of good packets received that were directed to a multicast address.
CRCErrors	The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).

Undersize	The total number of packets received that were less than 64 octets.
Oversize	The total number of packets received that were longer than 1518 octets.
Frag.	The number of frames which size is less than 64 octets received with invalid CRC.
Jabb.	The number of frames which size is larger than 64 octets received with invalid CRC.
Coll.	The best estimate of the total number of collisions on this Ethernet segment.

Utilization	The best estimate of the mean physical layer network utilization on this interface during this sampling interval, in hundredths of a percent.
--------------------	---

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value=" <<"/>	Updates the table starting from the first entry in the History table, i.e., the entry with the lowest History Index and Sample Index.
<input type="button" value=">>"/>	Updates the table, starting with the entry after the last entry currently displayed.

2.4.43 Alarm

This page provides an overview of RMON Alarm entries. Each page shows up to 99 entries from the Alarm table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the Alarm table. The first displayed will be the one with the lowest ID found in the Alarm table.

RMON Alarm Overview Auto-refresh

Start from Control Index with entries per page.

ID	Interval	Variable	Sample Type	Value	Startup Alarm	Rising Threshold	Rising Index	Falling Threshold	Falling Index
<i>No more entries</i>									

Object	Description
ID	Indicates the index of Alarm control entry.
Interval	Indicates the interval in seconds for sampling and comparing the rising and falling threshold.
Variable	Indicates the particular variable to be sampled.

Sample Type	The method of sampling the selected variable and calculating the value to be compared against the thresholds.
Value	The value of the statistic during the last sampling period.
Startup Alarm	The alarm that may be sent when this entry is first set to valid.
Rising Threshold	Rising threshold value.
Rising Index	Rising event index.
Falling Threshold	Falling threshold value.
Falling Index	Falling event index.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value=" <<"/>	Updates the table starting from the first entry in the Alarm Table, i.e. the entry with the lowest ID.
<input type="button" value=">>"/>	Updates the table, starting with the entry after the last entry currently displayed.

2.4.44 Event

This page provides an overview of RMON Event table entries. Each page shows up to 99 entries from the Event table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the Event table. The first displayed will be the one with the lowest Event Index and Log Index found in the Event table.

RMON Event Overview Auto-refresh

Start from Control Index and Sample Index with entries per page.

Event Index	LogIndex	LogTime	LogDescription
<i>No more entries</i>			

Object	Description
Event Index	Indicates the index of the event entry.
Log Index	Indicates the index of the log entry.

Log Time	Indicates Event log time.
LogDescription	Indicates the Event description.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value=" <<"/>	Updates the table starting from the first entry in the Event Table, i.e. the entry with the lowest Event Index and Log Index.
<input type="button" value=">>"/>	Updates the table, starting with the entry after the last entry currently displayed.

2.4.45 LACP

2.4.46 System Status

This page provides a status overview for all [LACP](#) instances.

LACP System Status						Auto-refresh <input type="checkbox"/>	<input type="button" value="Refresh"/>
Aggr ID	Partner System ID	Partner Key	Partner Prio	Last Changed	Local Ports		
<i>No ports enabled or no existing partners</i>							

Object	Description
Aggr ID	The Aggregation ID associated with this aggregation instance. For LLAG the id is shown as 'isid:aggr-id' and for GLAGs as 'aggr-id'
Partner System ID	The system ID (MAC address) of the aggregation partner.
Partner Key	The Key that the partner has assigned to this aggregation ID.
Last Changed	The time since this aggregation changed.
Local Ports	Shows which ports are a part of this aggregation for this switch.


Buttons	
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

2.4.47 Port Status

This page provides a status overview for [LACP](#) status for all ports.

LACP Status							Auto-refresh <input type="checkbox"/>	Refresh
Port	LACP	Key	Aggr ID	Partner System ID	Partner Port	Partner Prio		
1	No	-	-	-	-	-		
2	No	-	-	-	-	-		
3	No	-	-	-	-	-		
4	No	-	-	-	-	-		
5	No	-	-	-	-	-		
6	No	-	-	-	-	-		
7	No	-	-	-	-	-		
8	No	-	-	-	-	-		
9	No	-	-	-	-	-		
10	No	-	-	-	-	-		

Object	Description
Port	The switch port number.
LACP	'Yes' means that LACP is enabled and the port link is up. 'No' means that LACP is not enabled or that the port link is down. 'Backup' means that the port could not join the aggregation group but will join if other port leaves. Meanwhile it's LACP status is disabled.
Key	The key assigned to this port. Only ports with the same key can aggregate together.
Aggr ID	The Aggregation ID assigned to this aggregation group.
Partner System ID	The partner's System ID (MAC address).
Partner Port	The partner's port number connected to this port.
Partner Prio	The partner's port priority.

Buttons	
	Click to refresh the page immediately.
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

2.4.48 Port Statistics

This page provides an overview for [LACP](#) statistics for all ports.

LACP Statistics						Auto-refresh <input type="checkbox"/>	Refresh	Clear
Port	LACP Received	LACP Transmitted	Discarded					
			Unknown	Illegal				
1	0	0	0	0				
2	0	0	0	0				
3	0	0	0	0				
4	0	0	0	0				
5	0	0	0	0				
6	0	0	0	0				
7	0	0	0	0				
8	0	0	0	0				
9	0	0	0	0				
10	0	0	0	0				

Object	Description
Port	The switch port number.
LACP Received	Shows how many LACP frames have been received at each port.
LACP Transmitted	Shows how many LACP frames have been sent from each port.
Discarded	Shows how many unknown or illegal LACP frames have been discarded at each port.


Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
Refresh	Click to refresh the page immediately.
Clear	Clears the counters for all ports.

2.4.49 Loop Protection

This page displays the loop protection port status the ports of the switch.

Loop Protection Status							Auto-refresh <input type="checkbox"/>	Refresh
Port	Action	Transmit	Loops	Status	Loop	Time of Last Loop		
<i>No ports enabled</i>								


Object	Description
Port	The switch port number of the logical port.
Action	The currently configured port action.
Transmit	The currently configured port transmit mode.
Loops	The number of loops detected on this port.
Status	The current loop protection status of the port.
Loop	Whether a loop is currently detected on the port.
Time of Last Loop	The time of the last loop event detected.

Buttons	
	Click to refresh the page immediately.
Auto-refresh <input type="checkbox"/>	Check this box to enable an automatic refresh of the page at regular intervals.

2.4.50 Spanning Tree

2.4.51 Bridge Status

This page provides a status overview of all [STP](#) bridge instances.

STP Bridges							Auto-refresh <input type="checkbox"/>	
MSTI	Bridge ID	Root			Topology Flag	Topology Change Last		
		ID	Port	Cost				
CIST	32768.00-ED-90-90-AC-BC	32768.00-05-65-72-78-B2	2	200000	Steady	3d 20:33:19		

Object	Description
MSTI	The Bridge Instance. This is also a link to the STP Detailed Bridge Status .
Bridge ID	The Bridge ID of this Bridge instance.
Root ID	The Bridge ID of the currently elected root bridge.
Root Port	The switch port currently assigned the <i>root</i> port role.
Root Cost	Root Path Cost. For the Root Bridge it is zero. For all other Bridges, it is the sum of the Port Path Costs on the least cost path to the Root Bridge.
Topology Flag	The current state of the Topology Change Flag of this Bridge instance.
Topology Change Last	The time since last Topology Change occurred.

Buttons

<input type="button" value="Refresh"/>	Click to refresh the page immediately.
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

2.4.52 Port Status

This page displays the [STP](#) CIST port status for physical ports of the switch.

STP Port Status			
			Auto-refresh <input type="checkbox"/> <input type="button" value="Refresh"/>
Port	CIST Role	CIST State	Uptime
1	Disabled	Discarding	-
2	RootPort	Forwarding	3d 20:38:13
3	Disabled	Discarding	-
4	Disabled	Discarding	-
5	Disabled	Discarding	-
6	Disabled	Discarding	-
7	Disabled	Discarding	-
8	Disabled	Discarding	-
9	Disabled	Discarding	-
10	Disabled	Discarding	-

Object	Description
Port	The switch port number of the logical STP port.
CIST Role	The current STP port role of the CIST port. The port role can be one of the following values: AlternatePort BackupPort RootPort DesignatedPort Disabled .
CIST State	The current STP port state of the CIST port. The port state can be one of the following values: Discarding Learning Forwarding .
Uptime	The time since the bridge port was last initialized.

Buttons	
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

2.4.53 Port Statistics

This page displays the [STP](#) port statistics counters of bridge ports in the switch.

STP Statistics												
										Auto-refresh <input type="checkbox"/>	Refresh	Clear
Port	Transmitted				Received				Discarded			
	MSTP	RSTP	STP	TCN	MSTP	RSTP	STP	TCN	Unknown	Illegal		
2	22	0	49	14	69	0	172709	4	0	0		

Object	Description
Port	The switch port number of the logical STP port.
MSTP	The number of MSTP BPDU's received/transmitted on the port.
RSTP	The number of RSTP BPDU's received/transmitted on the port.
STP	The number of legacy STP Configuration BPDU's received/transmitted on the port.
TCN	The number of (legacy) Topology Change Notification BPDU's received/transmitted on the port.
Discarded Unknown	The number of unknown Spanning Tree BPDU's received (and discarded) on the port.
Discarded Illegal	The number of illegal Spanning Tree BPDU's received (and discarded) on the port.

Buttons	
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Clear"/>	Click to reset the counters.
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

2.4.54 MVR

2.4.55 MVR Statistics

This page provides [MVR](#) Statistics information.

MVR Statistics								
						Auto-refresh <input type="checkbox"/>	Refresh	Clear
VLAN ID	IGMP/MLD Queries Received	IGMP/MLD Queries Transmitted	IGMPv1 Joins Received	IGMPv2/MLDv1 Reports Received	IGMPv3/MLDv2 Reports Received	IGMPv2/MLDv1 Leaves Received		
No more entries								

Object	Description
--------	-------------

VLAN ID	The Multicast VLAN ID.
IGMP/MLD Queries Received	The number of Received Queries for IGMP and MLD, respectively.
IGMP/MLD Queries Transmitted	The number of Transmitted Queries for IGMP and MLD, respectively.
IGMPv1 Joins Received	The number of Received IGMPv1 Join's.
IGMPv2/MLDv1 Report's Received	The number of Received IGMPv2 Join's and MLDv1 Report's, respectively.
IGMPv3/MLDv2 Report's Received	The number of Received IGMPv1 Join's and MLDv2 Report's, respectively.
IGMPv2/MLDv1 Leave's Received	The number of Received IGMPv2 Leave's and MLDv1 Done's, respectively.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Clear"/>	Clears all Statistics counters.

2.4.56 MVR Channel Groups

Each page shows up to 99 entries from the MVR Group table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the MVR Channels (Groups) Information Table.

The "Start from [VLAN](#)", and "Group Address" input fields allow the user to select the starting point in the

MVR Channels (Groups) Information Table. Clicking the button will update the displayed table starting from that or the closest next MVR Channels (Groups) Information Table match. In addition,

the two input fields will - upon a button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address.

The will use the last entry of the currently displayed table as a basis for the next lookup. When

the end is reached the text "No more entries" is shown in the displayed table. Use the button

to start over.

MVR Channels (Groups) Information													
										Auto-refresh <input type="checkbox"/>	Refresh	<<	>>
Start from VLAN <input type="text" value="1"/> and Group Address <input type="text" value="::"/> with <input type="text" value="20"/> entries per page.													
VLAN ID		Groups		Port Members									
		1	2	3	4	5	6	7	8	9	10		
No more entries													

Object	Description
VLAN ID	VLAN ID of the group.
Groups	Group ID of the group displayed.
Port Members	Ports under this group.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
Refresh	Refreshes the displayed table starting from the input fields.


<<	Updates the table starting from the first entry in the MVR Channels (Groups) Information Table.
>>	Updates the table, starting with the entry after the last entry currently displayed.


2.4.57 MVR SFM Information

Each page shows up to 99 entries from the MVR SFM Information Table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the MVR SFM Information Table.


The "Start from [VLAN](#)", and "Group Address" input fields allow the user to select the starting point in the

MVR SFM Information Table. Clicking the  button will update the displayed table starting from that or the closest next MVR SFM Information Table match. In addition, the two input fields will -

upon a  button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address.






The will use the last entry of the currently displayed table as a basis for the next lookup.

When the end is reached the text "No more entries" is shown in the displayed table. Use the  button to start over.

VLAN ID	Group	Port	Mode	Source Address	Type	Hardware Filter/Switch
No more entries						

Object	Description
VLAN ID	VLAN ID of the group.
Group	Group address of the group displayed.
Port	Switch port number.
Mode	Indicates the filtering mode maintained per (VLAN ID, port number, Group Address) basis. It can be either Include or Exclude.
Source Address	IP Address of the source. Currently, system limits the total number of IP source addresses for filtering to be 128. When there is no any source filtering address, the text "None" is shown in the Source Address field.
Type	Indicates the Type. It can be either Allow or Deny.
Hardware Filter/Switch	Indicates whether data plane destined to the specific group address from the source
	IPv4/IPv6 address could be handled by chip or not.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
	Refreshes the displayed table starting from the input fields.
	Updates the table starting from the first entry in the MVR SFM Information Table.
	Updates the table, starting with the entry after the last entry currently displayed.

2.4.58 IPMC

2.4.59 IGMP Snooping

2.4.60 IGMP Snooping Status

This page provides [IGMP](#) Snooping status.

IGMP Snooping Status										Auto-refresh <input type="checkbox"/>	Refresh	Clear
Statistics												
VLAN ID	Querier Version	Host Version	Querier Status	Queries Transmitted	Queries Received	V1 Reports Received	V2 Reports Received	V3 Reports Received	V2 Leaves Received			
Router Port												
Port	Status											
1	-											
2	-											
3	-											
4	-											
5	-											
6	-											
7	-											
8	-											
9	-											
10	-											

Object	Description
VLAN ID	The VLAN ID of the entry.
Querier Version	Working Querier Version currently.
Host Version	Working Host Version currently.
Querier Status	Shows the Querier status is "ACTIVE" or "IDLE". "DISABLE" denotes the specific interface is administratively disabled.
Querier Transmitted	The number of Transmitted Queries.
Queries Received	The number of Received Queries.
V1 Report Received	The number of Received V1 Reports.
V2 Report Received	The number of Received V2 Reports.
V3 Report Received	The number of Received V3 Reports.
V2 Leaves Received	The number of Received V2 Leaves.
Router Port	Display which ports act as router ports. A router port is a port on the Ethernet switch that leads towards the Layer 3 multicast device or IGMP querier . Static denotes the specific port is configured to be a router port. Dynamic denotes the specific port is learnt to be a router port.
	Both denote the specific port is configured or learnt to be a router port.
Port	Switch port number.
Status	Indicate whether specific port is a router port or not.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Clear"/>	Clears all Statistics counters.

2.4.61 Groups Information

Each page shows up to 99 entries from the IGMP Group table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the IGMP Group Table.

The "Start from [VLAN](#)", and "group" input fields allow the user to select the starting point in the IGMP

Group Table. Clicking the button will update the displayed table starting from that or the

closest next IGMP Group Table match. In addition, the two input fields will - upon a button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address.

The will use the last entry of the currently displayed table as a basis for the next lookup. When

the end is reached the text "No more entries" is shown in the displayed table. Use the button to start over.

IGMP Snooping Group Information Auto-refresh

Start from VLAN and group address with entries per page.

	Port Members
VLAN ID Groups	1 2 3 4 5 6 7 8 9 10
<i>No more entries</i>	

Object	Description
VLAN ID	VLAN ID of the group.
Groups	Group address of the group displayed.
Port Members	Ports under this group.

Buttons

Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Refreshes the displayed table starting from the input fields.
<input type="button" value=" <<"/>	Updates the table, starting with the first entry in the IGMP Group Table.
<input type="button" value=">>"/>	Updates the table, starting with the entry after the last entry currently displayed.

2.4.62 IPv4 SFM Information

Each page shows up to 99 entries from the IGMP SFM Information table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the IGMP SFM Information Table.

The "Start from [VLAN](#)", and "group" input fields allow the user to select the starting point in the IGMP

SFM Information Table. Clicking the button will update the displayed table starting from that or the closest next IGMP SFM Information Table match. In addition, the two input fields will - upon a button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address.

The will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table. Use the button to start over.

IGMP SFM Information		Auto-refresh <input type="checkbox"/>	<input type="button" value="Refresh"/>	<input type="button" value=" <<"/>	<input type="button" value=">>"/>	
Start from VLAN	<input type="text" value="1"/>	and Group	<input type="text" value="224.0.0.0"/>	with	<input type="text" value="20"/>	
entries per page.						
VLAN ID	Group	Port	Mode	Source Address	Type	Hardware Filter/Switch
No more entries						

Object	Description
VLAN ID	VLAN ID of the group.
Group	Group address of the group displayed.
Port	Switch port number.

Mode	Indicates the filtering mode maintained per (VLAN ID, port number, Group Address) basis. It can be either Include or Exclude.
Source Address	IP Address of the source. Currently, system limits the total number of IP source addresses for filtering to be 128.
Type	Indicates the Type. It can be either Allow or Deny.
Hardware Filter/Switch	Indicates whether data plane destined to the specific group address from the source IPv4 address could be handled by chip or not.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Refreshes the displayed table starting from the input fields.
<input type="button" value=" <<"/>	Updates the table starting from the first entry in the IGMP SFM Information Table.
<input type="button" value=">>"/>	Updates the table, starting with the entry after the last entry currently displayed.

2.4.63 MLD Snooping

2.4.64 MLD Snooping Status

This page provides [MLD](#) Snooping status.

MLD Snooping Status						Auto-refresh <input type="checkbox"/>		
						<input type="button" value="Refresh"/>	<input type="button" value="Clear"/>	
Statistics								
VLAN ID	Querier Version	Host Version	Querier Status	Queries Transmitted	Queries Received	V1 Reports Received	V2 Reports Received	V1 Leaves Received
Router Port								
Port	Status							
1	-							
2	-							
3	-							
4	-							
5	-							
6	-							
7	-							
8	-							
9	-							
10	-							

Object	Description
VLAN ID	The VLAN ID of the entry.
Querier Version	Working Querier Version currently.
Host Version	Working Host Version currently.
Querier Status	Shows the Querier status is "ACTIVE" or "IDLE". "DISABLE" denotes the specific interface is administratively disabled.
Queries Transmitted	The number of Transmitted Queries.
Queries Received	The number of Received Queries.
V1 Report Received	The number of Received V1 Reports.
V2 Report Received	The number of Received V2 Reports.
V1 Leaves Received	The number of Received V1 Leaves.
Router Port	Display which ports act as router ports. A router port is a port on the Ethernet switch that leads towards the Layer 3 multicast device or MLD querier . Static denotes the specific port is configured to be a router port. Dynamic denotes the specific port is learnt to be a router port. Both denote the specific port is configured or learnt to be a router port.

Port	Switch port number.
status	Indicate whether specific port is a router port or not.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.
<input type="button" value="Clear"/>	Clears all Statistics counters.



2.4.65 Groups Information

Each page shows up to 99 entries from the MLD Group table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the MLD Group Table.

The "Start from [VLAN](#)", and "group" input fields allow the user to select the starting point in the MLD


Group Table. Clicking the button will update the displayed table starting from that or the



closest next MLD Group Table match. In addition, the two input fields will - upon a button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address.

The  will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table. Use the  button to start over.

MLD Snooping Group Information		Auto-refresh <input type="checkbox"/>	Refresh	<<	>>						
Start from VLAN	<input type="text" value="1"/>	and group address	<input type="text" value="ff00::"/>	with	<input type="text" value="20"/>	entries per page.					
VLAN ID	Groups	Port Members									
		1	2	3	4	5	6	7	8	9	10
No more entries											

Object	Description
VLAN ID	VLAN ID of the group.
Groups	Group address of the group displayed.
Port Members	Ports under this group.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
	Refreshes the displayed table starting from the input fields.

	Updates the table, starting with the first entry in the MLD Group Table.
	Updates the table, starting with the entry after the last entry currently displayed.

2.4.66 IPv6 SFM Information

Each page shows up to 99 entries from the MLD SFM Information table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the MLD SFM Information Table.

The "Start from [VLAN](#)", and "group" input fields allow the user to select the starting point in the MLD

SFM Information Table. Clicking the **Refresh** button will update the displayed table starting from that or the closest next MLD SFM Information Table match. In addition, the two input fields will - upon a

Refresh button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address.

The **>>** will use the last entry of the currently displayed table as a basis for the next lookup. When

the end is reached the text "No more entries" is shown in the displayed table. Use the **|<<** button to start over.

MLD SFM Information							Auto-refresh <input type="checkbox"/>	Refresh	<<	>>
Start from VLAN	<input type="text" value="1"/>	and Group	<input type="text" value="ff00::"/>	with	<input type="text" value="20"/>	entries per page.				
VLAN ID	Group	Port	Mode	Source Address	Type	Hardware Filter/Switch				
No more entries										

Object	Description
VLAN ID	VLAN ID of the group.
Group	Group address of the group displayed.
Port	Switch port number.
Mode	Indicates the filtering mode maintained per (VLAN ID, port number, Group Address) basis. It can be either Include or Exclude.
Source Address	IP Address of the source. Currently, system limits the total number of IP source addresses for filtering to be 128.
Type	Indicates the Type. It can be either Allow or Deny.
Hardware Filter/Switch	Indicates whether data plane destined to the specific group address from the source IPv6 address could be handled by chip or not.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
Refresh	Refreshes the displayed table starting from the input fields..
 <<	Updates the table starting from the first entry in the MLD SFM Information Table.
>>	Updates the table, starting with the entry after the last entry currently displayed.

2.4.67 LLDP

2.4.68 Neighbors

This page provides a status overview for all [LLDP](#) neighbors. The displayed table contains a row for each port on which an LLDP neighbor is detected.

LLDP Remote Device Summary						
Local Port	Chassis ID	Port ID	Port Description	System Name	System Capabilities	Management Address
No neighbor information found						

Object	Description
Local Port	The port on which the LLDP frame was received.
Chassis ID	The Chassis ID is the identification of the neighbor's LLDP frames.
Port ID	The Port ID is the identification of the neighbor port.
Port Description	Port Description is the port description advertised by the neighbor unit.
System Name	System Name is the name advertised by the neighbor unit.
System Capabilities	<p>System Capabilities describes the neighbor unit's capabilities. The possible capabilities are:</p> <ol style="list-style-type: none"> 1. Other 2. Repeater 3. Bridge 4. WLAN Access Point 5. Router 6. Telephone 7. DOCSIS cable device

	8. Station only 9. Reserved When a capability is enabled, the capability is followed by (+). If the capability is disabled, the capability is followed by (-).
Management Address	Management Address is the neighbor unit's address that is used for higher layer entities to assist discovery by the network management. This could for instance hold the neighbor's IP address.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page.

2.4.69 LLDP-MED Neighbors

This page provides a status overview of all [LLDP-MED](#) neighbors. The displayed table contains a row for each port on which an LLDP neighbor is detected. This function applies to VoIP devices which support LLDP-MED.

LLDP-MED Neighbor Information	Auto-refresh <input type="checkbox"/> <input type="button" value="Refresh"/>		
<table border="1" style="width: 100%;"> <thead> <tr> <th style="background-color: #cccccc;">Local Port</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">No LLDP-MED neighbor information found</td> </tr> </tbody> </table>		Local Port	No LLDP-MED neighbor information found
Local Port			
No LLDP-MED neighbor information found			

Object	Description
Port	The port on which the LLDP frame was received.

Device Type	<p>LLDP-MED Devices are comprised of two primary Device Types: Network Connectivity Devices and Endpoint Devices.</p> <p>LLDP-MED Network Connectivity Device Definition</p> <p>LLDP-MED Network Connectivity Devices, as defined in TIA-1057, provide access to the IEEE 802 based LAN infrastructure for LLDP-MED Endpoint Devices. An LLDP-MED Network Connectivity Device is a LAN access device based on any of the following technologies:</p> <ol style="list-style-type: none"> 1. LAN Switch/Router 2. IEEE 802.1 Bridge 3. IEEE 802.3 Repeater (included for historical reasons) 4. IEEE 802.11 Wireless Access Point 5. Any device that supports the IEEE 802.1AB and MED extensions defined by TIA-1057 and can relay IEEE 802 frames via any method. <p>LLDP-MED Endpoint Device Definition</p> <p>LLDP-MED Endpoint Devices, as defined in TIA-1057, are located at the IEEE 802 LAN network edge, and participate in IP communication service using the LLDP-MED</p>
--------------------	---

	<p>framework.</p> <p>Within the LLDP-MED Endpoint Device category, the LLDP-MED scheme is broken into further Endpoint Device Classes, as defined in the following.</p> <p>Each LLDP-MED Endpoint Device Class is defined to build upon the capabilities defined for the previous Endpoint Device Class. For-example will any LLDP-MED Endpoint Device claiming compliance as a Media Endpoint (Class II) also support all aspects of TIA-1057 applicable to Generic Endpoints (Class I), and any LLDP-MED Endpoint Device claiming compliance as a Communication Device (Class III) will also support all aspects of TIA-1057 applicable to both Media Endpoints (Class II) and Generic Endpoints (Class I).</p> <p>LLDP-MED Generic Endpoint (Class I)</p> <p>The LLDP-MED Generic Endpoint (Class I) definition is applicable to all endpoint products that require the base LLDP discovery services defined in TIA-1057, however do not support IP media or act as an end-user communication appliance. Such devices may include (but are not limited to) IP Communication Controllers, other communication related servers, or any device requiring basic services as defined in TIA-1057.</p> <p>Discovery services defined in this class include LAN configuration, device location, network policy, power management, and inventory management.</p> <p>LLDP-MED Media Endpoint (Class II)</p> <p>The LLDP-MED Media Endpoint (Class II) definition is applicable to all endpoint products that have IP media capabilities however may or may not be associated with a particular end user. Capabilities include all of the capabilities defined for the previous Generic Endpoint Class (Class I), and are extended to include aspects related to media streaming. Example product categories expected to adhere to this class include (but are not limited to) Voice / Media Gateways, Conference Bridges, Media Servers, and similar.</p> <p>Discovery services defined in this class include media-type-specific network layer policy discovery.</p> <p>LLDP-MED Communication Endpoint (Class III)</p>
--	---

	<p>The LLDP-MED Communication Endpoint (Class III) definition is applicable to all endpoint products that act as end user communication appliances supporting IP media. Capabilities include all of the capabilities defined for the previous Generic Endpoint (Class I) and Media Endpoint (Class II) classes, and are extended to include aspects related to end user devices. Example product categories expected to adhere to this class include (but are not limited to) end user communication appliances, such as IP Phones, PC-based softphones, or other communication appliances that directly support the end user.</p> <p>Discovery services defined in this class include provision of location identifier (including ECS / E911 information), embedded L2 switch support, inventory management.</p>
LLDP-MED Capabilities	<p>LLDP-MED Capabilities describes the neighbor unit's LLDP-MED capabilities. The possible capabilities are:</p> <ol style="list-style-type: none"> 1. LLDP-MED capabilities 2. Network Policy 3. Location Identification 4. Extended Power via MDI - PSE 5. Extended Power via MDI - PD 6. Inventory 7. Reserved
Application Type	<p>Application Type indicating the primary function of the application(s) defined for this network policy, advertised by an Endpoint or Network Connectivity Device. The possible application types are shown below.</p> <ol style="list-style-type: none"> 1. Voice - for use by dedicated IP Telephony handsets and other similar appliances supporting interactive voice services. These devices are typically deployed on a separate VLAN for ease of deployment and enhanced security by isolation from data applications. 2. Voice Signalling - for use in network topologies that require a different policy for the

	<p>voice signalling than for the voice media.</p> <p>3. Guest Voice - to support a separate limited feature-set voice service for guest users and visitors with their own IP Telephony handsets and other similar appliances supporting interactive voice services.</p> <p>4. Guest Voice Signalling - for use in network topologies that require a different policy for the guest voice signalling than for the guest voice media.</p> <p>5. Softphone Voice - for use by softphone applications on typical data centric devices, such as PCs or laptops.</p> <p>6. Video Conferencing - for use by dedicated Video Conferencing equipment and other similar appliances supporting real-time interactive video/audio services.</p> <p>7. Streaming Video - for use by broadcast or multicast based video content distribution and other similar applications supporting streaming video services that require specific network policy treatment. Video applications relying on TCP with buffering would not be an intended use of this application type.</p> <p>8. Video Signalling - for use in network topologies that require a separate policy for the video signalling than for the video media.</p>
Policy	<p>Policy indicates that an Endpoint Device wants to explicitly advertise that the policy is required by the device. Can be either Defined or Unknown</p> <p>Unknown: The network policy for the specified application type is currently unknown.</p> <p>Defined: The network policy is defined.</p>
TAG	<p>TAG is indicative of whether the specified application type is using a tagged or an untagged VLAN. Can be Tagged or Untagged.</p> <p>Untagged: The device is using an untagged frame format and as such does not include a tag header as defined by IEEE 802.1Q-2003.</p> <p>Tagged: The device is using the IEEE 802.1Q tagged frame format.</p>
VLAN ID	<p>VLAN ID is the VLAN identifier (VID) for the port as defined in IEEE 802.1Q-2003. A value of 1 through 4094 is used to define a valid VLAN ID. A value of 0 (Priority Tagged) is used if the device is using priority tagged frames as defined by IEEE 802.1Q-2003, meaning that only the IEEE 802.1D priority level is significant and the default PVID of the ingress port is used instead.</p>

Priority	Priority is the Layer 2 priority to be used for the specified application type. One of the eight priority levels (0 through 7).
DSCP	DSCP is the DSCP value to be used to provide Diffserv node behavior for the specified application type as defined in IETF RFC 2474. Contain one of 64 code point values (0 through 63).
Auto-negotiation	Auto-negotiation identifies if MAC/PHY auto-negotiation is supported by the link partner.
Auto-negotiation status	Auto-negotiation status identifies if auto-negotiation is currently enabled at the link partner. If Auto-negotiation is supported and Auto-negotiation status is disabled, the 802.3 PMD operating mode will be determined the operational MAU type field value rather than by auto-negotiation.
Auto-negotiation Capabilities	Auto-negotiation Capabilities shows the link partners MAC/PHY capabilities.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page.

2.4.70 EEE

By using [EEE](#) power savings can be achieved at the expense of traffic latency. This latency occurs due to that the circuits [EEE](#) turn off to save power, need time to boot up before sending traffic over the link. This time is called "wakeup time". To achieve minimal latency, devices can use [LLDP](#) to exchange information about their respective tx and rx "wakeup time ", as a way to agree upon the minimum wakeup time they need.

This page provides an overview of [EEE](#) information exchanged by [LLDP](#).

LLDP Neighbors EEE Information								
Local Port	Tx Tw	Rx Tw	Fallback Receive Tw	Echo Tx Tw	Echo Rx Tw	Resolved Tx Tw	Resolved Rx Tw	EEE in Sync
No LLDP EEE information found								

Object	Description
Local Port	The port on which LLDP frames are received or transmitted.

Tx Tw	The link partner's maximum time that transmit path can hold-off sending data after deassertion of LPI.
Rx Tw	The link partner's time that receiver would like the transmitter to hold-off to allow time for the receiver to wake from sleep.
Fallback Receive Tw	<p>The link partner's fallback receive Tw.</p> <p>A receiving link partner may inform the transmitter of an alternate desired Tw_sys_tx. Since a receiving link partner is likely to have discrete levels for savings, this provides the transmitter with additional information that it may use for a more efficient allocation. Systems that do not implement this option default the value to be the same as that of the Receive Tw_sys_tx.</p>
Echo Tx Tw	<p>The link partner's Echo Tx Tw value.</p> <p>The respective echo values shall be defined as the local link partners reflection (echo) of the remote link partners respective values. When a local link partner receives its echoed values from the remote link partner it can determine whether or not the remote link partner has received, registered and processed its most recent values. For example, if the local link partner receives echoed parameters that do not match the values in its local MIB, then the local link partner infers that the remote link</p>

	partners request was based on stale information.
Echo Rx Tw	The link partner's Echo Rx Tw value.
Resolved Tx Tw	<p>The resolved Tx Tw for this link. Note : NOT the link partner</p> <p>The resolved value that is the actual "tx wakeup time " used for this link (based on EEE information exchanged via LLDP).</p>
Resolved Rx Tw	<p>The resolved Rx Tw for this link. Note : NOT the link partner</p> <p>The resolved value that is the actual "tx wakeup time " used for this link (based on EEE information exchanged via LLDP).</p>
EEE in Sync	<p>Shows whether the switch and the link partner have agreed on wake times.</p> <p>Red - Switch and link partner have not agreed on wakeup times.</p> <p>Green - Switch and link partner have agreed on wakeup times.</p>

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

<input type="button" value="Refresh"/>	Click to refresh the page.
--	----------------------------

2.4.71 Port Statistics

This page provides an overview of all [LLDP](#) traffic.

Two types of counters are shown. **Global counters** are counters that refer to the whole switch, while **local counters** refer to per port counters for the currently selected switch.

LLDP Global Counters Auto-refresh

Global Counters	
Neighbor entries were last changed 1970-01-04T20:36:42+00:00 (10729 secs. ago)	
Total Neighbors Entries Added	1
Total Neighbors Entries Deleted	1
Total Neighbors Entries Dropped	0
Total Neighbors Entries Aged Out	1

LLDP Statistics Local Counters

Local Port	Tx Frames	Rx Frames	Rx Errors	Frames Discarded	TLVs Discarded	TLVs Unrecognized	Org. Discarded	Age-Outs
1	0	0	0	0	0	0	0	0
2	11475	6	0	0	0	0	0	1
3	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0

Object	Description
Global Counters	
Neighbor entries were last change	Shows the time when the last entry was last deleted or added. It also shows the time elapsed since the last change was detected.
Total Neighbors Entries Added	Shows the number of new entries added since switch reboot.
Total Neighbors Entries Deleted	Shows the number of new entries deleted since switch reboot.
Total Neighbors Entries Dropped	Shows the number of LLDP frames dropped due to the entry table being full.

Total Neighbors Entries Aged Out	Shows the number of entries deleted due to Time-To-Live expiring.
---	---

Local Counters	
Local Port	The port on which LLDP frames are received or transmitted.
Tx Frames	The number of LLDP frames transmitted on the port.
Rx Frames	The number of LLDP frames received on the port.
Rx Errors	The number of received LLDP frames containing some kind of error.
Frames Discarded	If a LLDP frame is received on a port, and the switch's internal table has run full, the LLDP frame is counted and discarded. This situation is known as "Too Many Neighbors" in the LLDP standard. LLDP frames require a new entry in the table when the Chassis ID or Remote Port ID is not already contained within the table. Entries are removed from the table when a given port's link is down, an LLDP shutdown frame is received, or when the entry ages out.
TLVs Discarded	Each LLDP frame can contain multiple pieces of information, known as TLVs (TLV is short for "Type Length Value"). If a TLV is malformed, it is counted and discarded.
TLVs Unrecognized	The number of well-formed TLVs, but with an unknown type value.
Org. Discarded	If LLDP frame is received with an organizationally TLV, but the TLV is not supported the TLV is discarded and counted.
Age-Outs	Each LLDP frame contains information about how long time the LLDP information is valid (age-out time). If no new LLDP frame is received within the age out time, the LLDP information is removed, and the Age-Out counter is incremented.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page.
<input type="button" value="Clear"/>	Clears the local counters . All counters (including global counters) are cleared upon reboot.

2.4.72 PoE

Power Over Ethernet Status

 Auto-refresh

Local Port	PD class	Power Requested	Power Allocated	Power Used	Current Used	Priority	Port Status
1	-	0 [W]	0 [W]	0 [W]	0 [mA]	Low	PoE turned OFF - PoE disabled
2	-	0 [W]	0 [W]	0 [W]	0 [mA]	Low	PoE turned OFF - PoE disabled
3	-	0 [W]	0 [W]	0 [W]	0 [mA]	Low	PoE turned OFF - PoE disabled
4	-	0 [W]	0 [W]	0 [W]	0 [mA]	Low	PoE turned OFF - PoE disabled
5	-	0 [W]	0 [W]	0 [W]	0 [mA]	Low	PoE turned OFF - PoE disabled
6	-	0 [W]	0 [W]	0 [W]	0 [mA]	Low	PoE turned OFF - PoE disabled
7	-	0 [W]	0 [W]	0 [W]	0 [mA]	Low	PoE turned OFF - PoE disabled
8	-	0 [W]	0 [W]	0 [W]	0 [mA]	Low	PoE turned OFF - PoE disabled
Total		0 [W]	0 [W]	0 [W]	0 [mA]		

This page allows the user to inspect the current status for all [PoE](#) ports.

Object	Description
PoE Status	
Local Port	This is the logical port number for this row.
PD Class	Each PD is classified according to a class that defines the maximum power the PD will use. The PD Class shows the PDs class. Five Classes are defined: Class 0: Max. power 15.4 W Class 1: Max. power 4.0 W Class 2: Max. power 7.0 W Class 3: Max. power 15.4 W Class 4: Max. power 30.0 W
Power Requested	The Power Requested shows the requested amount of power the PD wants to be reserved.
Power Allocated	The Power Allocated shows the amount of power the switch has allocated for the PD.
Power Used	The Power Used shows how much power the PD currently is using.
Current Used	The Power Used shows how much current the PD currently is using.
Priority	The Priority shows the port's priority configured by the user.
Port Status	The Port Status shows the port's status. The status can be one of the following values: PoE not available - No PoE chip found - PoE not supported for the port. PoE turned OFF - PoE disabled - PoE is disabled by user. PoE turned OFF - Power budget exceeded - The total requested or used power by the PDs exceeds the maximum power the Power Supply can deliver, and port(s) with the lowest priority is/are powered down. No PD detected - No PD detected for the port. PoE turned OFF - PD overload - The PD has requested or used more power than


	the port can deliver, and is powered down. PoE turned OFF - PD is off. Invalid PD - PD detected, but is not working correctly.
--	--


Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
Refresh	Click to refresh the page.


2.4.73 MAC Table

Each page shows up to 999 entries from the MAC table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the MAC Table. The first displayed will be the one with the lowest VLAN ID and the lowest MAC address found in the MAC Table.





The "Start from MAC address" and "VLAN" input fields allow the user to select the starting point in the

MAC Table. Clicking the  button will update the displayed table starting from that or the

closest next MAC Table match. In addition, the two input fields will - upon a  button click - assume the value of the first displayed entry, allowing for continuous refresh with the same start address.

The  will use the last entry of the currently displayed VLAN/MAC address pairs as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table. Use

the  button to start over.





MAC Address Table Auto-refresh    

Start from VLAN and MAC address with entries per page.

Type	VLAN	MAC Address	Port Members															
			CPU	1	2	3	4	5	6	7	8	9	10					
Dynamic	1	00-05-65-72-78-BD		✓														
Dynamic	1	00-10-F3-0C-05-F2		✓														
Dynamic	1	00-11-2F-DD-FF-C0		✓														
Dynamic	1	00-1A-A0-09-C2-B1		✓														
Dynamic	1	00-22-B0-9F-3D-DE		✓														
Dynamic	1	00-40-F4-8D-B8-87		✓														
Static	1	00-ED-90-90-AC-BC	✓															
Dynamic	1	02-01-00-00-00-00		✓														
Dynamic	1	14-D6-4D-0D-3E-25		✓														
Static	1	33-33-00-00-00-01	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Static	1	33-33-00-00-00-02	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Static	1	33-33-FF-90-AC-BC	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Dynamic	1	74-D0-2B-62-B1-AE		✓														
Static	1	FF-FF-FF-FF-FF-FF	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Object	Description
Switch (stack only)	The stack unit where the entry is learned.


Type	Indicates whether the entry is a static or a dynamic entry.
MAC Address	The MAC address of the entry.
VLAN	The VLAN ID of the entry.
Port Members	The ports that are members of the entry.


Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
	Refreshes the displayed table starting from the "Start from MAC address" and "VLAN" input fields.
	Flushes all dynamic entries.
	Updates the table starting from the first entry in the MAC Table, i.e. the entry with the lowest VLAN ID and MAC address.
	Updates the table, starting with the entry after the last entry currently displayed.

2.4.74 VLANs

2.4.75 VLANs Membership


Each page shows up to 99 entries from the VLAN table (default being 20), selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the VLAN Table. The first displayed will be the one with the lowest VLAN ID found in the VLAN Table. The "VLAN" input field allows the user to select the starting point in the VLAN Table.



Clicking the  button will update the displayed table starting from that or the closest next VLAN Table match.

The  will use the last entry of the currently displayed VLAN entry as a basis for the next lookup.



When the end is reached, the text "No data exists for the selected user" is shown in the table. Use


the  button to start over.



VLAN Membership Status for Combined users Combined Auto-refresh 

Start from VLAN with entries per page.  

Port Members										
VLAN ID	1	2	3	4	5	6	7	8	9	10
1	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Object	Description
VLAN User	<p>Various internal software modules may use VLAN services to configure VLAN memberships on the fly.</p> <p>The drop-down list on the right allows for selecting between showing VLAN memberships as configured by an administrator (Admin) or as configured by one of these internal software modules.</p> <p>The "Combined" entry will show a combination of the administrator and internal software modules configuration, and basically reflects what is actually configured in hardware.</p>
VLAN ID	VLAN ID for which the Port members are displayed.
Port Members	<p>A row of check boxes for each port is displayed for each VLAN ID.</p> <p>If a port is included in a VLAN, the following image will be displayed: .</p> <p>If a port is in the forbidden port list, the following image will be displayed: .</p>

	<p>If a port is in the forbidden port list and at the same time attempted included in the VLAN, the following image will be displayed: . The port will not be a member of the VLAN in this case.</p>
--	---

Buttons	
	Select VLAN Users from this drop down list.
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
	Click to refresh the page immediately.

2.4.76 VLANs Ports

This page provides [VLAN](#) Port Status.

VLAN Port Status for Combined users							Combined	Auto-refresh	Refresh
Port	Port Type	Ingress Filtering	Frame Type	Port VLAN ID	Tx Tag	Untagged VLAN ID	Conflicts		
1	C-Port	<input checked="" type="checkbox"/>	All	1	Untag PVID		No		
2	C-Port	<input checked="" type="checkbox"/>	All	1	Untag PVID		No		
3	C-Port	<input checked="" type="checkbox"/>	All	1	Untag PVID		No		
4	C-Port	<input checked="" type="checkbox"/>	All	1	Untag PVID		No		
5	C-Port	<input checked="" type="checkbox"/>	All	1	Untag PVID		No		
6	C-Port	<input checked="" type="checkbox"/>	All	1	Untag PVID		No		
7	C-Port	<input checked="" type="checkbox"/>	All	1	Untag PVID		No		
8	C-Port	<input checked="" type="checkbox"/>	All	1	Untag PVID		No		
9	C-Port	<input checked="" type="checkbox"/>	All	1	Untag PVID		No		
10	C-Port	<input checked="" type="checkbox"/>	All	1	Untag PVID		No		

Object	Description
VLAN User	<p>Various internal software modules may use VLAN services to configure VLAN port configuration on the fly.</p> <p>The drop-down list on the right allows for selecting between showing VLAN memberships as configured by an administrator (Admin) or as configured by one of these internal software modules.</p> <p>The "Combined" entry will show a combination of the administrator and internal software modules configuration, and basically reflects what is actually configured in hardware.</p> <p>If a given software modules hasn't overridden any of the port settings, the text "No data exists for the selected user" is shown in the table.</p>
Port	The logical port for the settings contained in the same row.
Port Type	<p>Shows the port type (Unaware, C-Port, S-Port, S-Custom-Port.) that a given user wants to configure on the port.</p> <p>The field is empty if not overridden by the selected user.</p>
Ingress Filtering	<p>Shows whether a given user wants ingress filtering enabled or not.</p> <p>The field is empty if not overridden by the selected user.</p>

Frame Type	<p>Shows the acceptable frame types (All, Taged, Untagged) that a given user wants to configure on the port.</p> <p>The field is empty if not overridden by the selected user.</p>
Port VALN ID	<p>Shows the Port VLAN ID (PVID) that a given user wants the port to have.</p> <p>The field is empty if not overridden by the selected user.</p>

Tx Tag	Shows the Tx Tag requirements (Tag All, Tag PVID, Tag UVID, Untag All, Untag PVID, Untag UVID) that a given user has on a port. The field is empty if not overridden by the selected user.
Untagged VLAN ID	If Tx Tag is overridden by the selected user and is set to Tag or Untag UVID, then this field will show the VLAN ID the user wants to tag or untag on egress. The field is empty if not overridden by the selected user.
Conflicts	Two users may have conflicting requirements to a port's configuration. For instance, one user may require all frames to be tagged on egress while another requires all frames to be untagged on egress. Since both users cannot win, this gives rise to a conflict, which is solved in a prioritized way. The Administrator has the least priority. Other software modules are prioritized according to their position in the drop-down list: The higher in the list, the higher priority. If conflicts exist, it will be displayed as "Yes" for the "Combined" user and the offending software module. The "Combined" user reflects what is actually configured in hardware.

Buttons	
<input type="text" value="Combined"/> ▼	Select VLAN Users from this drop down list.
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page immediately.

2.4.77 VCL

2.4.78 MAC-Based VLAN

This page shows MAC-based VLAN entries configured by various MAC-based VLAN users. Currently we support following VLAN User types:

CLI/Web/SNMP : These are referred to as static.

NAS : NAS provides port-based authentication, which involves communications between a Supplicant, Authenticator, and an Authentication Server.

Object	Description
MAC Address	Indicates the MAC address.
VLAN ID	Indicates the VLAN ID.
Port Members	Port members of the MAC-based VLAN entry.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Refreshes the displayed table.

2.4.79 sFlow

This page shows receiver and per-port [sFlow](#) statistics.

sFlow Statistics Auto-refresh

Receiver Statistics

Owner	<none>
IP Address/Hostname	0.0.0.0
Timeout	0
Tx Successes	0
Tx Errors	0
Flow Samples	0
Counter Samples	0

Port Statistics

Port	Rx Flow Samples	Tx Flow Samples	Counter Samples
1	0	0	0
2	0	0	0
3	0	0	0
4	0	0	0
5	0	0	0
6	0	0	0
7	0	0	0
8	0	0	0
9	0	0	0
10	0	0	0

Object	Description
Receiver Statistics	

Owner	<p>This field shows the current owner of the sFlow configuration. It assumes one of three values as follows:</p> <ul style="list-style-type: none"> • If sFlow is currently unconfigured/unclaimed, Owner contains <none>. • If sFlow is currently configured through Web or CLI, Owner contains <Configured through local management>. • If sFlow is currently configured through SNMP, Owner contains a string identifying the sFlow receiver.
IP Address/Hostname	The IP address or hostname of the sFlow receiver.
Timeout	The number of seconds remaining before sampling stops and the current sFlow owner is released.
Tx Successes	The number of UDP datagrams successfully sent to the sFlow receiver.
Tx Errors	The number of UDP datagrams that has failed transmission.

	The most common source of errors is invalid sFlow receiver IP/hostname configuration. To diagnose, paste the receiver's IP address/hostname into the Ping Web page (Diagnostics → Ping/Ping6).
Flow Samples	The total number of flow samples sent to the sFlow receiver.
Counter Samples	The total number of counter samples sent to the sFlow receiver.
Port Statistics	
Port	The port number for which the following statistics applies.
Rx and Tx Flow Samples	<p>The number of flow samples sent to the sFlow receiver originating from this port. Here, flow samples are divided into Rx and Tx flow samples, where Rx flow samples contains the number of packets that were sampled upon reception (ingress) on the port and Tx flow samples contains the number of packets that were sampled upon transmission (egress) on the port.</p>
Counter Samples	The total number of counter samples sent to the sFlow receiver originating from this port.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
Refresh	Click to refresh the page.
Clear Receiver	Clears the sFlow receiver counters.
Clear Ports	Clears the per-port counters.

2.4.80 RingV2

This page provides a status overview for all of Ring status.

RingV2 Group Status				
Auto-refresh <input type="checkbox"/> <input type="button" value="Refresh"/>				
Group index	Mode	State	Role	Ring Port(s)
1	Disable	--	Ring(Slave)	--
2	Disable	--	Ring(Slave)	--
3	Disable	--	Chain(Member)	--

Object	Description
Group Index	The group index. This parameter is used for easy identifying which ring group.
Mode	It indicates whether the group is enabled.
Role	It indicates group is configured as which role.
State	When ring is complete, it will show " Normal ". When ring is incomplete (at least one link is down), it will show " Fail ".
Ring Port(s)	Describes current status of ring port(s).

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page.

2.4.81 DDMI Overview

Display [DDMI](#) overview information on this page.

DDMI Overview						
Auto-refresh <input type="checkbox"/> <input type="button" value="Refresh"/>						
Port	Vendor	Part Number	Serial Number	Revision	Date Code	Transceiver
11	Leverage	F413S27431	09072015	A	2009-02-10	1000BASE_LX
12	SANOC	SJ1312-10ATOS	A140335460		2014-03-2700	1000BASE_LX
13	-	-	-	-	-	-
14	-	-	-	-	-	-

Object	Description
Port	DDMI port.
Vendor	Indicates Vendor name SFP vendor name.
Part Number	Indicates Vendor PN Part number provided by SFP vendor.
Serial Number	Indicates Vendor SN Serial number provided by vendor.

Revision	Indicates Vendor rev Revision level for part number provided by vendor.
Date Code	Indicates Date code Vendor's manufacturing date code.
Transceiver	Indicates Transceiver compatibility.

2.4.82 DDMI Detailed

Display [DDMI](#) detailed information on this page.

Transceiver Information

Port 12 ▾ Auto-refresh Refresh

Vendor	SANOC
Part Number	SJ1312-10ATOS
Serial Number	A140335460
Revision	
Date Code	2014-03-2700
Transeiver	1000BASE_LX

DDMI Information

Type	Current	High Alarm Threshold	High Warn Threshold	Low Warn Threshold	Low Alarm Threshold
Temperature(C)	45.688	90.000	85.000	-40.000	-45.000
Voltage(V)	3.2880	3.8000	3.6000	2.9700	2.8000
Tx Bias(mA)	20.192	100.000	70.000	0.000	0.000
Tx Power(dBm)	-6.1296	0.1000	-1.0001	-10.0000	-11.9997
Rx Power(dBm)	-4.8267	0.1000	-1.9997	-26.0205	-28.2390

Object	Description
Transceiver Information	
Vendor	Indicates Vendor name SFP vendor name.

Part Number	Indicates Vendor PN Part number provided by SFP vendor.
Serial Number	Indicates Vendor SN Serial number provided by vendor.
Revision	Indicates Vendor rev Revision level for part number provided by vendor.
Date Code	Indicates Date code Vendor's manufacturing date code.
Transceiver	Indicates Transceiver compatibility.

DDMI Information	
Current	The current value of temperature, voltage, TX bias, TX power, and RX power.
High Alarm Threshold	The high alarm threshold value of temperature, voltage, TX bias, TX power, and RX power.
High Warn Threshold	The high warn threshold value of temperature, voltage, TX bias, TX power, and RX power.
Low Warn Threshold	The low warn threshold value of temperature, voltage, TX bias, TX power, and RX power.
Low Alarm Threshold	The low alarm threshold value of temperature, voltage, TX bias, TX power, and RX power.

Buttons	
Auto-refresh <input type="checkbox"/>	Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
<input type="button" value="Refresh"/>	Click to refresh the page.

2.5 Diagnostics

2.5.1 Ping

This page allows you to issue [ICMP PING](#) packets to troubleshoot [IP](#) connectivity issues.

ICMP Ping

IP Address	<input type="text" value="0.0.0.0"/>
Ping Length	<input type="text" value="56"/>
Ping Count	<input type="text" value="5"/>
Ping Interval	<input type="text" value="1"/>

Object	Description
IP Address	The destination IP Address.
Ping Length	The payload size of the ICMP packet. Values range from 2 bytes to 1452 bytes.
Ping Count	The count of the ICMP packet. Values range from 1 time to 60 times.
Ping Interval	The interval of the ICMP packet. Values range from 0 second to 30 seconds.

<p>Egress Interface (only for IPv6)</p>	<p>The VLAN ID (VID) of the specific egress IPv6 interface which ICMP packet goes. The given VID ranges from 1 to 4094 and will be effective only when the corresponding IPv6 interface is valid.</p> <p>When the egress interface is not given, PING6 finds the best match interface for destination.</p> <p>Do not specify egress interface for loopback address.</p> <p>Do specify egress interface for link-local or multicast address.</p>
--	---

Buttons	
<div style="border: 1px solid #ccc; padding: 5px; width: fit-content; margin: auto;">Start</div>	Click to start transmitting ICMP packets.
<div style="border: 1px solid #ccc; padding: 5px; width: fit-content; margin: auto;">New Ping</div>	Click to re-start diagnostics with PING.

2.5.2 Ping6

This page allows you to issue ICMPv6 PING packets to troubleshoot IPv6 connectivity issues.

ICMPv6 Ping

IP Address	<input style="width: 90%;" type="text" value="0:0:0:0:0:0:0:0"/>
Ping Length	<input style="width: 90%;" type="text" value="56"/>
Ping Count	<input style="width: 90%;" type="text" value="5"/>
Ping Interval	<input style="width: 90%;" type="text" value="1"/>
Egress Interface	<input style="width: 90%;" type="text"/>

Start

ICMPv6 Ping Output

PING6 server ::, 56 bytes of data.

sendto

sendto

sendto

sendto

sendto

Sent 0 packets, received 0 OK, 0 bad

New Ping

Object	Description
IP Address	The destination IP Address.
Ping Length	The payload size of the ICMP packet. Values range from 2 bytes to 1452 bytes.
Ping Count	The count of the ICMP packet. Values range from 1 time to 60 times.
Ping Interval	The interval of the ICMP packet. Values range from 0 second to 30 seconds.
Egress Interface	The VLAN ID (VID) of the specific egress IPv6 interface which ICMP packet goes.

(only for IPv6)	<p>The given VID ranges from 1 to 4094 and will be effective only when the corresponding IPv6 interface is valid.</p> <p>When the egress interface is not given, PING6 finds the best match interface for destination.</p> <p>Do not specify egress interface for loopback address.</p> <p>Do specify egress interface for link-local or multicast address.</p>
------------------------	---

Buttons	
Start	Click to start transmitting ICMP packets.
New Ping	Click to re-start diagnostics with PING.

2.5.3 VeriPHY

Start

Press to run the diagnostics. This will take approximately 5 seconds. If all ports are selected, this can take approximately 15 seconds. When completed, the page refreshes automatically, and you can view the cable diagnostics results in the cable status table. Note that VeriPHY is only accurate for cables of length 7 - 140 meters.

10 and 100 Mbps ports will be linked down while running VeriPHY. Therefore, running VeriPHY on a 10 or 100 Mbps management port will cause the switch to stop responding until VeriPHY is complete.

VeriPHY Cable Diagnostics

Port

Cable Status								
Port	Pair A	Length A	Pair B	Length B	Pair C	Length C	Pair D	Length D
1	--	--	--	--	--	--	--	--
2	--	--	--	--	--	--	--	--
3	--	--	--	--	--	--	--	--
4	--	--	--	--	--	--	--	--
5	--	--	--	--	--	--	--	--
6	--	--	--	--	--	--	--	--

After pressing , following table show up.

Cable Status								
Port	Pair A	Length A	Pair B	Length B	Pair C	Length C	Pair D	Length D
1	OK	189	OK	189	Open	0	Open	0
2	OK	3	OK	3	OK	3	OK	3
3	OK	189	OK	189	Open	0	Open	0
4	OK	189	OK	189	OK	189	Open	0
5	OK	189	OK	189	Cross A	48	Open	0
6	OK	189	OK	189	OK	189	Open	0

Object	Description
Port	The port where you are requesting VeriPHY Cable Diagnostics.
Cable Status	<p>Port:</p> <p>Port number.</p>

	<p>Pair:</p> <p>The status of the cable pair.</p> <p>OK - Correctly terminated pair</p> <p>Open - Open pair</p> <p>Short - Shorted pair</p> <p>Short A - Cross-pair short to pair A</p> <p>Short B - Cross-pair short to pair B</p> <p>Short C - Cross-pair short to pair C</p> <p>Short D - Cross-pair short to pair D</p> <p>Cross A - Abnormal cross-pair coupling with pair A</p> <p>Cross B - Abnormal cross-pair coupling with pair B</p> <p>Cross C - Abnormal cross-pair coupling with pair C</p> <p>Cross D - Abnormal cross-pair coupling with pair D</p> <p>Length:</p> <p>The length (in meters) of the cable pair. The resolution is 3 meters</p>
--	--

Buttons	
<div style="border: 1px solid gray; padding: 5px; display: inline-block;">Start</div>	Click to run the diagnostics.

2.6 Maintenance

2.6.1 Restart Device

You can restart the switch on this page. After restart, the switch will boot normally.

Restart Device

Are you sure you want to perform a Restart?

Buttons	
<input type="button" value="Yes"/>	Click to restart device.
<input type="button" value="No"/>	Click to return to the Port State page without restarting.

2.6.2 Factory Default



You can reset the configuration of the switch on this page. Only the [IP](#) configuration is retained.

The new configuration is available immediately, which means that no restart is necessary.

Factory Defaults

Are you sure you want to reset the configuration to Factory Defaults?

Buttons	
<input type="button" value="Yes"/>	Click to reset the configuration to Factory Defaults.
<input type="button" value="No"/>	Click to return to the Port State page without resetting the configuration.

2.6.3 Software

2.6.3.1 Software Upload

This page facilitates an update of the firmware controlling the switch.

Software Upload

瀏覽...
Upload

Buttons	
<div style="border: 1px solid gray; padding: 5px; width: 100px; margin: 0 auto;">Browse</div>	Go to find the software image and click .
<div style="border: 1px solid gray; padding: 5px; width: 100px; margin: 0 auto;">Upload</div>	After finding the software image, click the button to update firmware. After the software image is uploaded, a page announces that the firmware update is initiated. After about a minute, the firmware is updated and the switch restarts.

Warning: While the firmware is being updated, Web access appears to be defunct. The front LED flashes Green/Off with a frequency of 10 Hz while the firmware update is in progress. **Do not restart or power off the device at this time** or the switch may fail to function afterwards.

2.6.3.2 Image select

This page provides information about the active and alternate (backup) firmware images in the device, and allows you to revert to the alternate image.

The web page displays two tables with information about the active and alternate firmware images.

Note:

1. In case the active firmware image is the alternate image, only the "Active Image" table is shown. In this case, the **Activate Alternate Image** button is also disabled.
2. If the alternate image is active (due to a corruption of the primary image or by manual intervention), uploading a new firmware image to the device will automatically use the primary image slot and activate this.
3. The firmware version and date information may be empty for older firmware releases. This does not constitute an error.

Software Image Selection

Active Image
Image
Version
Date

Alternate Image
Image
Version
Date

Activate Alternate Image
Cancel

Object	Description
Image	The flash index name of the firmware image. The name of primary (preferred) image is <code>image</code> , the alternate image is named <code>image.bk</code> .
Version	The version of the firmware image.
Data	The date where the firmware was produced.

Buttons	
<div style="border: 1px solid gray; padding: 5px 20px; background-color: #e0e0e0; display: inline-block;"> Activate Alternate Image </div>	Click to use the alternate image. This button may be disabled depending on system state.
<div style="border: 1px solid gray; padding: 5px 20px; background-color: #e0e0e0; display: inline-block;"> Cancel </div>	Cancel activating the backup image. Navigates away from this page.

2.6.4 Configuration

2.6.4.1 Save startup-config

Copy *running-config* to *startup-config*, thereby ensuring that the currently active configuration will be used at the next reboot.

Save Running Configuration to startup-config

Please note: The generation of the configuration file may be time consuming, depending on the amount of non-default configuration.

Save Configuration

2.6.4.2 Download

It is possible to download any of the files on the switch to the web browser. Select the file and click

Download Configuration

Download *running-config* may take a little while to complete, as the file must be prepared for download.

Download Configuration

Select configuration file to save.

Please note: *running-config* may take a while to prepare for download.

File Name

- running-config
- default-config
- startup-config

Download Configuration

2.6.4.3 Upload

It is possible to upload a file from the web browser to all the files on the switch, except *default-config*, which is read-only.

Select the file to upload, select the destination file on the target, then click Upload Configuration.

If the destination is *running-config*, the file will be applied to the switch configuration. This can be done in two ways:

- Replace mode: The current configuration is fully replaced with the configuration in the uploaded file.
- Merge mode: The uploaded file is merged into *running-config*.

If the file system is full (i.e. contains the three system files mentioned above plus two other files), it is not possible to create new files, but an existing file must be overwritten or another deleted first.

Upload Configuration

File To Upload

瀏覽...


Destination File

File Name	Parameters
<input type="radio"/> running-config	<input checked="" type="radio"/> Replace <input type="radio"/> Merge
<input type="radio"/> startup-config	
<input type="radio"/> Create new file	<input style="width: 100%;" type="text"/>

Upload Configuration

2.6.4.4 Activate

It is possible to activate any of the configuration files present on the switch, except for *running-config* which represents the currently active configuration.


Select the file to activate and click . This will initiate the process of completely replacing the existing configuration with that of the selected file.

Activate Configuration

Select configuration file to activate. The previous configuration will be completely replaced, potentially leading to loss of management connectivity.

Please note: The activated configuration file will not be saved to startup-config automatically.

File Name
<input type="radio"/> default-config
<input checked="" type="radio"/> startup-config



2.6.4.5 Delete

It is possible to delete any of the writable files stored in flash, including *startup-config*. If this is done and the switch is rebooted without a prior Save operation, this effectively resets the switch to default configuration.

Delete Configuration File

Select configuration file to delete.

File Name
<input checked="" type="radio"/> startup-config

